

# GPS Vehicle tracker (GPS+GSM+SMS/GPRS)


## User Manual (Version 3.0)



- Summary**  
Working Based on existing GSM/GPRS network and GPS satellites, this product can locate and monitor any remote targets by SMS or Internet.  
Overview of the characteristics:  
1).GPS position.  
2).GSM 850/900/1800/1900MHz.  
3).With Shock sensor.  
4).Power-Cut alarm(Optional,need battery inside).  
5).Auto set APN.  
6).Voltage 6-78V.  
7).Oil-cut function(Optional).  
8).ACC alarm(Optional).  
9).Shock alarm  
10).GEO-fence

- Specs**  
1).GSM: 850/900/1800/1900MHz  
2).GPRS: Class12, TCP/IP  
3).Working Voltage: 6-78V DC  
4).Working current:  $\approx 22\text{mA}$  (12VDC)  
5).Working current:  $\approx 12\text{mA}$  (24VDC)  
6).GPS locating time: Cold start  $\approx 38\text{s}$  (Open sky)  
Warm start  $\approx 32\text{s}$   
Hot start  $\approx 2\text{s}$  (Open sky)  
7).GPS Precision: 10m (2D RM)  
8).Working temperature:  $-20^\circ\text{C} \sim -70^\circ\text{C}$   
9).Working humidity: 20%~80%RH  
10).Measurement: 78(L) x 26(W) x 15(H) mm

### 4. My Device

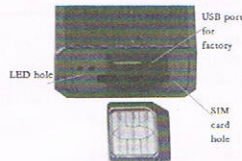

### 5. Device status indicators

- 5.1 Connect DC 6-78V power supply and the red LED will light continuously.
- 5.2 The yellow LED lights continuously when searching the GPS signals. When GPS works, the LED is flashing.
- 5.3 The blue LED lights continuously when searching the GSM signals. When GSM works, the LED is flashing.

### 6. Installation

#### 6.1 Preparation before installation

- 1) Open the packing box to check whether the type of device is correct and whether the accessories are included.
- 2) This product is a high-tech electronic device, installation should be undertaken by a professional.
- 3) Please follow the following procedures to install your device. During installation, there should be no power to the device.
- 6.2 Installing SIM card: each GPS tracker need to insert a GSM SIM card. The SIM card used should be enabled for GPRS.

Please install SIM card before wire connecting.

#### NOTE:

1. Please use sim card which support GSM 2G network for the tracker is GSM 2G device.
2. please pay attention of the sim card installed direction.

#### 6.2 Installation

The GPS tracker must be installed under professional personnel.

#### Note:

- 1) Please install the device in the hidden place as follows:  
Under Front windshield;  
In the front instrument panel;  
Under back windshield;
- 2) Avoid being placed with signal radiators like reverse sensor ;
- 3) The device has GSM antenna and GPS antenna inside. Please ensure the receiving side of the device is face up and without metal cover.


Note: The metal cover will lessen the receiving of GPS signals.

#### 6.3 Selecting installation place and fixing it. There are two kinds of installation: covert and non covert.

If you need the covert installation, please refer installation to an auto electrical contractor.

#### Note:

- 1) To prevent theft of the device, the device should be installed as covertly as possible.
- 2) Avoid placing the device close to higher power electrical devices, such as reversing radar, anti-theft device or other vehicle communication equipment.
- 3) The GPS tracker should be fixed into position with cable ties or wide double-side tape.
- 4) Your device has built-in GSM antenna and GPS antenna. During installation, please make sure the receiving side face is up, with no metal object above the device to interfere with GPS reception. The following places are suggested for installation:

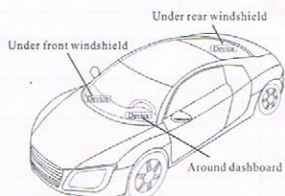

- Under the dash board below the front windshield;
- In the parcel shelf in the rear;
- In the front bumper (non-material face), please ensure the device cannot get wet;
- Under the wiper version (non metal), please ensure the device cannot get wet;

Notice: If the windshield is pasted with metal thermal-protective coating, it may affect the performance of the device. In this case, please change the installation place after consulting the professional.

#### 5) Non Covert Installation,

Firstly fix the device on the dash board below windshield.

- In the parcel shelf in the rear;
- In the front bumper (non-material face), please ensure the device cannot get wet;
- Under the wiper version (non-metal), please ensure the device cannot get wet;

Notice: If the windshield is pasted with metal thermal-protective coating, it may affect the performance of the device. In this case, please change the installation place after consulting the professional.

#### 7. Device wiring requirements

7.1 The device power supply is DC 6-78V. The red line is positive pole while the black line is negative pole.

7.2 The negative pole of power supply connects with ground or the metals. Please do not connect with other ground lines.

7.3 When finishing the power supply wire connection, please make the plug of power supply to the device.

●. 2 Pin wire connection method: The red wire is connected to the positive pole of the power supply, and the black wire is connected to the negative pole of the power supply.


This connection has no illegal start alarm, no remote power off function.

●. 3 Pin wire connection method: The red wire is connected to the

positive pole of the power supply, the black wire is connected to the negative pole of the power supply, and the green wire is connected to the ACC.

This connection has no remote power off function.

#### ●. 4 Pin wire connection method:

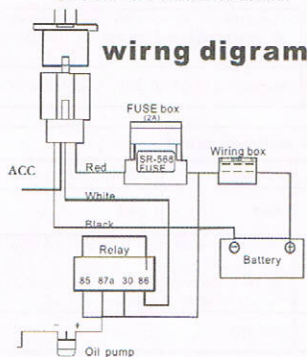

### 8. The Device Working

Put in sim card, connect the wire, the tracker will be working.

### 9. User Setting

#### 9.1 SMS Commands instruction

1) Center Number		
Text command	Parameter	Sample
CENTER Add	710#number#	710#13500135000#
	711#number#	711#13800138000#
CENTER Del	D01#	D01#
	D02#	D02#
Command Description	1) Center number can control the oil and power and resume factory settings.	
	2) Center number can receive the call and text of vibration alarm and over speeding alarm.	
	3) SIM must display the income call number to control oil and power.	
	4) Only one number can be center number.	

	5) Change center number must resend the command.
	6) Add new center number by CENTER, A, and delete by CENTER, D
Command Feedback	Successful Setting: Add admin account 1 OK!

#### 2) View Administrator Number

Text command	Parameter	Sample
View	901#	901#
Command Description	This directive is used to view Device Manager number.	
Command Feedback	Successful Setting: Admin1: Admin2:	

#### 3) Authorized Number Set

Text command	Parameter	Sample
Authorized Add	101# number =	1: 101#13800138000#
	102# number =	2: 102#12345678912#
	103# number =	3: 103#12345678912#
Authorized Del	D11#	D11#
	D12#	D12#
	D13#	D13#
	D13#	D13#
Command Description	1) Authorization number for SMS control oil. 2) only three numbers to set the authorization number 3) change the authorization number needs to delete the previous number	
Command Feedback	Successful Setting: Add Authorization account 1 OK!	

#### 4) View Authorized Number

Text command	Parameter	Sample
View authorized	C10#	C10#
Command Description	This directive is used to view the equipment authorization number	
Command Feedback	Successful Setting: Authorization 1: Authorization 2:	