

Back Pressure Receiver (Rev - 10c)

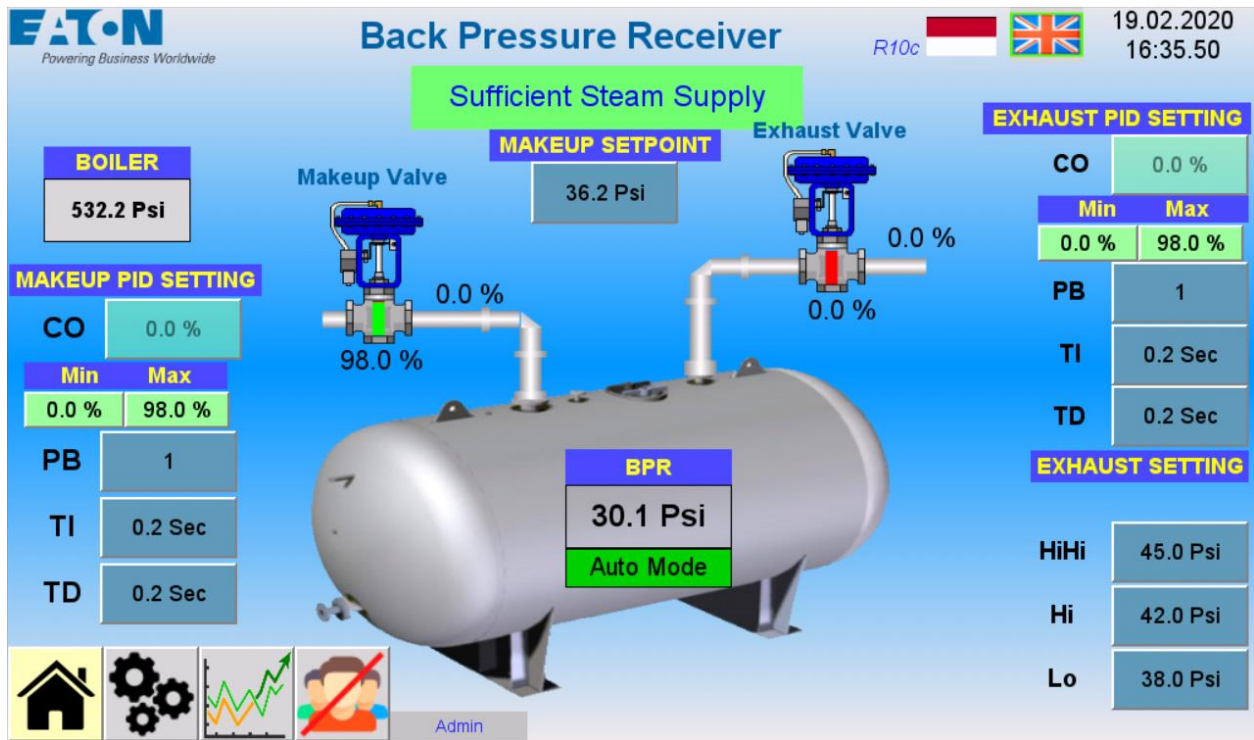


Fig (1) Main Screen



Fig (2) User Login

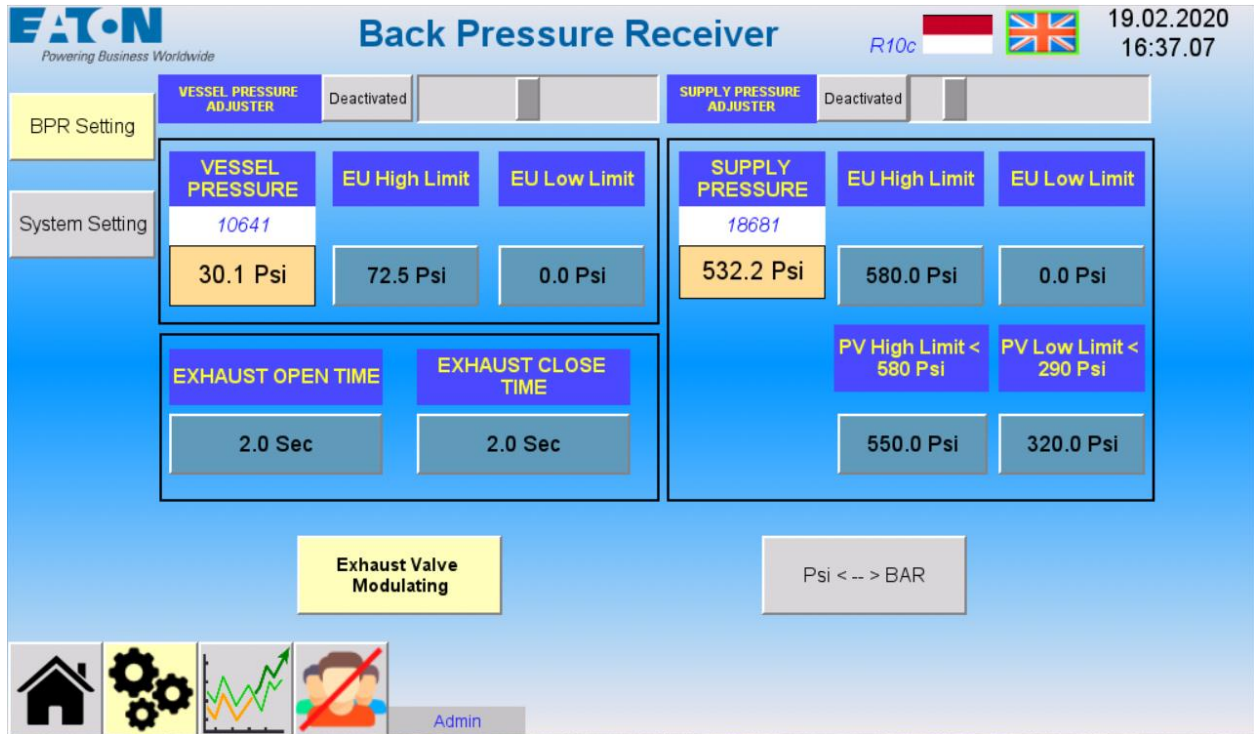


Fig (3a) BPR Setting

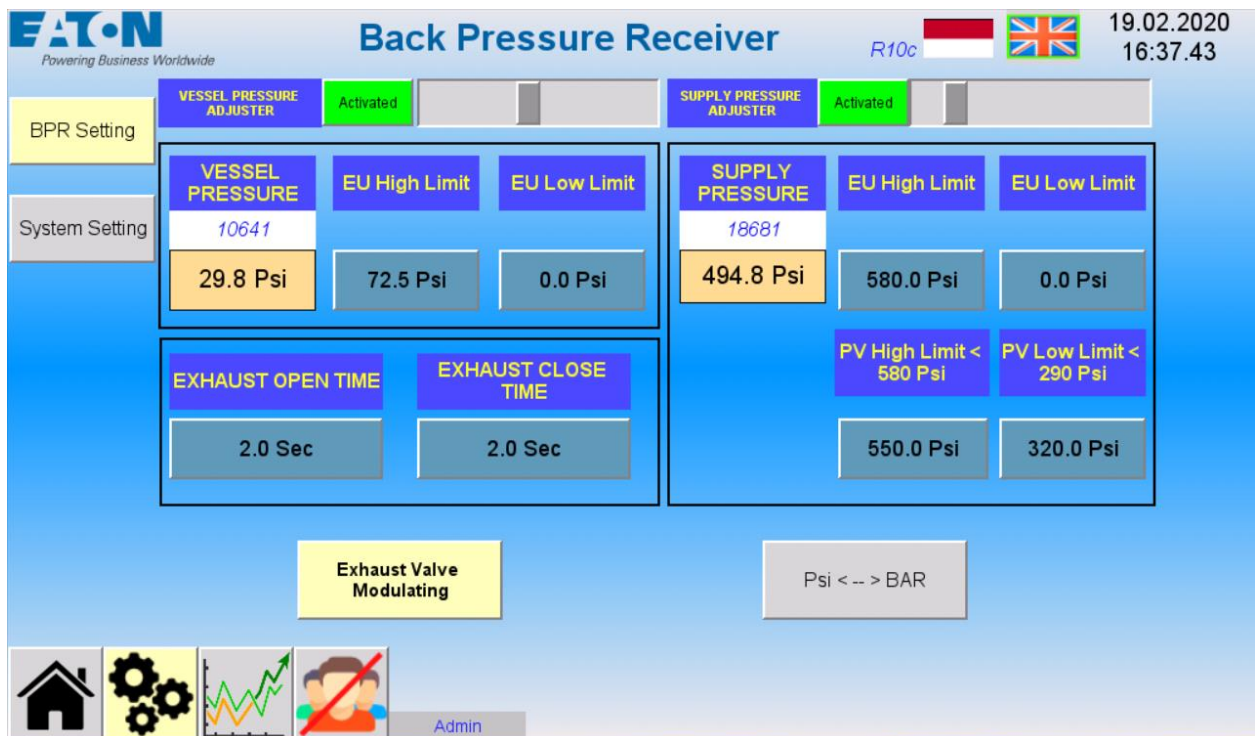


Fig (3b) BPR Setting with Pressure Adjustable function

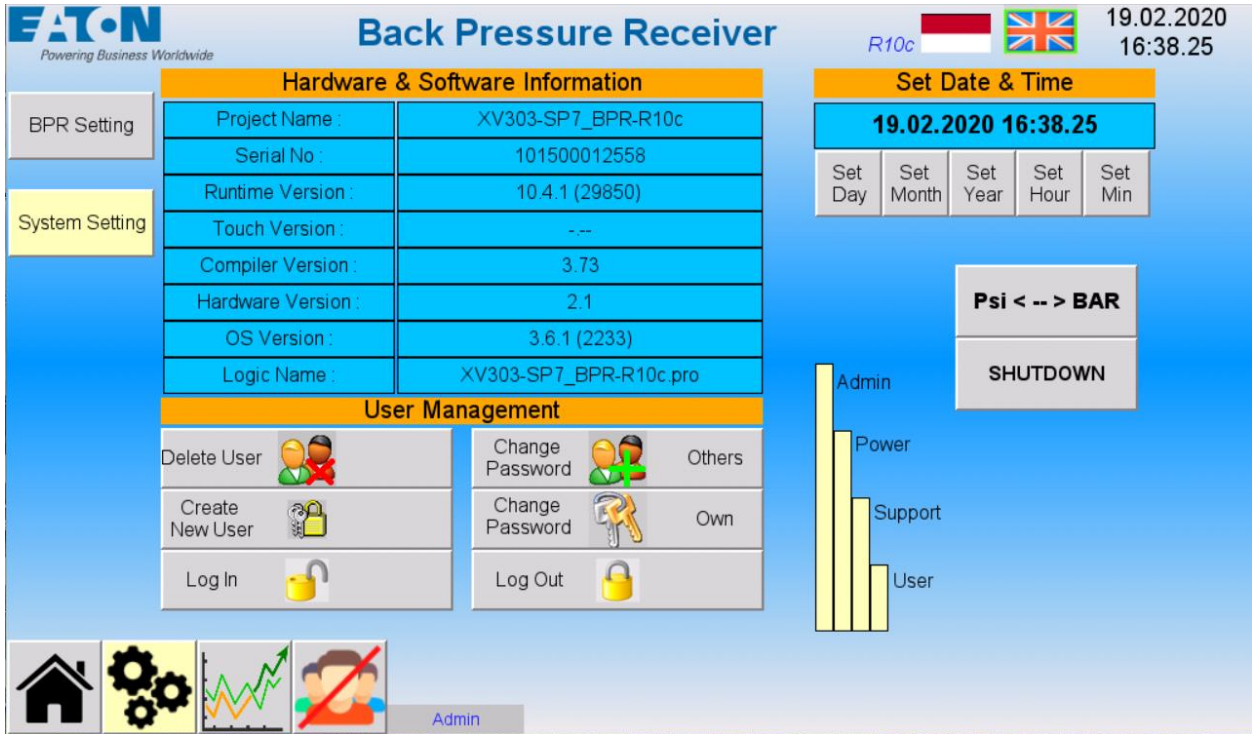


Fig (4) System Setting

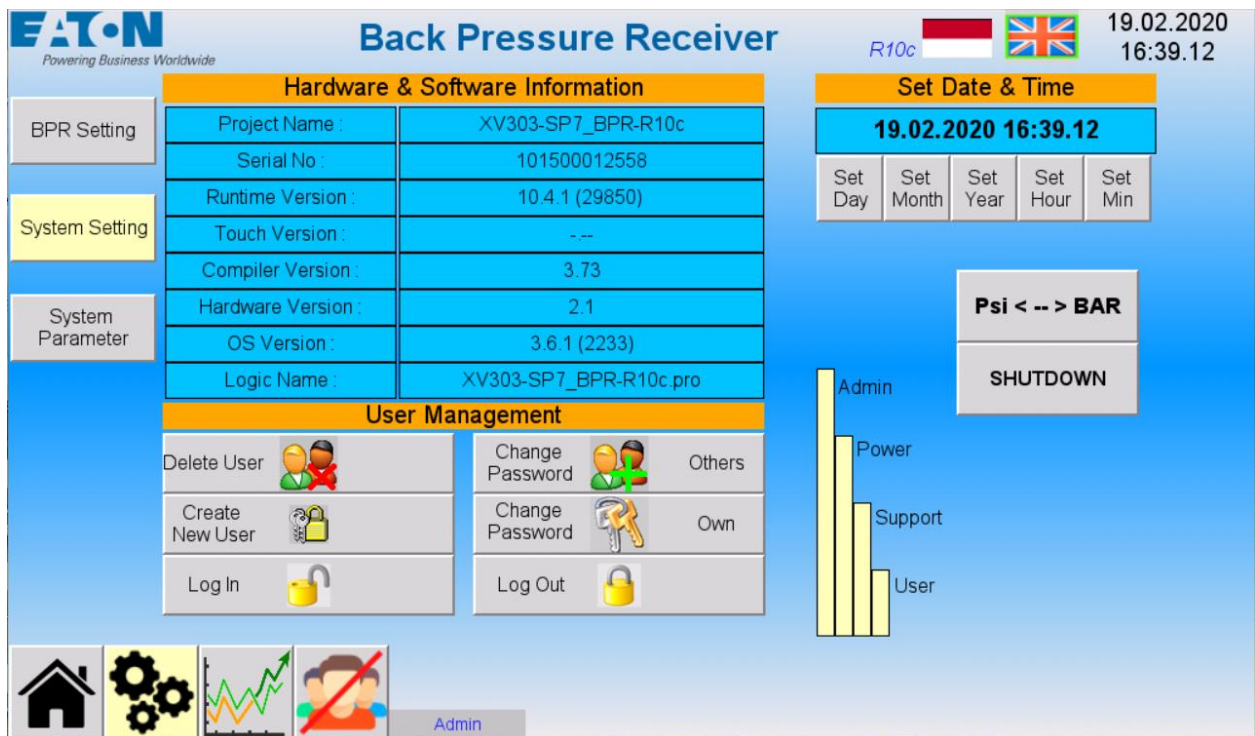


Fig (5) System Parameter Setting (Double click in Eaton Logo)





Fig (6) System Parameter Setting

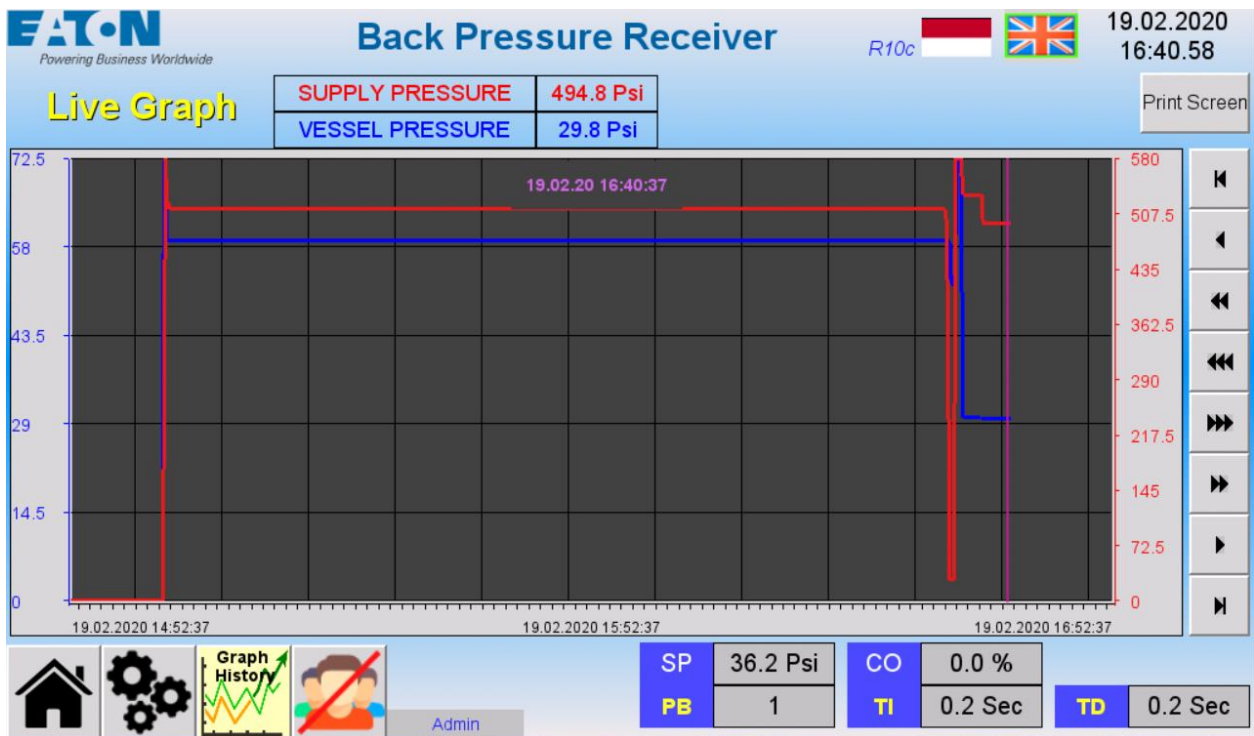


Fig (7) Pressure Live Graph

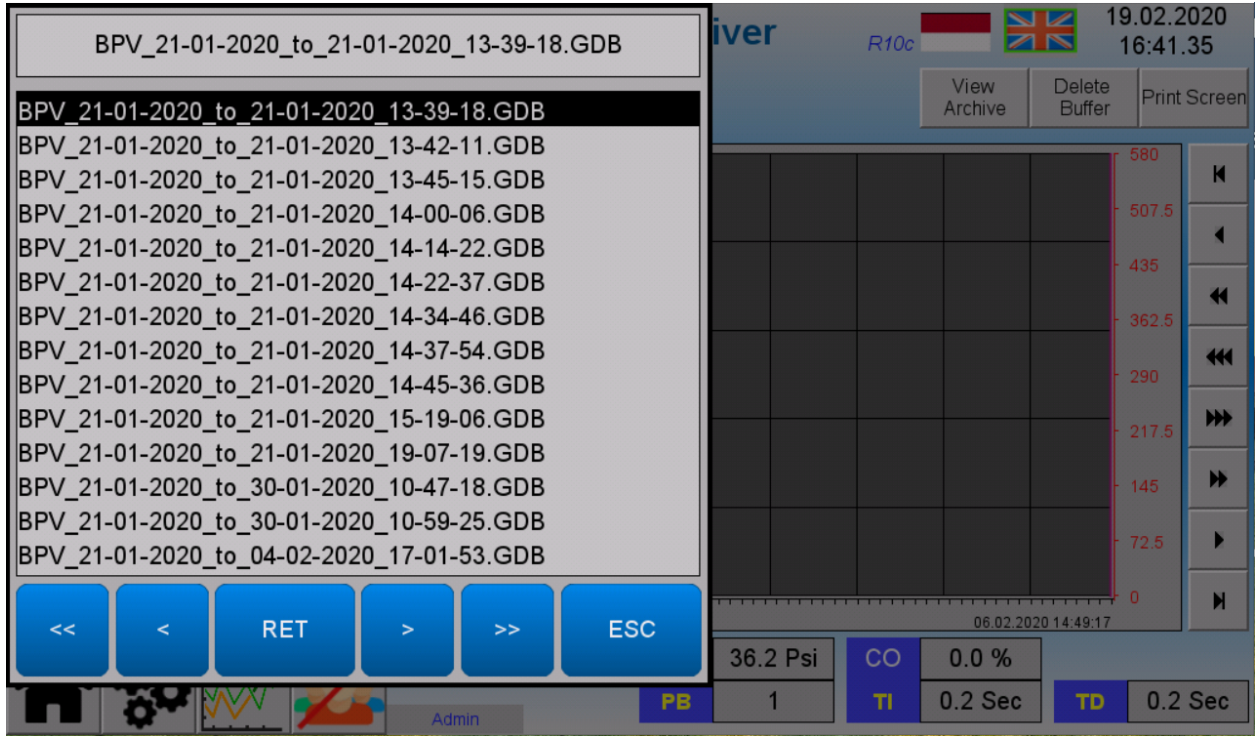


Fig (8) Pressure Graph History files

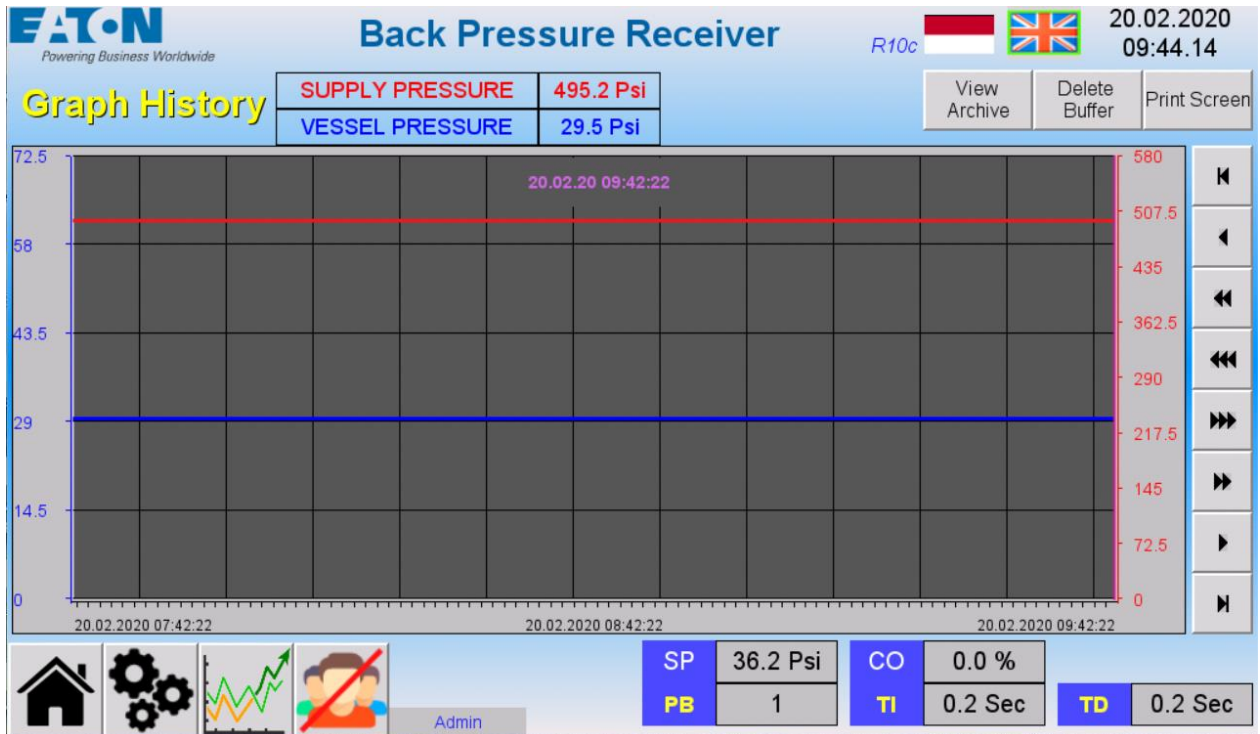


Fig (9) Pressure Graph History

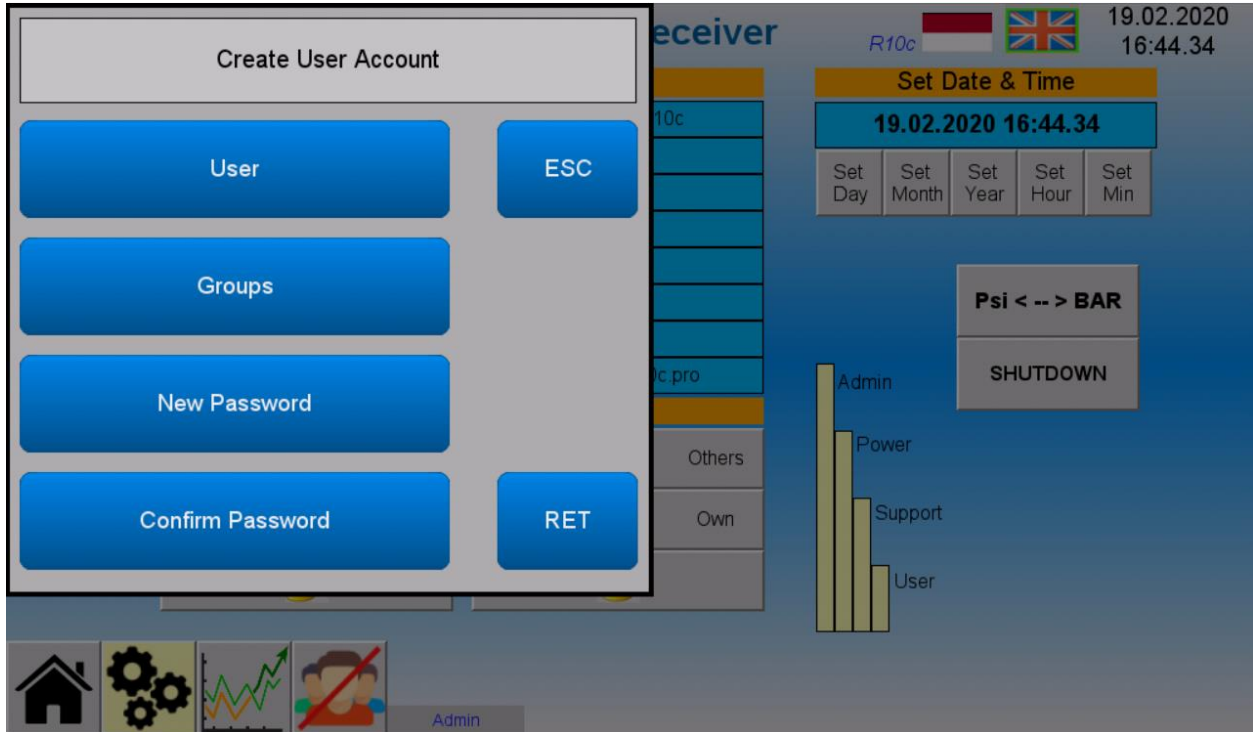


Fig (10) Create User Account

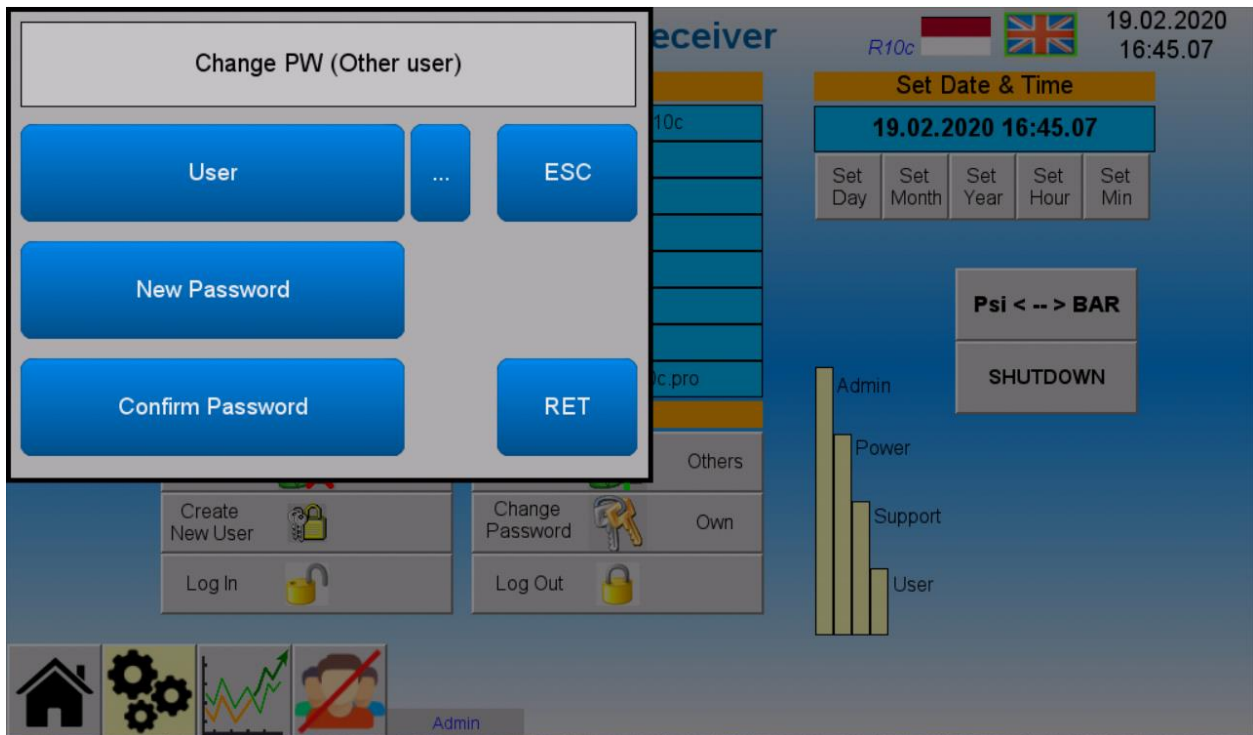


Fig (11) Change Password (other)

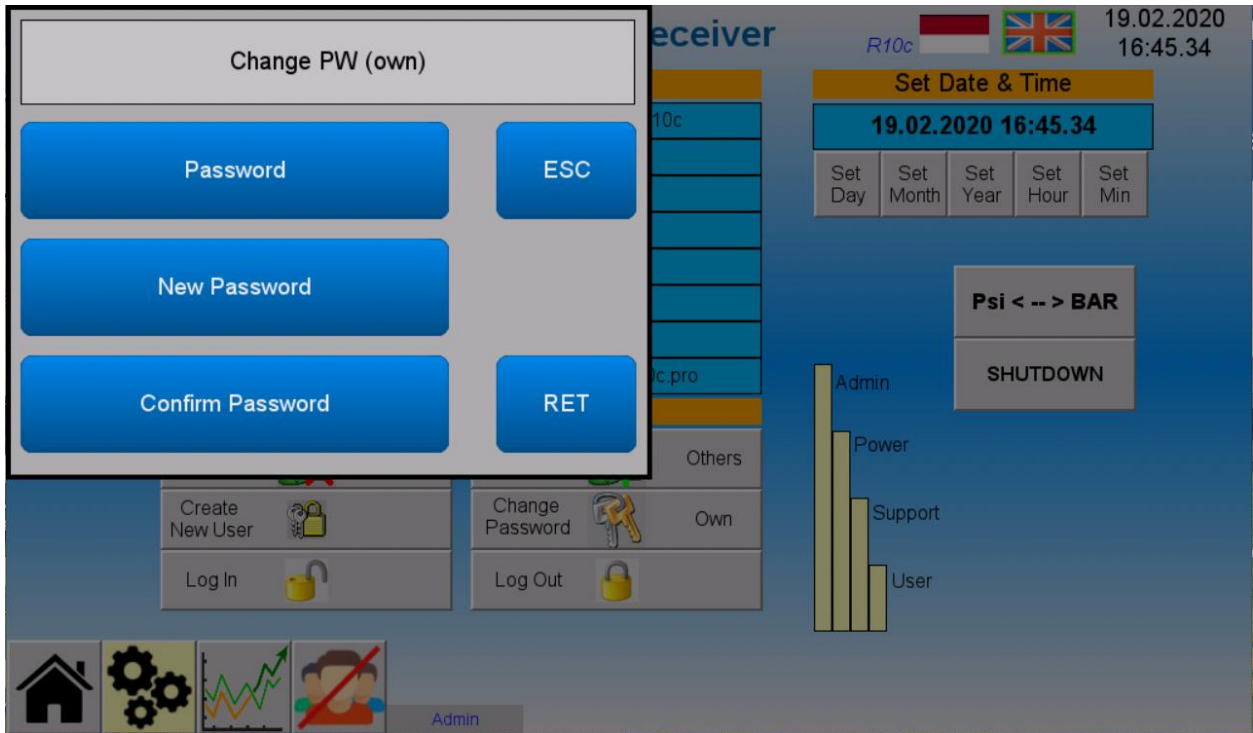


Fig (12) Change Password (own)

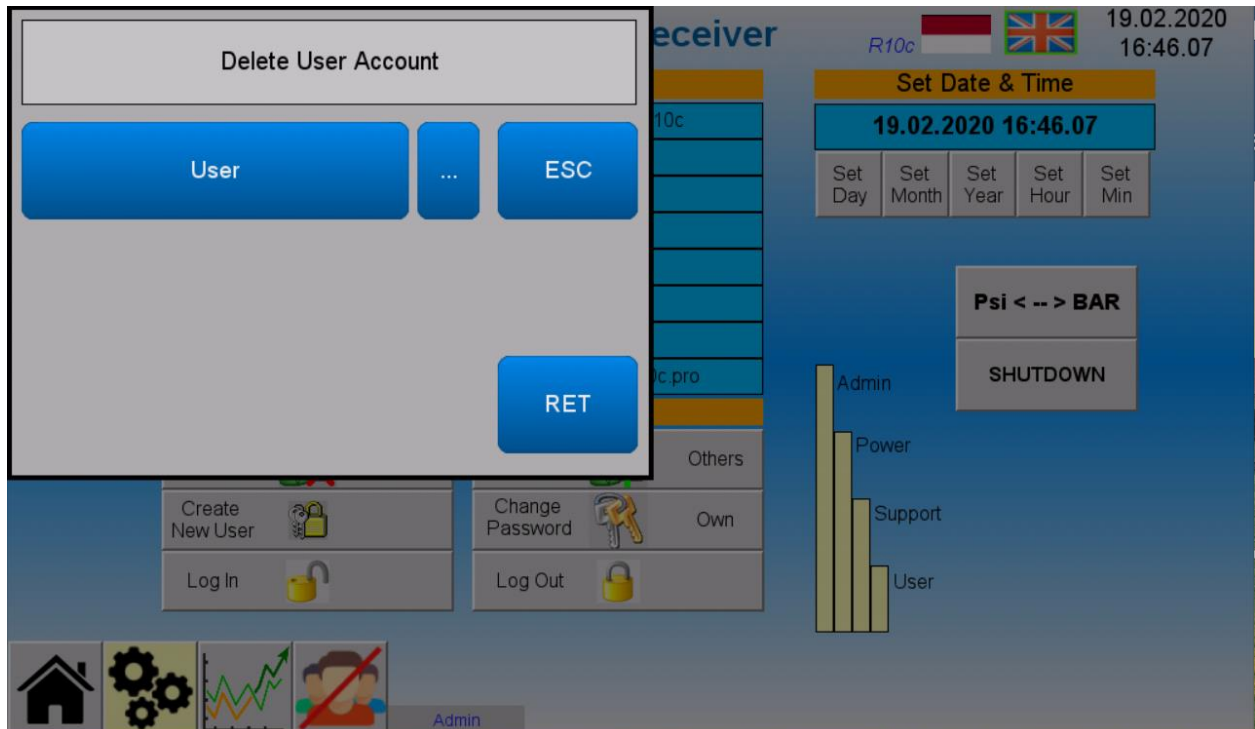


Fig (13) Delete User Account

**Back Pressure Receiver (BPR) Rev: 10c**

- 1) Upgrade from Rev 10b.
- 2) Add in Supply and Vessel pressure adjustable function.

