

iPod-VW Instructions

Connect the iPod to the control module and make sure the iPod is off before the head unit is turned on. Turning on the head unit should turn the iPod on. The iPod will turn on and off with the head unit as long as it is connected. If the iPod does not play within 2 seconds, pressing the "Scan" button (Play/Pause) one or more times should make the iPod play. The iPod may also be operated manually.

- **Standard iPod functions**

Play/Pause: "Scan" button

Previous Track: "Tune <"

Next Track: "Tune >"

There may be slight differences from radio to radio. Try all of the different buttons to discover which functions occur with each.

- **Advanced iPod functions (aka "Mode 4")**

Advanced remote mode is best used when the iPod is placed in an inaccessible location, such as in the trunk or in the glove compartment. This mode most closely simulates an actual CD changer. Press the "Mix" button to place the iPod into advanced remote mode. While in this mode, all of the standard iPod functions still work. The display will now read "OK to Disconnect" and show a check mark. The iPod buttons are not usable in this mode. To return to normal mode, turn the iPod off with the head unit, then disconnect the remote connector. If the iPod will not return to normal mode, hold the "Menu" and center button down together until the iPod restarts.

The following functions are available in advanced mode:

Enter Shuffle Play Mode: "Mix"

(The iPod will pause after this command. Press "Scan" to resume play.)

Exit Shuffle Play Mode: "Tune <"

(The iPod will begin playing the track that is sequentially prior to the track you were playing.)

Go to Main Playlist: "CD1"

Go to 1st Playlist: "CD2"

Go to 2nd Playlist: "CD3"

Go to 3rd Playlist: "CD4"

Go to 4th Playlist: "CD5"

Go to 5th Playlist: "CD6"

- **PLAYLIST MANAGEMENT**

The playlists are numbered in alphabetical order, starting with numbers. If you name your playlists "1", "2", "3", "4", and "5", they are almost certain to be the first 5 playlists. Since iTunes displays the playlists in alphabetical order, the first 5 playlists shown under your iPod will be the 5 to play using the "CD2" – "CD6" buttons.