



Update model
Implement the configuration options specified by the user in the Configuration form by instantiating and connecting objects in the file #library/User/#project/#model.

Instantiate model
Update and instantiate the class #library/User/#project/#model in the model loaded in the active tab of the main panel (here Model1).

Reset configuration
Reset the configuration options to the default values.

Delete model
Delete the class #library/User/#project/#model and all its instances in the model loaded in the active tab of the main panel (here Model1).

This is the view for the Configuration panel if:

- one object is selected in the main panel,
- and the corresponding class contains a model annotation `__Linkage_data(...)` providing the configuration data in a JSON-serialized format (further referred to as #data).

The Configuration panel is populated with the values from #data.
The Library name and Configure new fields are locked.
The Project name can be modified: when clicking Update model this will call a move_class function.
The Model name can be modified: when clicking Update model this will call a rename_class function.
All configuration options can be modified: when clicking Update model this will update the class #library/User/#project/#model.