

# P2PP Palette 3 Setup



## DISCLAIMER

P2PP is a post processing tool that relies on patterns in the gcode generated by PrusaSlicer in order to insert the required GCODE for the Palette 2 operation. Due to the vast amount of settings in PrusaSlicer it CANNOT be guaranteed that all combinations of settings will produce output that print as intended. P2PP and its developer cannot be held responsible for any damage occurring from using this tool. Use at your own risk

## Table of Contents

<b>Readme 1<sup>st</sup>...and if necessary twice!!!</b>	<b>4</b>
<b>Setting up the P2PP Script</b>	<b>5</b>
Windows	5
MAC OSX	6
<b>PrusaSlicer configuration</b>	<b>7</b>
<b>Basic configuration</b>	<b>7</b>
Put PrusaSlicer in EXPERT mode	7
Define the number of extruders (you may have to repeat this for different profiles)	7
Tower setup	8
Filament Setup	9
Layer Configuration	11
<b>Printer Configuration</b>	<b>12</b>
<b>Script Configuration in PrusaSlicer</b>	<b>12</b>
<b>Palette 3 processing configuration -</b>	<b>13</b>
Palette 3 or Palette 3 Pro	13
Printer Profile – PRINTERPROFILE	13
<b>Splice Configuration</b>	<b>14</b>
Splicing Offset – SPLICEOFFSET	14
Minimal Splice Lengths MINSPLICE/MINSTARTSPLICE	14
Extra filament at the end of the print – EXTRAENDFILAMENT	15
Linear Ping setting – LINEARPINGLENGTH	15
Limiting the purge speed – PURGETOPSPEED	15
<b>Splicing Algorithms</b>	<b>16</b>
<b>Special Features</b>	<b>18</b>
<b>Absolute Extrusion</b>	<b>18</b>
<b>Side Wiping</b>	<b>19</b>
Bed Side Purge	19
Stationary Side Wipe (as of v5.2.0)	20
Big Brian 3D Purge Mechanism	20
Tower Delta	23
<b>Full Purge Reduction</b>	<b>24</b>
<b>Accessory Mode [still under development]</b>	<b>24</b>
P2 Accessory Mode	25
Palette + Accessory Mode	25
<b>Temperature Control (Thanks to J. Giesser for the suggestion) version 4.12.0</b>	<b>25</b>
<b>Non-Print related settings</b>	<b>26</b>
SAVE UNPROCESSED GCODE (as of version 4.13.0)	26
CHECKVERSION	26
CONSOLEWAIT	26
IGNOREWARNINGS	27
DEBUGTCOMMAND	27
<b>Purge/Wipe length</b>	<b>27</b>
<b>KLIPPER firmware</b>	<b>28</b>
<b>Running P2PP</b>	<b>29</b>

<b><i>Troubleshooting</i> .....</b>	<b>31</b>
<b><i>Appendix A. P2PP Parameters and default values</i> .....</b>	<b>32</b>

## Readme 1<sup>st</sup>...and if necessary twice!!!

P2PP offers a lot of nice 3d printing support features to for your Palette 3(Pro), but it is important to understand that no tool will ever produce good results when the hardware is not correctly setup and calibrated.

So:

- Make sure your printer is capable of successfully printing single color 3d prints. Sounds silly but if the models you print in one color do not express the desired quality...why would you expect multi colored ones to do so?
- Make sure the extruder is properly calibrated... P2 relies on the gcode defined filament consumption to be the same as the actual filament consumption... any deviation may result in color swaps, early or late transitions, color smear ... P2 is a clever device which will try to correct up to a certain level of error but the responsibility with keeping the error low is with the end user.
- More importantly even than the correctness of the amount of filament used is the consistency in filament use. First layers should be well calibrated. The filament flow should be fully unobstructed so no short bends in the feed tube.
- Follow the P2 calibration process using the Mosaic Mfg suggested prints using the Mosaic supplied slicing tools. Though they can be achieved using P2PP, when new it is a safer bet to use Canvas or Chroma
- P2 learns to work with your printer over the course of a few prints. Once they are calibrates, you should receive consistent prints. It is important to remember that doing a significant change to your printer (e.g. changing the number of steps per mm for your extruder) WILL impact the collaboration between palette and printer and new calibration will be needed.


**Start simple...** P2PP and PrusaSlicer offer a large interesting features, but before swimming across the Atlantic, try getting on the other side of the pool... no kidding... Try to work from a profile you know works in single color on your printer, only when basic multi-color printing is working, turn to features like the tower delta, side wipe, wipe to infill etc.... it is tempting, but most of troubleshooting will link back to the success of simple things... You will probably lose more than the amount of material you are trying to save

# Setting up the P2PP Script

## Windows

Follow the instructions on the p2pp github Wiki page.  
For P3 support download version 8.00.xx or higher.

Double click the P2PP.exe and you will get a screen like the following:

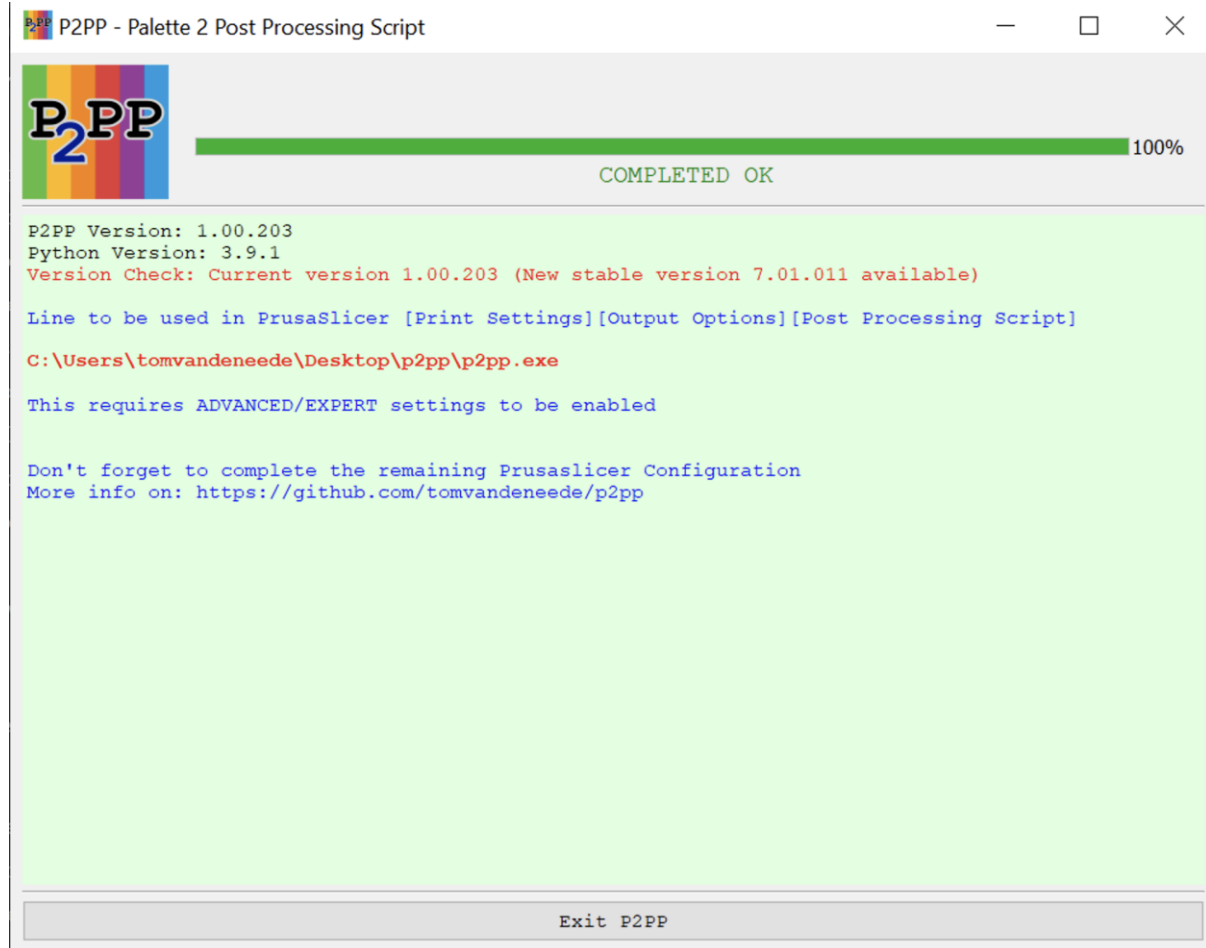

Note the text in bold red – you will need this for later configuration of the actual script

Congratulations... you have completed the first step of the installation... you can move on to the section on PrusaSlicer configuration

## MAC OSX

Follow the instructions on the p2pp github Wiki page.  
For P3 support download version 8.00.xx or higher.

Start the P2PP app and you will get a screen like the following:



Note the text in bold red – you will need this for later configuration of the actual script


Congratulations... you have completed the first step of the installation... you can move on to the section on PrusaSlicer configuration

# PrusaSlicer configuration


## Basic configuration

Put PrusaSlicer in EXPERT mode

There should be 3 buttons labeled Simple/Advanced/Expert in the top right corner of the PrusaSlicer window. Click on the Expert button and confirm that it is highlighted like shown in the picture below:

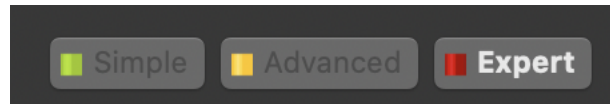


Alternatively, you can also set expert mode using the normal menu settings

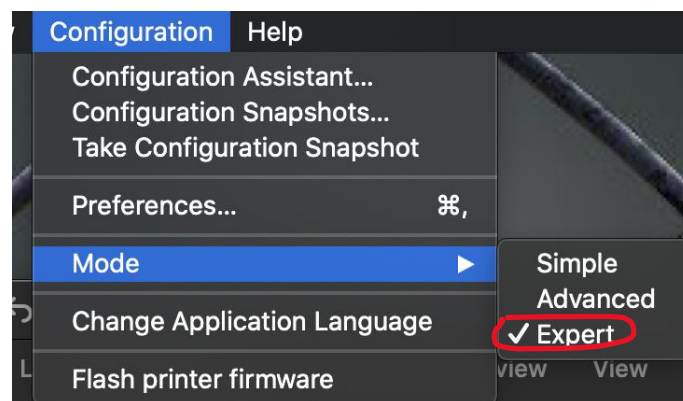


Define the number of extruders (you may have to repeat this for different profiles)

*Set the number of extruders to 4 (or 8) / enable "Single Extruder Multi Material" :*

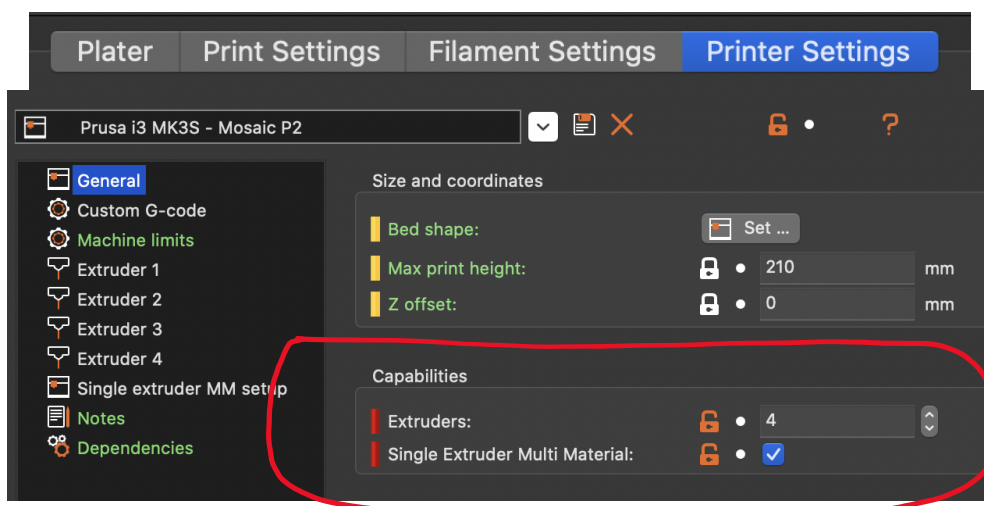


*Set all parameters under Single extruder MM setup to zero*

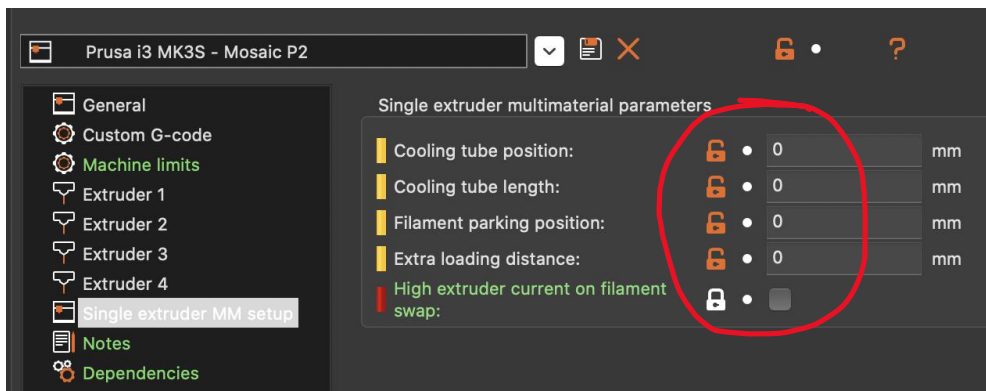


### Extruder1/2/3/4 (5/6/7/8) settings:

Make sure the settings of each of the 4 extruders are set correctly. For now the Lift Z cannot be 0. If you don't want a lift Z on retraction, put in a low value (like 0.05) Settings for retraction when the tool is disabled are not used.

You can also set the extruder color here. This is the color that will be shown on the Palette screen during the loading process. The color can also be set from the plater interface.

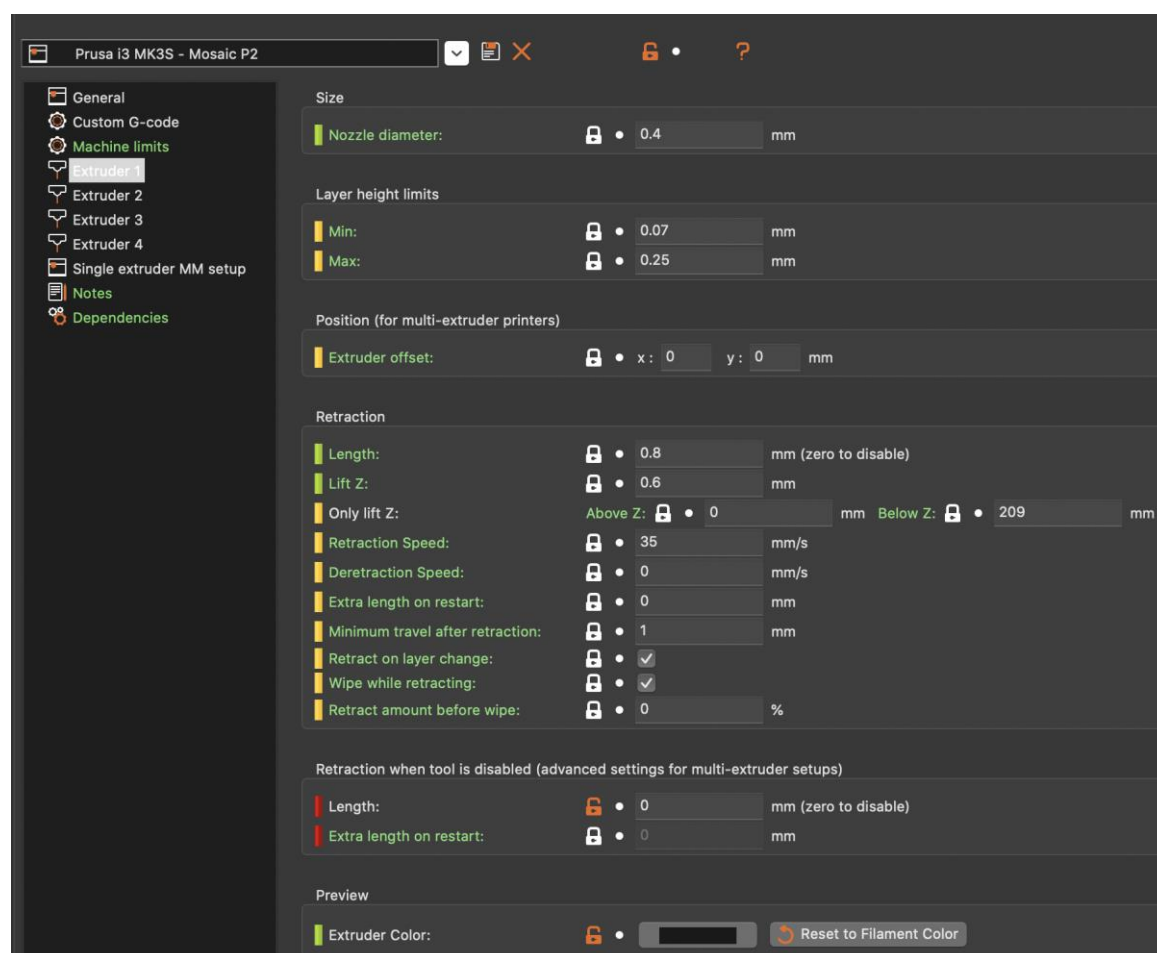


### Tower setup

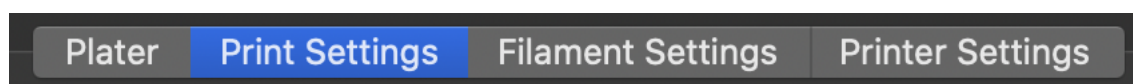




Keep the wipe tower rotation angle set to 0 for proper operation. Width can be specified here. The location can be set later by dragging the tower during the splicing process.

Ooze prevention does NOT apply because ze use a single extruder only.

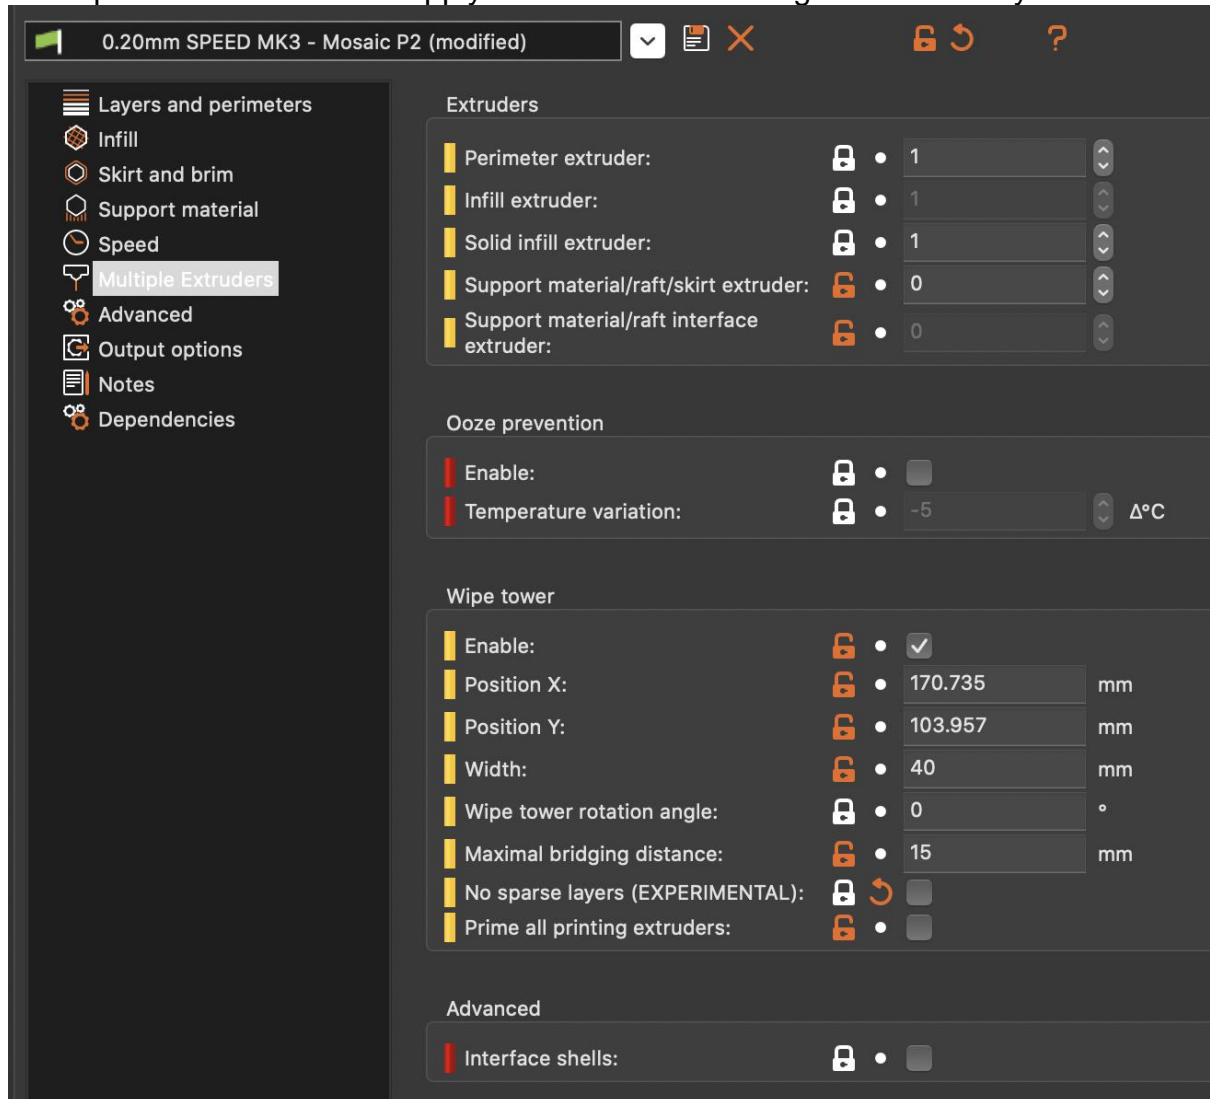



## Filament Setup

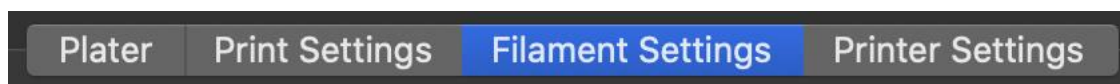

This step should be repeated for EVERY filament type you want to use with your Palette 2

First step is to set all ramming parameters to 0 as well as all of the tool change and wipe tower related settings under the advances tab of your filament.

Note the filament type (here PLA) listed in the dropdown box. This is the reference to the filament that will later be used when creating splicing algorithms to tell Palette 2 how much heat/compression/cooling will be required to splice this filament together to other types of filament.


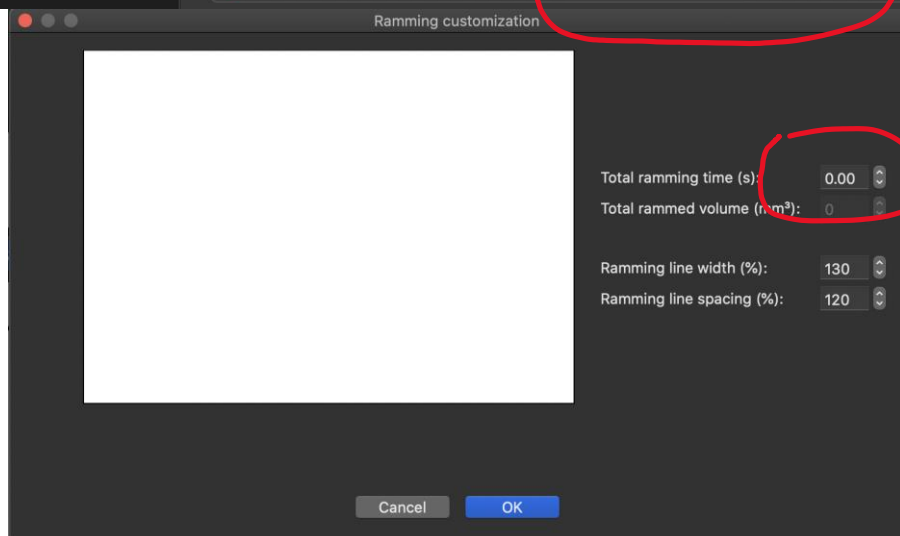
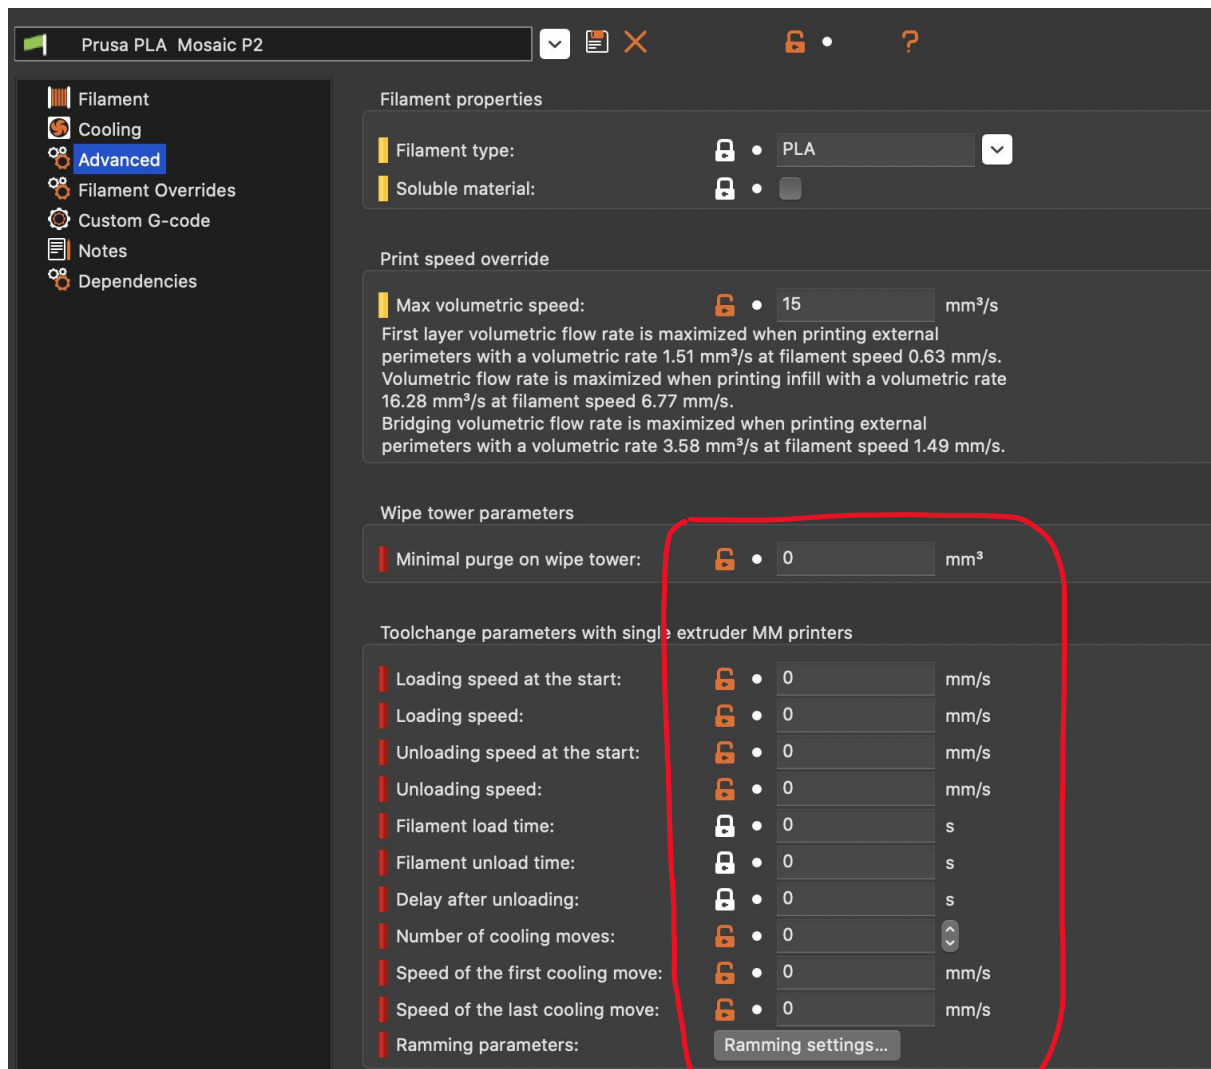


## Layer Configuration

For some of the features P2PP will need to know which features are linked to a particular layer. Therefor a very specific layer setup is required to make sure this information is captures correctly

Make sure that the following code appears in the After layer change G-Code (copy this literally) (as of version 4.0.4 the extra LAYERHEIGHT is required):


```
;AFTER_LAYER_CHANGE  
;LAYER [layer_num]  
;LAYERHEIGHT [layer_z]
```

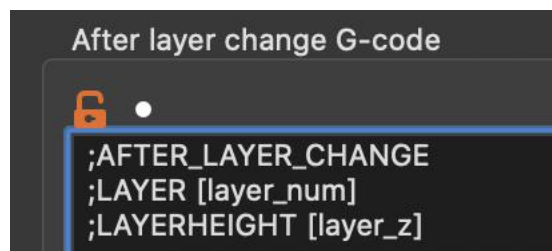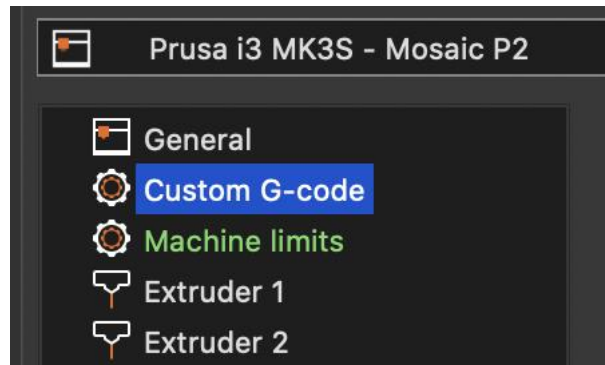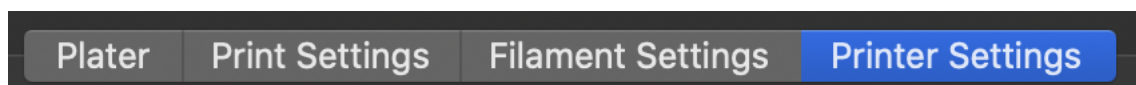

## Printer Configuration

All basic configuration goes into the **Printer Settings** → **Custom G-Code** → **Start G-Code**


You can group all P2PP config settings at the end of your normal start g-code.

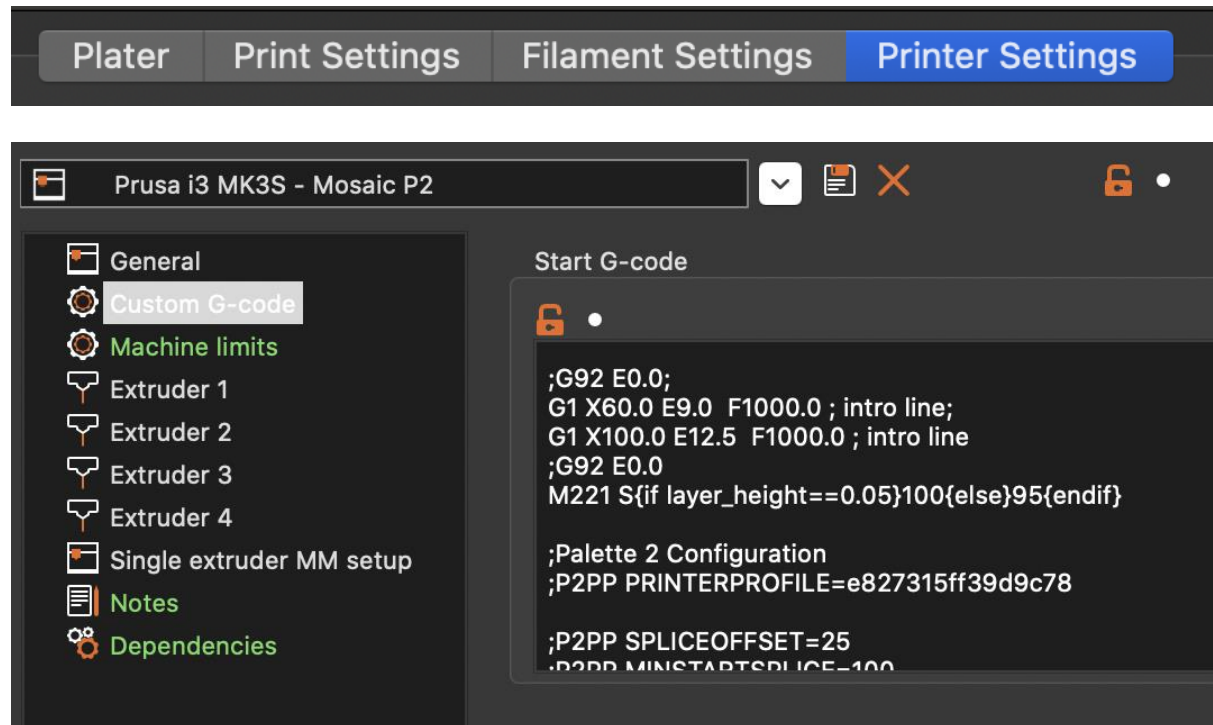


All settings will be prefixed by ;P2PP followed by a parameter name and a setting. Note that all P2PP configuration is considered **CaSe SeNsItIvE!!!**

## Script Configuration in PrusaSlicer

Next thing to do is to configure the P2PP script in PrusaSlicer

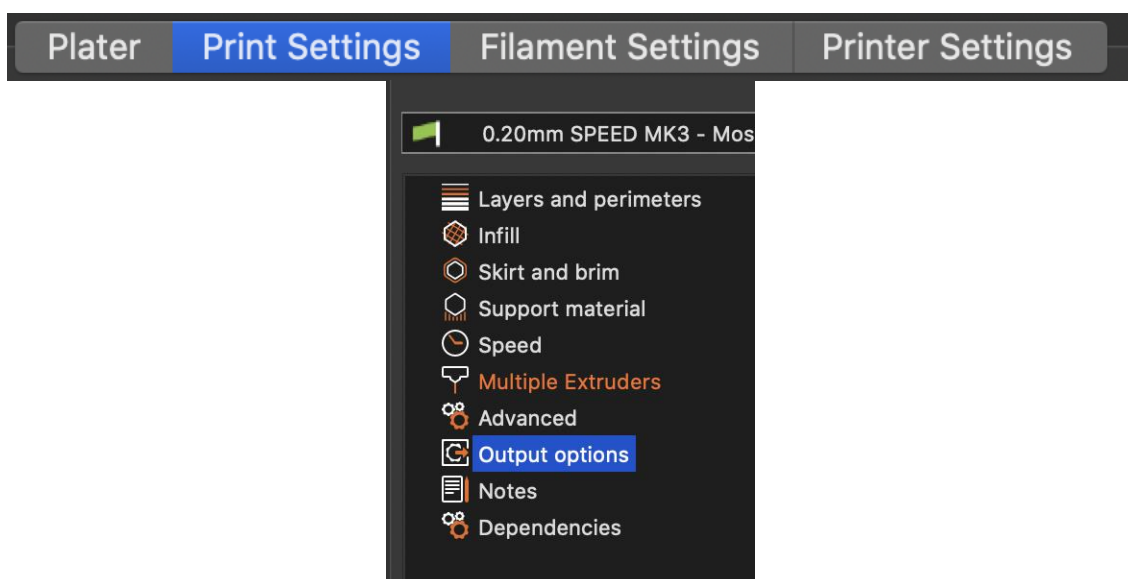

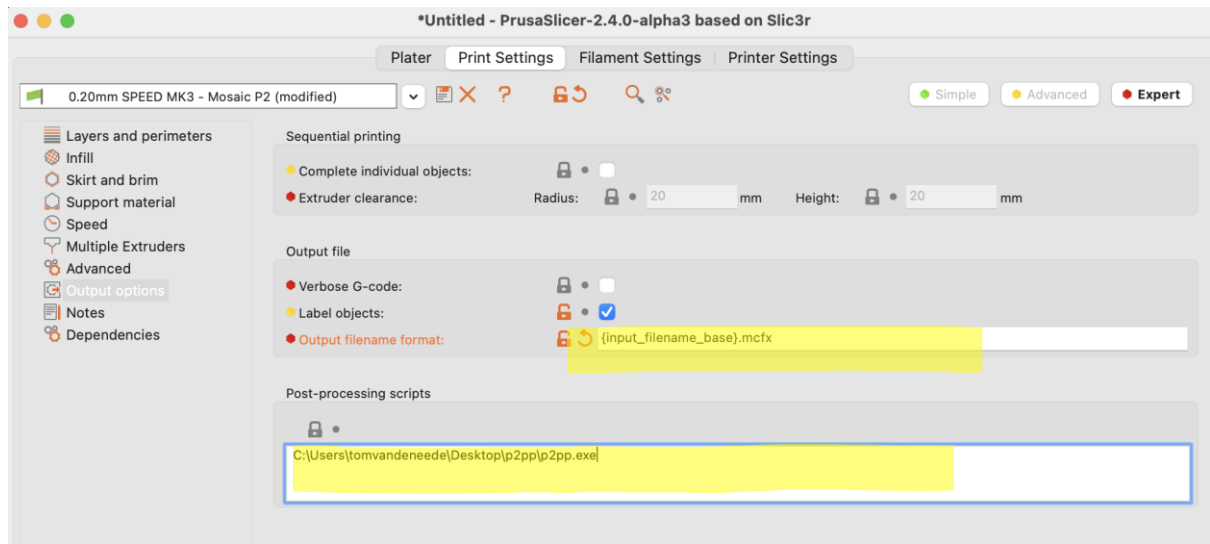

You have to specify 2 pieces of information here

- File name template. You can use the current template but it may be interesting to add the .mcfx instead of gcode. This has no functional purpose but it will help you discriminate between P2 and non-P2 prints in the canvas hub overview.
- On the post processing script tab you will need to copy the full path of the script. This information (bold red line) you got at the very beginning when first launching P2PP.

## Palette 3 processing configuration -

### Palette 3 or Palette 3 Pro

Either add one of the following lines at the very beginning of your startup gcode configuration BEFORE ANY OTHER P2PP instruction:

```
;P2PP PALETTE3
```

or

```
;P2PP PALETTE3_PRO
```


## Printer Profile – PRINTERPROFILE

The printer profile is the unique ID that is linked to a calibration set in your P3(pro). It will determine the loading length, palette 3 specific calibration as well as the long-term historic learning factor associated to your printer/palette2 combination. You can make up your own 32-digit hex decimal value

In the start g-code file should get exactly 1 line with a printer profile configuration  
You can choose not to add a printer profile and use the P2PP default BUT you will receive a warning (that can be ignored)

```
;P2PP PRINTERPROFILE=12345678901234567890123456789012
```

## Splice Configuration

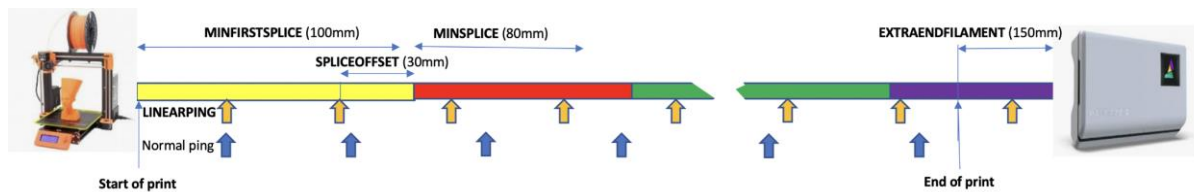

- SPLICEOFFSET
- MINFIRSTSPlice
- MINSPLICE
- EXTRAFILAMENT
- LINEARPINGLENGTH

## Splicing Offset – SPLICEOFFSET

Spliceoffset defines the amount of extra filament that is added to the first splice. It will force the color swap further into the purge. As a result, when a color change occurs, the printer will still continue to print in the old color for the amount defined in the spliceoffset parameter. This gives the print a small buffer in case more filament was consumed than foreseen. Making the offset too small may result in early transition. On the other hand but printing in the old color during the purge sequence, you remove that amount from the overall purge so if you make spliceoffset too large you will end up having color bleeding or late color transitions. 34-40 seems to be a good value. The value is specified in millimeter

```
;P2PP SPLICEOFFSET=40
```

## Minimal Splice Lengths MINSPLICE/MINSTARTSPlice

The length of splices that can be generated by the Palette 2 is limited to 100mm for the first splice and 80mm for consecutive splices. The values can be brought down slightly at your own risk. It is good practice to leave them to the default values.

```
;P2PP MINSTARTSPLICE=130  
;P2PP MINSPLICE=90
```

### Extra filament at the end of the print – EXTRAENDFILAMENT


Depending on the setup of your printer you may need to add an extra length of filament to make sure the filament is driven by the filament motor until the very end of the print. On a direct drive a value of 100 to 150mm should probably be sufficient, on Bowden printers where the extruder motor is further away from the extruder, longer lengths are needed.

Note: the extra filaments. This parameter is specified in millimeter.

```
;P2PP EXTRAENDFILAMENT=150
```

### Linear Ping setting – LINEARPINGLENGTH

**Normal ping** – distance between the pings increases throughout the print. Each next ping distance is approx. 3% longer than the previous. The first ping occurs after 350mm of printing. This can result in less strict filament consumption in later stages of the print. Each ping is represented by ↓ in the diagram below

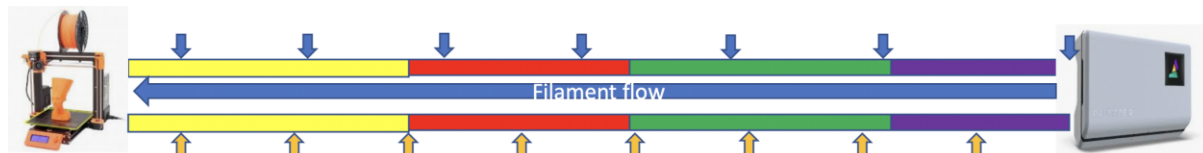

**Linear ping** – distance between the pings stays constant throughout the entire print. The distance between pings can be defined by the user. The parameter should be specified in millimeter. The default distance is 350mm. Each ping is represented by ↑ in the diagram below

```
;P2PP LINEARPINGLENGTH=350
```

### Limiting the purge speed – PURGETOPSPEED

If you are using the PrusaSlicer generated tower code in unprocessed mode or in tower delta mode you may find the purge tower is printed too fast. You can prevent this add the PURGETOPSPEED (in mm/min) to limit the speed at which purge is printed.

## Splicing Algorithms

One of the most important settings is the definition of how splices should be generated. Splices are defined by 3 numbers


- Heating
- Compression
- Cooling

A default splice has 3 numbers you can tune the settings for your material. The numbers can be obtained using the standard splicing tuning process as defined by Mosaic Mfg. They represent the heating, compressing and cooling factor.


It is good practice to put all of your splicing algorithms into the g-code startup sequence. This will prevent surprises when mixing materials later on.




P2PP supports 2 ways to define your splices:

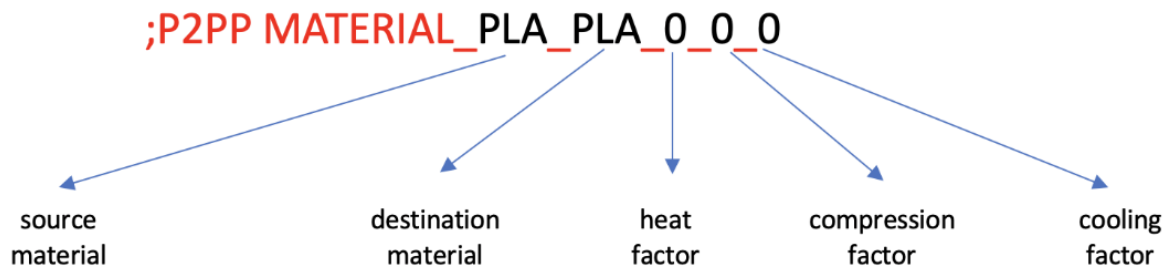

First way is to describe the heat/compression/cooling factor for a splice between two materials. The name of the material (in this case PLA) is taken from the filament type defined in the filament descriptors within PrusaSlicer:

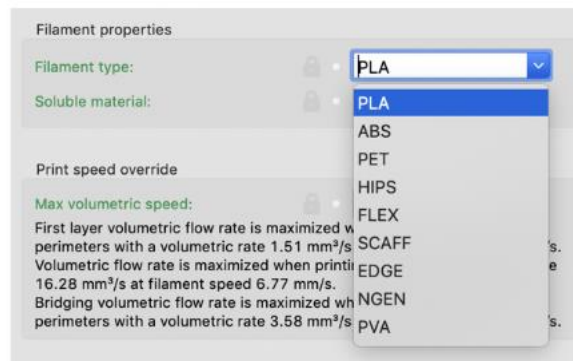

It is possible to define a default splice setting just in case no appropriate splice setting is defined.

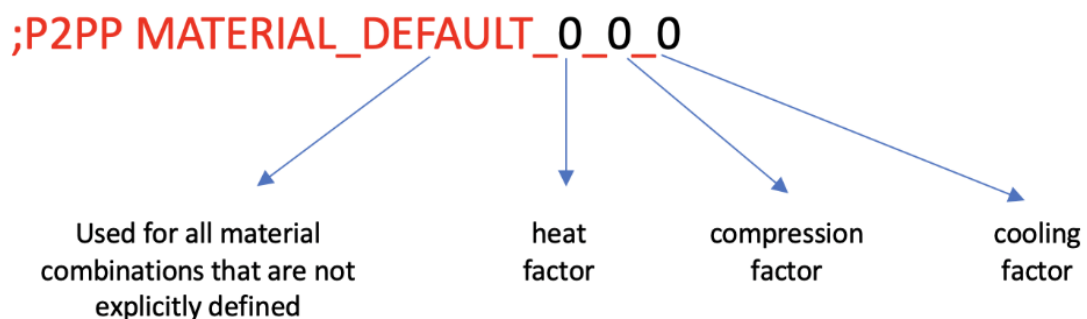

This sets the default splice values in case no splicing algorithm is defined for 2 materials used in the print. P2PP will default to this process any time materials are fused that have no specific splice definition.

In some cases the same material could require slightly different settings. In that case you can apply a filament override. This is done by adding the following line to the filament custom startup GCODE. Add a line as follows (in this case we define a new filament name PLA2)

```
;P2PP FILAMENTOVERRIDE=PLA2
```

This will tell P2PP to use PLA2 instead of the standard material taken from PrusaSlicer. You can then refer to PLA2 in your splicing algorithms

Eg:

```
;P2PP MATERIAL_PLA_PLA_0_0_0  
;P2PP MATERIAL_PLA_PLA2_-1_0_0  
;P2PP MATERIAL_PLA2_PLA_0_0_0
```

## Special Features

Feature Compatibility Matrix

	TOWER DELTA	FULL PURGE REDUCTION	SIDE WIPE	SIDE WIPE Big Brain
ABSOLUTE	X	X	X	X
TOWER DELTA	X	FULL PURGE	SIDE WIPE	SIDE WIPE
FULL PURGE REDUCTION	FULL PURGE	X	SIDE WIPE	SIDE WIPE
SIDE WIPE	0	SIDE WIPE	SIDE WIPE	SIDE WIPE
SIDE WIPE BIG BRAIN	0	SIDE WIPE Big Brain	SIDE WIPE Big Brain	X
SKIRT	X	X	0	0
AUTOADDPURGE		X	X	X
TEMPERATURECONTROL	X	-	-	-

(\*) SIDE WIPE is triggered by the position of the purge tower. This position is incompatible with all the other purging modes

(\*) X = can be combined 0 = incompatible

(\*) if two features are active the table shows which feature takes precedence. The other feature will be discarded

## Absolute Extrusion

During the gcode generation process in PrusaSlicer, only relative extrusion code is supported. That means that each extrusion command in the file is specifying the length relative to the current position of the extruder. The downside is that rounding error accumulates over time and this may have a negative effect on the power consumption in long prints. By converting the file to absolute extrusions, the error is still there to a lesser extent, but it is also taken into account for the pings so will be part of the Palette 2 correction mechanism.

To enable the extra cycle at the end of the processing to convert the the purge add the following line to your start g-code

```
;P2PP ABSOLUTEEXTRUDER
```


## Side Wiping

Side wiping is a mechanism that fully replaces the purge tower but extrusions that happen off-bed and that will not make part of any physically printed structure. Depending on the method used you will either get an extrusion spaghetti or small blobs of plastic.

The advantage of side wipe is that no purge structure needs to be maintained so you just purge the exact amount you need, no more no less.

Downside is that you will end up with “non-structured” plastic blobs or spaghetti... when doing this make sure you have something that catches this purge so it cannot make it to your print. It could easily turn your extruder in a great mass of plastic..

In order to enable side wipe you need to move the purge block fully off the build plate.

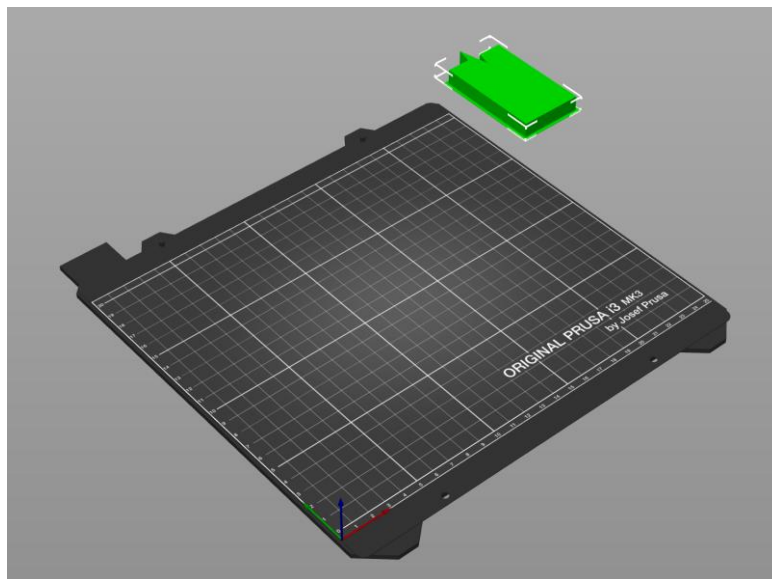

## Bed Side Purge

This is the first way of doing side purge. It will move the carriage to the side of the bed and extrude spaghetti of the side of the bed while moving back and forward on the Y-Axis.

In order to setup this form of side wipe you need

- Setup the X-Position to which the printer should move
- Define the minimal and maximal Y-coordinate between which the printer will move
- Since there is no backpressure on the extruder SIDEWIPECORRECTION allows for a correction of the amount of purge made during this form of side wipe correction.



```
;P2PP SIDEWIPELOC=X254  
;P2PP SIDEWIPEMINY=45  
;P2PP SIDEWIPEMAXY=195  
;P2PP SIDEWIPECORRECTION=1.0
```

### Stationary Side Wipe (as of v5.2.0)

Stationary side wipe is similar to regular sidewipe, but it does not move the Y-Axis in the process. It is achieved by setting both SIDEWIPEMINY and SIDEWIPEMAXY to the same value. The X-location is determined by the SIDEWIPELOC parameter.

The WIPEFEEDRATE parameter will determine the speed of extrusion. Recommended value for the WIPEFEEDRATE parameter is 200. You can try higher values, but increase in speed can result in loss of steps on the extruder stepper motor if the hotend is unable to keep up. This will impact your prints!

```
;P2PP SIDEWIPELOC=X254  
;P2PP SIDEWIPEMINY=45  
;set SIDEWIPEMAXY to the same value as SIDEWIPEMINY  
;P2PP SIDEWIPEMAXY=45  
;set WIPEFEEDRATE is required to override default value!!  
;P2PP WIPEFEEDRATE=200
```

### Big Brian 3D Purge Mechanism

A second way of doing purge is collecting the purge in a Big Brain 3D mechanism



This device is currently only available for the Prusa MK3/MK3S printers and will require a stock extruder and x-idler. Step files are available when you purchase the device so you can try to adapt to your own printer.

The device comes with its own calibration guide. You will have to take the values from your calibration to complete the setup in P2PP

The following parameters need to be set to activate side wipe. Note that for side wipe to activate the purge block needs to be moved OUTSIDE of the heated bed. The Purge position needs to be taken from the calibration results for your printer.

```
;P2PP BIGBRAIN3D_BLOBSIZE=40
;P2PP BIGBRAIN3D_COOLINGTIME=20
;P2PP BIGBRAIN3D_PURGEPOSITION=255
;P2PP BIGBRAIN3D_MOTORPOWER_HIGH=450
;P2PP BIGBRAIN3D_MOTORPOWER_NORMAL=300
;P2PP BIGBRAIN3D_FAN_OFF_DELAY=2000
;P2PP BIGBRAIN3D_ENABLE
;P2PP BIGBRAIN3D_PRIME_BLOBS=2
```

The other parameters are taken from the manufacturer's website. The BLOBSIZE of 40 is the default value and all BLOBS will be 40mm of filament equivalent in size. This means that all purging sequences are rounded to the nearest greater multiple of 40mm

Cooling is set to 20sec, but could be reduced depending on the material used and the environmental situation. The blob needs to be hard enough to be pushed out of the way by the flicker arm

The motor power settings are defaulted to the manufacturers suggestions as well.

The default High power value is 450, if you see that the motor is unable to hold position and you see layer shifts in your print you may need to increase this setting or reduce the number of springs. Increasing the value will increase the temperature of the X-axis motor. Further active cooling may be required to prevent damage.

The BIGBRAIN3D\_FAN\_OFF\_DELAY parameter defines the delay between turning off the fan and the extrusion. This allows the fan to be fully off when the blob creation starts. The value for this parameter is defined in milliseconds.

The BIGBRAIN3D\_PRIME\_BLOBS parameter can be used in case of short first splices to increase the length artificially. Each blob represents the amount of filament stated in the BLOBSIZE parameter.

### Defining the number of Blobs









This feature is supported in P2PP version 8.0.6 and higher.

In PrusaSlicer in the Purge volumes window you can define the number of blobs you want to purge instead of the volume in mm<sup>3</sup>. All numbers below 20 are recognized as number of blobs.

Experience shows that 3 blobs are enough to purge for a color like red or blue. Light colors like white need 4 or 5 blobs to purge if there are strong colors in the mix.

Total purging volume is calculated by summing two values below, depending on which tools are loaded/unloaded.

Volume to purge (mm<sup>3</sup>) when the filament is being

	unloaded	loaded
 Tool #1:	1	2
 Tool #2:	1	2
 Tool #3:	1	2
 Tool #4:	1	2
 Tool #5:	1	2
 Tool #6:	1	2
 Tool #7:	1	2
 Tool #8:	1	3

Show advanced settings

OK

Cancel

The left values defining the number of blobs purged before the color change happens. This gives the Palette some space to adjust when the pings vary. The right values defining the numbers of blobs purged after the color change. This is important to get the color mix out of the nozzle and a brilliant color on the printed object. The two numbers (left and right) are added together to get the number of blobs purged per color change.

Here you can adjust required purging volume (mm<sup>3</sup>) for any given pair of tools.

Extruder changed to

	1	2	3	4	5	6	7	8
1		3	3	3	3	3	3	4
2	3		3	3	3	3	3	4
3	3	3		3	3	3	3	4
4	3	3	3		3	3	3	4
5	3	3	3	3		3	3	4
6	3	3	3	3	3		3	4
7	3	3	3	3	3	3		4
8	3	3	3	3	3	3	3	

Show simplified settings

OK

Cancel

In the advanced setting you also can set up the number of blobs as a matrix.

To save filament a good tip is to adjust the blob size in the start gcode.

The minimum splice length is 90mm. The default blob size is 40mm.

The following calculation is not 100% correct because the feedrate is set to 95% in most cases but it can explain the issue.


So 90mm divided by 40mm is 2.25 blobs.

That means 3 blobs are the minimum to purge and 0.75 blobs are wasted.

You can decrease the blob size to get closer to the perfect purge amount but that also means that you have to increase the number of prime blobs, else you will get a short first splice error.

```
;P2PP BIGBRAIN3D_ENABLE  
;P2PP BIGBRAIN3D_BLOBSIZE=35  
;P2PP BIGBRAIN3D_COOLINGTIME=20  
;P2PP BIGBRAIN3D_PURGEPOSITION=251  
;P2PP BIGBRAIN3D_MOTORPOWER_HIGH=450  
;P2PP BIGBRAIN3D_MOTORPOWER_NORMAL=300  
;P2PP BIGBRAIN3D_PRIME_BLOBS=3
```

## Tower Delta

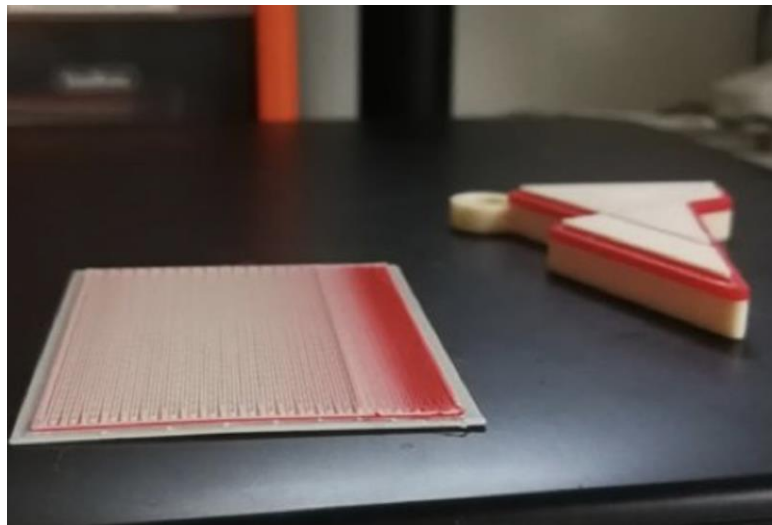

Tower delta is the principle of not printing empty tower sequences that take up time and filament. Instead the tower grows at a slower pace than the print. This creates a risk that the print head or the beam may hit the actual print while printing the purge. In order to minimize the risk it is good practice to group the printed objects in front of the purge and to one side of the bed and put the tower on the diagonal opposite (back side) of the print.

PrusaSlicer has this feature built in as of version 2.2. The major difference between the PrusaSlicer implementation and the P2PP implementation is that in P2PP you can specify the maximum difference between the print and the tower to mitigate the risk of hitting the print.

There is one parameter that is used for both activating and setting the maximum delta of a tower delta print:

```
;P2PP PURGETOWERDELTA=10  
;P2PP WIPEFEEDRATE=3000
```

Adding this parameter allows for the tower to grow 10mm lower than the actual print. If you do not want to limit the difference, either put in a large number (999) or use fullpurgereduction feature described later

To disable the tower delta, put a value of 0

Make sure you have the correct after layer gcode inserted as described above or the feature will NOT work correctly

The Tower delta function is useful on prints where you have lengths of print in a single color. (i.e. layers with no color change). These layers in general cause empty layers to be created in the purge tower which can easily be ignored.

The wipe federate specifies the maximum federate during wiping

## Full Purge Reduction

Full Purge Tower reduction is similar to Tower Delta but

- Has no difference in the number of layers
- Will generate a whole new purge tower (will be used for other features in the future)

```
;P2PP FULLPURGEREDUCTION  
;P2PP WIPEFEEDRATE=3000  
;P2PP AUTOADDPURGE
```

Full purge tower reduction will use the same amount of filament as Side Wiping but it will still create a physical purge tower that will need more time to create

The wipe federate specifies the maximum federate during wiping

There is an experimental setting AUTOADDPURGE automatically adds purge length in case a short splice is detected. This is only intended for occasional short splices, if there are many short splices in the print, the purge tower will grow over the print height. This will cause issues.

## Accessory Mode [still under development]



Accessory mode prints generate Ping sequences in a separate MAF/MSF file that is put on an SD card and is fed to the Palette 2 in that way. The pings are inserted in the form of delays during the print. As such the print can be executed directly from SD card in the printer without the need of an Octoprint.

## P2 Accessory Mode

Parameters need to be taken from calibration information

```
;P2PP ACCESSORYMODE_MAF
```

## Palette + Accessory Mode

In this mode, P2PP can be used in conjunction with the Palette+, by generating a MSF file that can be loaded on the SD Card, just as if it were generated by Chroma / Canvas. **It is important to note that the values below are not what you see on the Palette+ Screen, but are obtained from Chroma, after completing the calibration.**

```
;P2PP ACCESSORYMODE_MAF
;P2PP P+PPM=<ppm value>
;P2PP P+LOADINGOFFSET=<loading offset>
```

Calibration Values	Loading Offset	29631
Why calibrate ?	Print Value	108925
	Calibration Print Length	3.68 m
	Pulses Per MM	29.6247

Re-Calibrate Printer with Palette

## Temperature Control (Thanks to J. Giesser for the suggestion) version 4.12.0

```
;P2PP TEMPERATURECONTROL
```

When set this setting will change alter the temperature settings in the output file. This can be useful when using filaments that require different processing temperatures. The temperature control feature will make sure all purges are handled at the highest temperature to prevent the hotter printing filament to clog on the heat-up or cooldown.

When moving from high to low temperature, the printer will purge and will reduce the temperature AFTER all purging has completed

When moving from low to high, the printer will wait for the hot end to heat up over the tower prior to purging.



When using filament such as PVA, printing at the hottest setting may cause the filament to burn and cause very difficult to remove clogs. Use this feature with caution

## Non-Print related settings

### SAVE UNPROCESSED GCODE (as of version 4.13.0)

Occasionally we will ask you to send us the unprocessed gcode for your project to replicate specific issues during the processing. Under normal circumstances the original code will be overwritten by the processed gcode to get most compatibility with the PrusaSlicer.

In order to make the generation of the unprocessed file a little easier a new config code was added to do just this.

```
;P2PP SAVEUNPROCESSED
```

Setting this parameter will generate a new file during processing which has exactly the same name as the processed file but a suffix `_unprocessed` is added to the filename. So in case you generate a filename `test.mc.gcode`, the program will generate this file as well as a file named `test.mcf_unprocessed.gcode`. When needed you can send in this file.

### CHECKVERSION

Adding the `checkversion` keyword to your stag code will trigger P2PP to download the information about the latest master/dev online versions and warn you if updates are available

```
;P2PP CHECKVERSION
```

### CONSOLEWAIT

Setting the `CONSOLEWAIT` parameter will trigger P2PP to wait for user response even if no warning were issues

```
;P2PP CONSOLEWAIT
```

## IGNOREWARNINGS

Ignore warnings will close the window even if there were warnings during the processing

```
;P2PP IGNOREWARNINGS
```

## DEBUGTCOMMAND


Leave the T-commands untouched in the print so it can be previewed in g-code previewers while maintaining the information on the tools used (the files generated this way will NOT print correctly with the P2)

```
;P2PP DEBUGTCOMMAND
```


## Purge/Wipe length

The quality of your color transitions will greatly depend on the purge or wipe length defined in PrusaSlicer.

When in platter vies mode in a multicolor setup, you will notice a Purging Volumes button right above the object tree windows

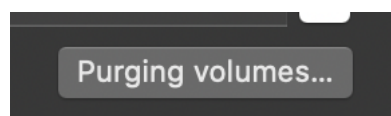

Clicking this button will bring up the purge volume adjustment dialog.

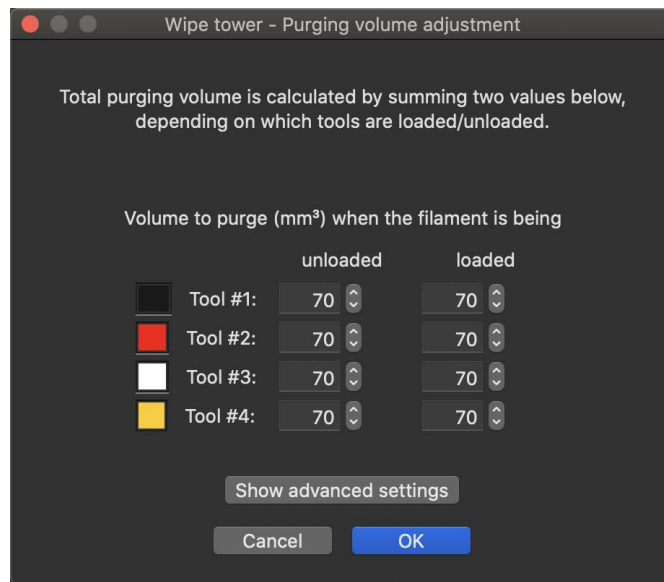

**The values in this diagram are defined in mm<sup>3</sup> (volume of filament), not in mm (length of filament). 70mm<sup>3</sup> of filament is about 70/2.4 mm of filament.**

The length of the purge will depend on the nature of the filament used. The effective length of purge generated is the sum of unload of the old value and the load value for the new filament.

It is good practice to keep the minimal purge around 180mm so you avoid short splice specifically when using layers with only tiny details in a specific color.

As a rule of thumb:

- Strong colors (e.g. red/black) will need a low load value / high unload value
- Weak colors (e.g. white transparent) will need high load / low unload values

So going from black to white will be unload black + load white = high value  
The other way around from white to black, will add low unload + low load = low value

In modes where the tower is generated by P2PP, an extra amount of filament can be added automatically to meet the min splice length requirements for Palette 2 hardware.

For compatibility of this function with other processing modes check the matrix above.

The feature is activated by adding the following line to your start gcode under printer settings

```
;P2PP AUTOADDPURGE
```

## KLIPPER firmware

When running a printer based on the KLIPPER firmware, add the following line to detect the tool changes. Please don't change the names of the extruders, just use the defaulted names

```
;P2PP KLIPPER_TOOLCHANGE
```

## Running P2PP

Once you have all parameters entered you can load a multi-color file in PrusaSlicer and click the export button/send to printer button... if all goes well you will get a pop-up window from P2PP

If there were warnings (like in the example below), the window will remain open (as long as the window is open PrusaSlicer will not function normally and should not be used)

You can review the errors and see what is needed to correct them. Clicking OK will return you to PrusaSlicer. If uploading was selected, the print will be uploaded to the printer.



If the processing went through without issue the window will close automatically without waiting and the PrusaSlicer will take control from there. If you have the consolewait parameter set you will get a similar window with a header confirming the correct processing



**Filename:** /Users/tomvandeneede/Desktop/ps22\_stock.gcode  
**Printer ID:** f41791d802509353  
**P2PP Version:** 4.0.2  
**Progress:** **COMPLETED OK**

```
Python Version Information: 2.7.16
Reading File /Users/tomvandeneede/Desktop/ps22_stock.gcode
Analyzing slicer parameters
File was created with PS version:2.2.0-alpha2
Pre-parsing GCode
Splice Offset set to 32.00mm
Extra filament at end of print 160.00mm
Generate processed GCode
Generating GCODE file: /Users/tomvandeneede/Desktop/testo.gcode
```

In either case the output file will contain the processed information from P2PP, even if errors have been detected.

## Troubleshooting

Before reporting an issue:

- Make sure you have the latest version of P2PP running. We only support the latest master and latest development version of P2PP. Your bugs may have been solved in later versions of the tool.

If after reading all of the documentation, you should still have issue to make successful prints using P2PP, you can turn to the [P2PP Community Help](#) page on Facebook.

If you cannot find the information you are looking for in the existing topics, you can post your own question. Be thorough in your descriptions, people are there to help and the more you give them to work with the better chance you will have to get your specific issue resolved...

When reporting issues you will often be asked to provide supporting material:

- Processed GCODE file (output of P2PP script) so we can see what code is generated and if it shows any sign that could link the problem to the code
- Unprocessed GCODE file (output of PrusaSlicer without the P2PP processing). The easiest way to achieve this is to add an extra character in the output
- OctoPrint log file of the print that showed the problem

## Appendix A. P2PP Parameters and default values

Name	Desc	Value
ABSOLUTEEXTRUDER	Convert file to absolute extrusion	FALSE
ACCESSORYMODE_MAF	Generate MAF file (accessory mode)	FALSE
ACCESSORYMODE_MSF	Generate MSF file (accessory mode)	FALSE
AFTERSIDEWIPEGCODE	GCode line(s) to be executed <b>after</b> sidewipe sequence. Multiple AFTERSIDEWIPEGCODE lines can occur. They are inserted in the sequence they appear in the config block	empty
AUTOADDPURGE	Automatically add purge to meet minsplice requirements (only with fullpurge reduction and sidewipe)	FALSE
AUTOLOADINGOFFSET		0
BEDORIGINX	X-position of the origin of the bed, since 5.1.0 taken from file, can be overridden	Input file
BEDORIGINY	Y-position of the origin of the bed, since 5.1.0 taken from file, can be overridden	Input file
BEDSIZEEX	X-size of the bed, since 5.1.0 taken from file, can be overridden	Input file
BEDSIZEY	Y-size of the bed, since 5.1.0 taken from file, can be overridden	Input file
BEFORESIDEWIPEGCODE	GCode line(s) to be executed <b>before</b> sidewipe sequence. Multiple BEFORESIDEWIPEGCODE lines can occur. They are inserted in the sequence they appear in the config block	empty
BIGBRAIN3D_BLOBSIZE	See BB3D section in this manual	40
BIGBRAIN3D_BLOBSPEED	See BB3D section in this manual	200
BIGBRAIN3D_COOLINGTIME	See BB3D section in this manual	12
BIGBRAIN3D_ENABLE	See BB3D section in this manual	FALSE
BIGBRAIN3D_FAN_OFF_PAUSE	See BB3D section in this manual	0
BIGBRAIN3D_LEFT_SIDE	See BB3D section in this manual	FALSE
BIGBRAIN3D_MOTORPOWER_HIGH	See BB3D section in this manual	450
BIGBRAIN3D_MOTORPOWER_NORMAL	See BB3D section in this manual	300
BIGBRAIN3D_NUMBER_OF_WHACKS	See BB3D section in this manual	1
BIGBRAIN3D_PRIME_BLOBS	See BB3D section in this manual	0
BIGBRAIN3D_PURGEPOSITION	See BB3D section in this manual	256.5
BIGBRAIN3D_PURGEYPOSITION	See BB3D section in this manual	Empty
CHECKVERSION	Check online for new version	FALSE
CONSOLEWAIT	Wait for user input at end of processing even if there are no errors	FALSE
EXTRAENDFILAMENT	Amount of extra filament added at the end of the print in the last used color (in mm)	150
EXTRUSIONMULTIPLIERCORRECTION	Sets the correction factor applied to the extrusions used in the gcode file.	1
FULLPURGEREDUCTION	Engages full purge reduction	FALSE
IGNOREWARNINGS	Closes P2PP after processing even if there were warnings	FALSE
KLIPPER_TOOLCHANGE	Detect KLIPPER TOOLCHANGE commands instead of default Tn commands	FALSE
LINEARPINGLENGTH	Sets the length between pings programmed in the file	350
MINSPLICE	Minimal splice length	70



MINSTARTSPLICE	Minimal first splice length	100
P+LOADINGOFFSET	Accessory more parameter for Palette+	Empty
P+PPM	Accessory more parameter for Palette+	Empty
PRINTERPROFILE	Printer profile string length 16 for P2 and before 32 bit for P3	50325050494e464f
PROFILETYPEOVERRIDE	See splicing Algorithm	Empty
PURGETOPSPEED	Set Speed limit during purging Value <200 is interpreted as mm/sec, larger values are interpreted as mm/min	empty
PURGETOWERDELTA	Engages power delta	FALSE
SAVEUNPROCESSED	Save a copy of the unprocessed file to disk (useful for debugging)	FALSE
SIDEWIPECORRECTION	Correction factor applied to the filament extruded during side wipe	1
SIDEWIPELOC	See sidewiping section	empty
SIDEWIPEMAXY	See sidewiping section	175
SIDEWIPEMINY	See sidewiping section	25
SPLICEOFFSET	Defines the extra length in mm added to the first splice	30
TEMPERATURECONTROL	Enables active temp control by introducing controlled temperature waits during the print to allow for cooldown/heatup matching the higher/lower temp requirements for the print	FALSE
WIPEFEEDRATE	Defines the default federate used for wiping	3000