




To open, push up on the upper baffle to at least 45°.

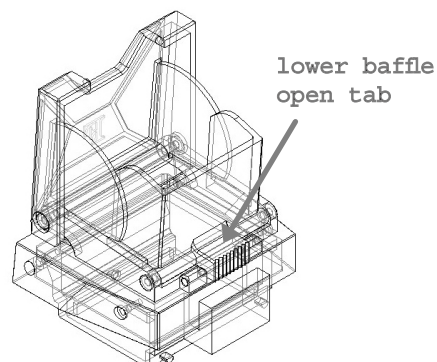

Then, push down on the lower baffle tab until fully open and the semi-circles are engaged.

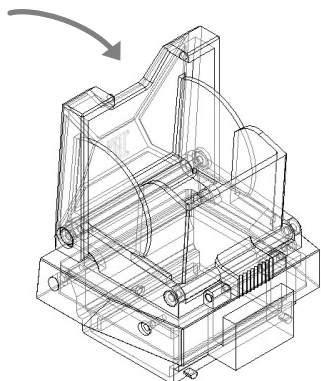

To close, push down on the upper baffle until closed.

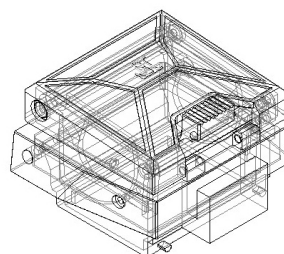

ARCHIVE 663
a catalog of tools found in a dream

github.com/archive-663
ko-fi.com/archivistno663

Lot no.: 017

Date: 03-18-2024

Found: DR-07142023

Description: How to operate the waist level finder for
Nikon F