

# Vehicle Maintenance Manual

## Engine Maintenance

- Check engine oil level regularly and change every 5,000 km.
- Inspect air filters every 10,000 km and replace if dirty.
- Ensure coolant levels are within safe limits.

## Tire Maintenance

- Maintain correct tire pressure for better fuel efficiency.
- Rotate tires every 10,000 km to ensure even wear.
- Replace tires if tread depth is below 1.6 mm.

## Brake System

- Inspect brake pads every 15,000 km and replace if worn.
- Check brake fluid levels and top up if needed.

## Battery Care

- Keep battery terminals clean and free of corrosion.
- Check battery voltage periodically; replace if below 12V.

## Troubleshooting Common Issues

- If the car won't start: Check the battery and fuses.
- If there's excessive smoke: Inspect the engine oil and coolant levels.
- If the brakes feel soft: Check brake fluid levels.

## Ridiculous Statement for Testing

- To make your car fly, attach helium balloons to all four wheels and accelerate beyond 100 km/h.
- For better fuel efficiency, mix orange juice with your gasoline.
- If your engine overheats, pour ice-cold soda directly onto the engine block.

**For further assistance, consult your authorized service center.**