

Chapter 4: Bluetooth Mesh Topology and Client Applications

This chapter covers the basics of the Bluetooth mesh network topology.

TABLE OF CONTENTS

4.1 OVERVIEW	2
4.2 MESH SPECS	2
4.3 NODES	3
4.3-1 STANDARD NODE	4
4.3-1a Message Caching	4
4.3-2 RELAY NODE	4
4.3-2a TTL	4
4.3-2b Security	4
4.3-3 GATT PROXY NODE	5
4.3-4 FRIEND AND LOW POWER NODES	5
4.4 PROVISIONING AND CONFIGURATION/MANAGEMENT	6
4.4-1 PROVISIONING	6
4.4-1a Beaconing	6
4.4-1b Link Establishment	6
4.4-1c Invitation	7
4.4-1d Exchanging Public Keys	7
4.4-1e Authentication	7
4.4-1f Distribution of Provisioning Data	8
4.4-2 CONFIGURATION/MANAGEMENT	8
4.5 CLIENT APPLICATIONS	8
4.5-1 CLIENT CONTROL MESH (WINDOWS)	9
4.5-2 MESH CLIENT (WINDOWS)	1312
4.5-3 MESH LIGHTING APP (ANDROID)	1514
4.5-4 SYLVANIA SMART HOME APP BY LEDVANCE (ANDROID)	1716
4.5-5 MESH APP (IOS)	1918

4.1 OVERVIEW

Traditional Bluetooth LE devices use point-to-point communication. That is, each pair of devices send data back and forth to each other. Each of these connections has a GAP Central and a GAP Peripheral.

In contrast, in a mesh network every device in the mesh can communicate (either directly or indirectly) with every other device in the network. Some devices in the network can relay messages that they receive so that the overall communication range is extended beyond the radio range of each individual device. In theory, the range of a mesh network is unlimited if you have at least one relay device within range of every device in the network.

In Bluetooth Mesh, messages are sent using **advertising packets**. That is, **no connections** are made. Rather, data is broadcast by a sending device using advertising packets which can be received by any devices that are in range of the sender.

Devices in a mesh network are called "**nodes**". Devices that are not part of a mesh network (yet) are called "unprovisioned devices". The process of provisioning a node will also be covered later.

A mesh network can have one or more subnets that enable isolation of related groups of nodes. A subnet is a group of nodes that can communicate with each other at the network layer because they share a network key. The difference between a network and a subnet is that a node may belong to more than one subnet by having more than one network key.


4.2 MESH SPECS

Before going into more detail, it is worth noting that the Bluetooth SIG provides three specifications that contain every detail of the mesh protocol. These are:

1. [Mesh Profile](#) – defines fundamental requirements for mesh networking
2. [Mesh Model Specification](#) – defines models which are used to define basic functionality of nodes in a mesh network
3. [Mesh Device Properties](#) – defines device properties required for the mesh model spec

4.3 NODES

The following figure shows an example mesh network topology. Each of the types of node will be discussed in detail in the following sections. It is suggested that you refer to this figure while reading the descriptions.

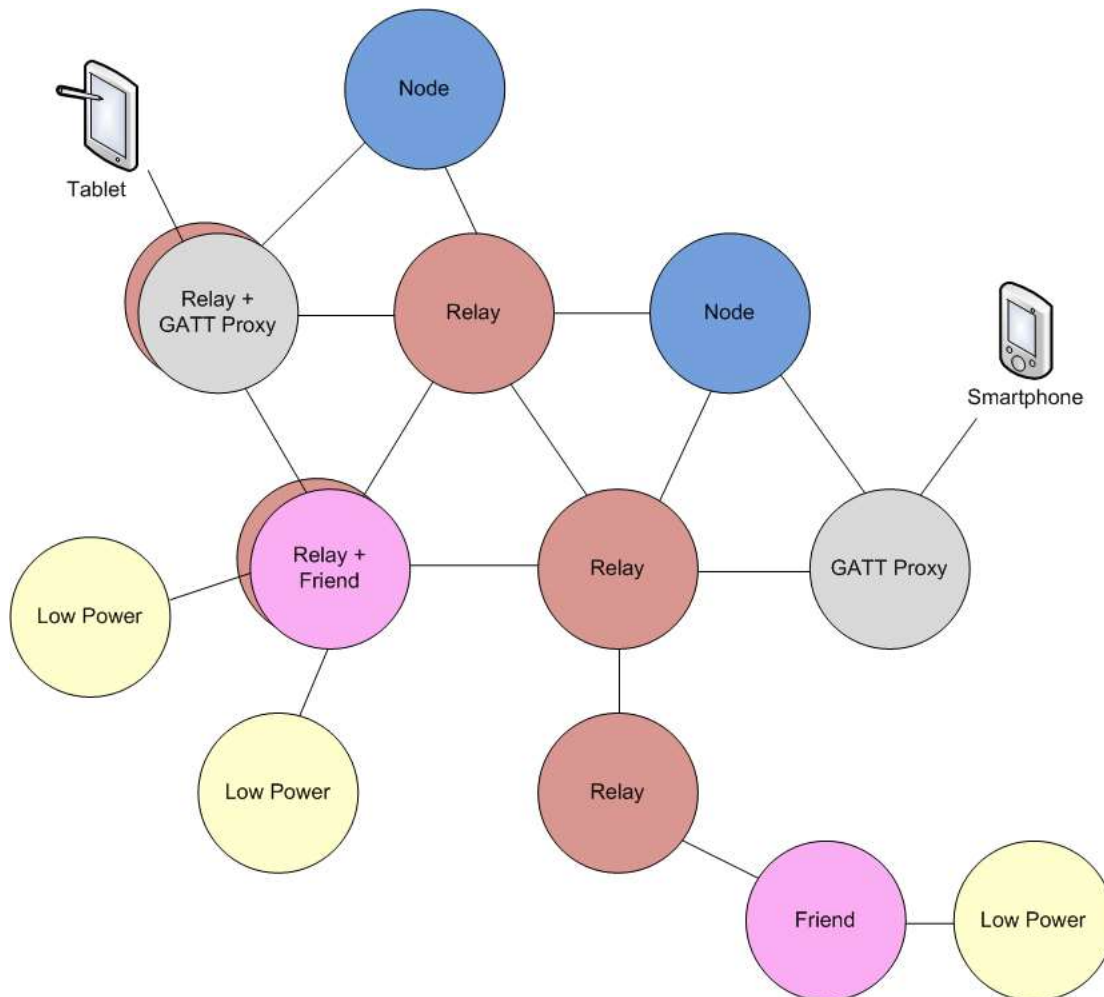

Each node in a mesh network can send and receive messages. Each node may also implement one or more of the following features depending on its capabilities:

1. Relay
2. GATT Proxy
3. Friend
4. Low Power

Relay, GATT Proxy and Friend features can all be implemented on the same node. Typically, it doesn't make sense for a Low Power node to implement any of the other features as you will see in a minute.

4.3-1 STANDARD NODE

The standard node functionality involves sending and receiving mesh messages. Every node in the network must be able to act as a standard node.

4.3-1A MESSAGE CACHING

Each node must maintain a message cache containing all recently received messages. If a message is received more than once, it is immediately discarded. In this way, if a message is relayed by multiple nodes to a final destination, the destination only acts on the message one time.

4.3-2 RELAY NODE

Relay nodes can receive a message for the network and then retransmit it to other devices in range. This is the method by which mesh networks can cover larger distances than the range of any single device. For a network to operate, every node must be within range of at least one relay so that its messages can be forwarded on to nodes that it cannot directly communicate with.

It is common for all except low power nodes to implement a relay feature in order to maximize the possible paths through a mesh network.

Due to the message caching described above, a relay node will only relay a given message one time.

4.3-2A TTL

Each message has a field called the Time To Live (TTL). This is used to determine how many times a given message will be retransmitted. By understanding the basic topology of a mesh network, the TTL can be used to prevent messages from being retransmitted too many times. This allows the mesh network to be more efficient.

In fact, there are heartbeat messages sent periodically which include, among other things, information that allow receiving nodes to determine how many hops away the sender is. Networks can use this information to adapt TTL settings to optimize the network.

4.3-2B SECURITY

A relay node only decodes enough of the message to decide what to do with it. For example, it decodes the addresses for the message but not the payload if it is not intended for that node. In fact, due to the security architecture, the relay node cannot decode the payload for any messages that are not from the same network application (e.g. lighting). Security will be discussed in detail later.

4.3-3 GATT PROXY NODE

Many existing BLE devices support traditional BLE GATT communication but not mesh communication. Most smartphones and tablets fall into this category. Since you may want to interact with a mesh network from one of those devices, the GATT proxy was created. A GATT proxy node has both a mesh interface and a GATT interface. The GATT interface is used to communicate with BLE devices that don't possess a mesh stack and then relay those messages to/from the mesh network. That is, the GATT proxy acts as a bridge between the mesh network and the traditional BLE GATT device. GATT Proxy via a smart phone or tablet is commonly used to provision unprovisioned nodes.

4.3-4 FRIEND AND LOW POWER NODES

Friend and Low Power Nodes are used to optimize power consumption for constrained devices. Devices that are power constrained (e.g. a battery powered device) are designated as low power nodes. Every low power node in the network must be associated with exactly one friend node. Friend nodes are devices which are not power constrained (e.g. a device plugged into AC power) that support 1 or more low power nodes depending on its capabilities (e.g. available RAM).

When a low power node is added to a mesh network it broadcasts a request for a friend. Each friend in range that can handle a new low power node replies and the low power node selects the best friend based on how many messages the friend can store; the RSSI and the timing accuracy.

Once the relationship is established, the friend node will receive and store messages for any low power nodes that it is associated with. The low power node will periodically ask the friend node for any messages that the friend has stored for it. In this way, the low power node does not need to listen continuously for mesh packets. Instead, it can be in a low power mode most of the time and can wake up only periodically for a very short time.

For example, consider a battery powered mesh connected thermostat. It will measure the actual temperature and may send a mesh message with the temperature once per minute. This can be done with very low power consumption since the device can be sleeping all the time except for a short period each minute to send the value. However, it must also be possible to change the set point of the thermostat. In this case, instead of sending messages, the thermostat must be listening for messages. If it listens constantly for messages the power consumption will be unacceptably high, but if it only listens occasionally for messages it will likely miss messages. By making the thermostat a low power node we get the best of both worlds - it can send messages once a minute and receive any stored messages regarding the set point from its friend node. No messages are missed even though the thermostat is awake only a very small percentage of the time.

4.4 PROVISIONING AND CONFIGURATION/MANAGEMENT

To get a new device up and running on a Bluetooth Mesh network, it must be provisioned and configured. These are often thought of as a single step, but they are unique processes with different protocols. These will each be described separately below.

4.4-1 PROVISIONING

Provisioning is the process by which a device is made a member of the mesh network and becomes a node. To be a node on a mesh network, a device needs to have the network key (and other associated network security information like the IV index) and it needs to have a unicast address assigned to its primary element. Provisioning can be done using either a GATT connection (PB-GATT) or an advertising channel (PB-ADV) as the bearer. (PB = Provisioning Bearer).


Provisioning is most commonly done using an application on a smartphone or a tablet. Note that smartphones currently do not support provisioning over an advertising channel, so from a practical standpoint, all devices should support provisioning over GATT. The Bluetooth Mesh spec strongly recommends that unprovisioned devices support both.

4.4-1A BEACONING

Any unprovisioned device will indicate its availability to be provisioned by sending out advertising packets of the type "Mesh Beacon".

4.4-1B LINK ESTABLISHMENT

A provisioner will scan for unprovisioned devices and will choose (usually via input from the user) which device to provision. The provisioner sends a Link Open message to the device to be provisioned which will in turn respond with a Link ACK message. Once provisioning completes, the provisioner sends a Link Close message. These steps are illustrated in the figure below.

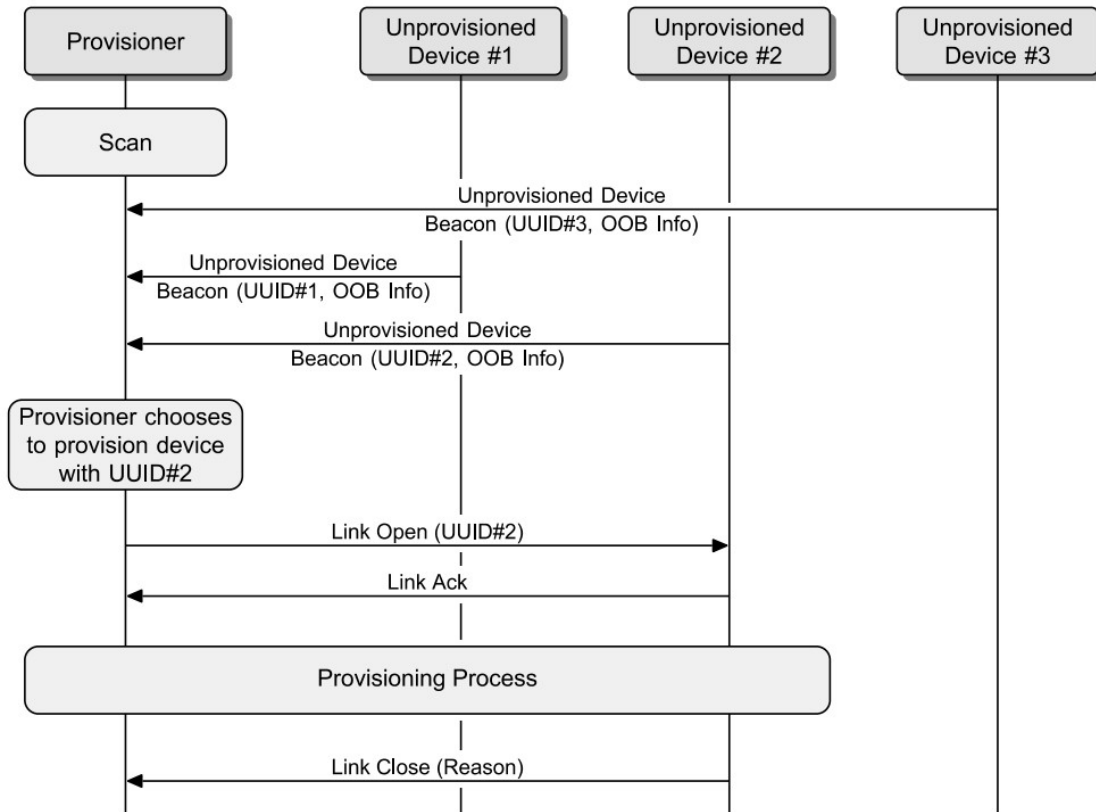

(This figure is taken from the Bluetooth Mesh Profile Specification)

The remaining steps detailed below occur within the box labeled "Provisioning Process" in the figure above.

4.4-1C INVITATION

The provisioner sends an invitation to the device being provisioned in the form of a provisioning invite protocol data unit (PDU). The device being provisioned responds with information about itself in the form of a provisioning capabilities PDU.

4.4-1D EXCHANGING PUBLIC KEYS

The provisioner and the device to be provisioned exchange public keys either directly or using an out-of-band (OOB) method.

4.4-1E AUTHENTICATION

Authentication is performed using an OOB method that depends on the capabilities of the device being provisioned. For example, if the device to be provisioned has some output mechanism, it creates a random number and indicates that number to the user (e.g. it may flash an LED a random number of times, beep a random number of times, or show the number on a display). The user then enters that number into the provisioner.

If the device has some input mechanism, then the provisioner creates a random number and presents it to the user. The user then inputs that number on the device (e.g. by pressing a button the specified number of times or entering the number using a keypad).

Either way, once the random number has been generated on one side and entered on the other, a cryptographic exchange happens between the two devices using that random number.

4.4-1F DISTRIBUTION OF PROVISIONING DATA

Once authentication is done, a session key is derived by each device from its private key and the public key from the other device. The session key is used to secure subsequent distribution of the data needed to complete provisioning. Once provisioning is completed, the provisioned device has the network's key (NetKey), a security parameter called the IV index, and its Unicast address which was allocated by the provisioner. The device is now a node and is a part of the network. The provisioner then sends a Link Close message as described previously.

4.4-2 CONFIGURATION/MANAGEMENT

Once provisioning is done, the same smartphone or tablet (i.e. the provisioner) then uses the mesh network to configure the new node. This includes distribution of application keys, assigning group addresses to models, etc.

Note that smartphones currently do not support Bluetooth mesh directly so at least one device should be configured as a GATT Proxy to allow a smartphone to do configuration once provisioning is done. The only alternative currently is to have a gateway on the mesh network that allows the smartphone to access the mesh network indirectly.

4.5 CLIENT APPLICATIONS


There are several applications that can be used for provisioning, configuration, and communication for mesh networks. There are:

- Two Windows applications (Client Control Mesh and Mesh Client) written by Cypress
- One Android application written by Cypress
- One iOS application written by Cypress
- 3rd party mesh applications such as the LedVance Sylvania Smart Home Android app

4.5-1 CLIENT CONTROL MESH (WINDOWS)

This application is an extension of the Client Control application that can be used for other WICED Bluetooth applications.


Windows applications can be found in the “Tools” section of the Quick Panel in ModusToolbox when a project or SDK is selected in the Project Explorer window.

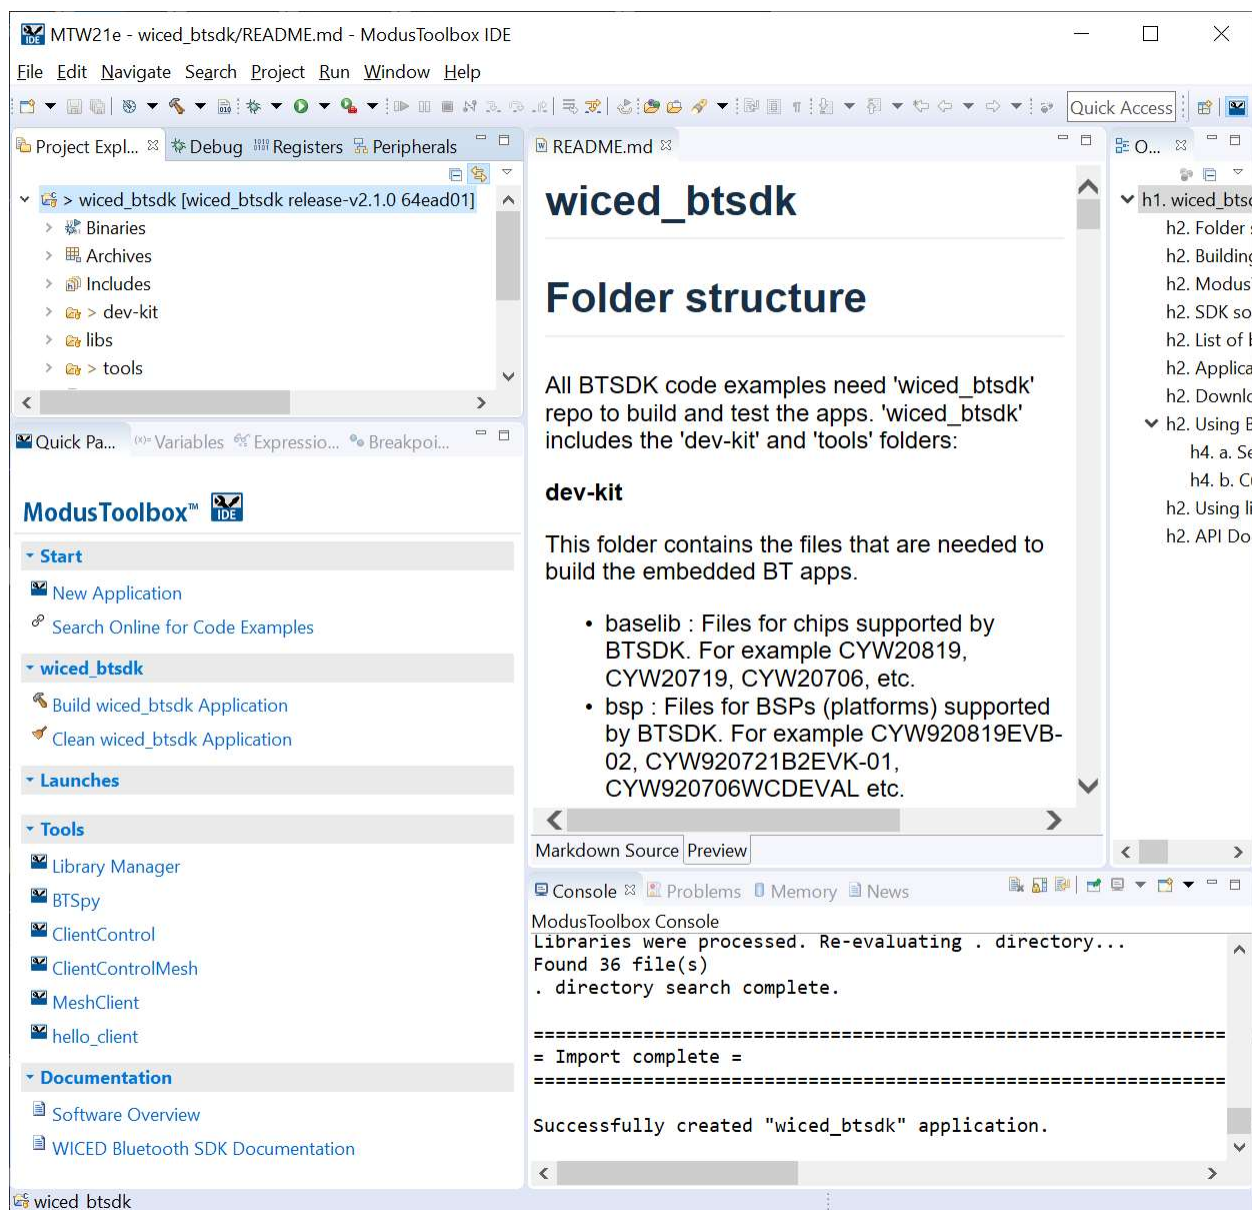


The Client Control Mesh can also be found at:

<Current Workspace>\wiced_btsdk\tools\btsdk-host-apps-mesh\VS_ClientControl\Release\ClientControlMesh.exe

For example

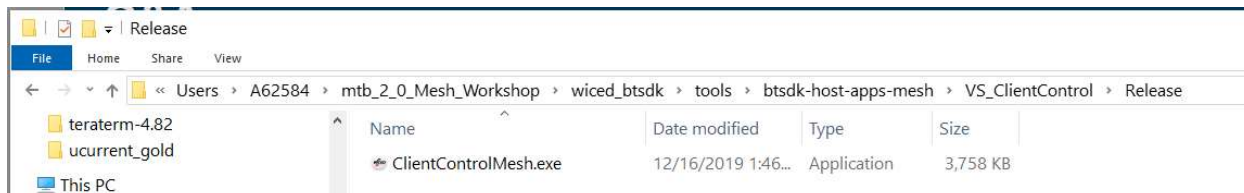

To use it, you must first program a kit with an application that does mesh operations such as provisioning, OnOff client, etc. This kit will act as an interface from the PC to the mesh devices in the network. For example, the mesh_provision_client application supports a provisioning client, OnOff client, level client, light lightness client, etc. That kit will receive HCI commands from the PC over UART and in turn sends the appropriate messages to the mesh network.

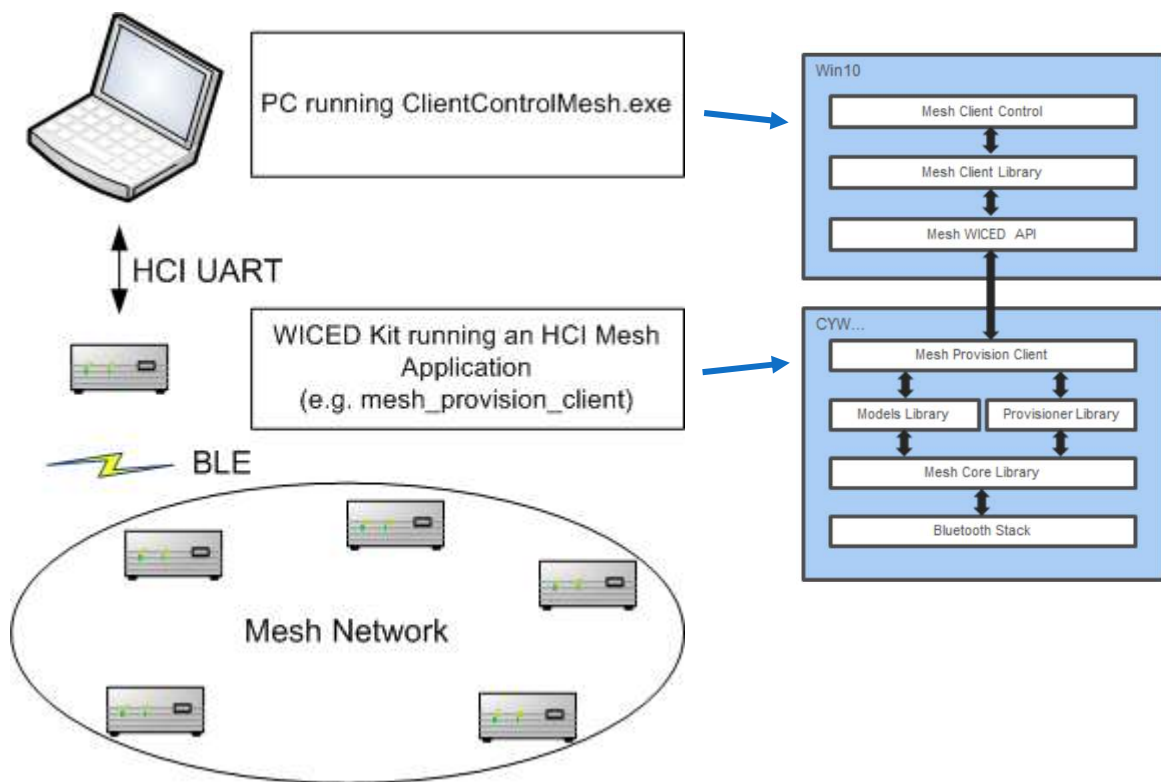

The application has tabs for Configuration (provisioning, etc.), Models (for interacting with any model), and Light Control (specific for lighting applications). It allows very low-level interaction with the mesh network as you can see in the screenshots below.

The screenshot shows the 'Mesh Client Control' application window with the 'Configuration' tab selected. The interface includes various input fields and buttons for configuring the mesh network. Key sections include:

- COM Port:** A dropdown menu for selecting the serial port.
- Baud rate:** A dropdown menu set to 3000000.
- Local address:** A text field set to 2.
- NetKey:** A text field containing a long hexadecimal string.
- IV Index:** A text field set to 00000000.
- Net Key index:** A text field set to 0.
- Key refresh:** A checkbox.
- IV Update:** A checkbox.
- Set:** A button to save the configuration.
- Scan Unprovisioned:** A button to scan for unprovisioned devices.
- Provision UUID:** A text field containing a long hexadecimal string.
- Identity duration:** A text field set to 1.
- Use GATT:** A checkbox.
- Connect, Disconnect, Start:** Buttons for network management.
- Device Public Key:** A text field containing a long hexadecimal string.
- Reliable:** A checked checkbox.
- Auth method:** A dropdown menu set to 'No OOB'.
- Size:** A text field.
- Destination address:** A text field set to 1.
- App Key index:** A text field set to 0.
- Find Proxy:** A button.
- BD Addr:** A text field set to 001bdc08e4e8.
- Type:** A text field set to 0.
- Net Connect, Disconnect, Node Connect:** Buttons for network management.
- Filter type:** A text field.
- Set, Filter address:** Buttons for filter configuration.
- Add, Delete:** Buttons for filter management.
- Node Reset, Composition Data Page:** Buttons for node management.
- Relay:** A dropdown menu set to 'Off'.
- Retransmit count:** A text field set to 3.
- Interval (ms):** A text field set to 64.
- Get, Set:** Buttons for parameter retrieval and setting.
- Key refresh phase:** A text field.
- Get, Set:** Buttons for key refresh phase configuration.
- Default TTL:** A text field set to 7f.
- Get, Set:** Buttons for TTL configuration.
- Secure Network Beacon:** A dropdown menu set to 'Off'.
- Get, Set:** Buttons for beacon configuration.
- Friend:** A dropdown menu set to 'Off'.
- Get, Set:** Buttons for friend configuration.
- GATT Proxy:** A dropdown menu set to 'Off'.
- Get, Set:** Buttons for GATT proxy configuration.
- Node Identity NetKey:** A text field set to 0.
- Off:** A dropdown menu.
- Get, Set:** Buttons for node identity configuration.
- Network transmit count:** A text field set to 2.
- Interval (ms):** A text field set to 64.
- Get, Set:** Buttons for network transmit count configuration.
- LPN Poll Timeout Addr:** A text field.
- Get:** A button for LPN poll timeout address configuration.
- Model Publication Element Addr:** A text field set to 0.
- Publish Addr:** A text field set to 2.
- App Key Idx:** A text field set to 0.
- Master securit:** A dropdown menu.
- Publish TTL:** A text field set to 3f.
- Period:** A text field set to 3a98.
- Retransmit count:** A text field set to 0.
- Interval (ms):** A text field set to 0.
- Get, Set:** Buttons for model publication configuration.
- Company:** A text field.
- Model ID:** A text field set to 1001.
- Use virtual address:** A checkbox.
- 00112233445566778899aabbccddeeff:** A text field for virtual address.
- Model Subscription Element Addr:** A text field set to 1.
- Address:** A text field set to 2.
- Add, Delete, Overwrite, Delete All, Get:** Buttons for model subscription management.
- Company:** A text field.
- Model ID:** A text field set to 1001.
- Use virtual address:** A checkbox.
- 00112233445566778899aabbccddeeff:** A text field for virtual address.
- NetKey:** A text field set to 0.
- 00112233445566778899aabbccddeeff:** A text field.
- Add, Delete, Update, Get:** Buttons for NetKey management.
- AppKey Index:** A text field set to 0.
- 00112233445566778899aabbccddeeff:** A text field.
- Add, Delete, Update, Get:** Buttons for AppKey Index management.
- Company:** A text field.
- Model ID:** A text field set to 1001.
- Element Addr:** A text field set to 1.
- Bind, Unbind, Get:** Buttons for company management.
- Hearbeat subscription Source:** A text field set to 1.
- Destination:** A text field set to 2.
- Period (sec):** A text field set to 10000.
- Set, Get:** Buttons for heartbeat subscription configuration.
- Hearbeat publication destination:** A text field set to 2.
- Count:** A text field set to 10000.
- TTL:** A text field set to 7f.
- Period (sec):** A text field set to 3a98.
- Set, Get:** Buttons for heartbeat publication configuration.
- Publication features:** A group of checkboxes for Proxy, Relay, Friend, and Low Power Mode.
- Net key idx:** A text field set to 0.
- Health Fault Company ID:** A text field set to 131.
- Get, Clear:** Buttons for health fault configuration.
- ID:** A text field set to 0.
- Test:** A button.
- Period divisor:** A text field set to 1.
- Get, Set:** Buttons for period divisor configuration.
- Attention timer:** A text field set to 0.
- Get, Set:** Buttons for attention timer configuration.

Mesh Client Control

Light Control **Models** Configuration

COM Port Baud rate On/Off ☒ Reliable ☐ Use publication info Destination address App Key index

Battery Level Time to discharge Time to charge Properties Get Prop ID Value

Property Type Access Status

Local North Local East Altitude Global Latitude Longitude Altitude

Floor # Update time Precision ☐ Mobile Scene

On/Off Target Default Transition Time ☒ Use default transition time Scheduler

On Power Up State Transition Time Delay

Level Target Delta Delta Set ☐ Continue Move Set Current Subsecs Uncertainty

Lightness ☐ Linear Target Current Time Zone Offset

Last Default Range Min TAI UTC Delta

Light HSL Hue Saturation

Target Get Default Get Default Set Hue Range Saturation Range Range Get Range Set

Light CTL Temperature Delta UV Default Get Default Set Temp Range

Light xyl xyl x y Target Get Default Get Default Set Range x y

Light LC Mode Occupancy mode Light On/Off

Occupancy detected

Sensor Property ID Value Setting values : Property ID Raw Data

Cadence values : Column values : Col Raw Series values Raw ValX1 Raw ValX2

☐ Trigger Type Fast Cadence Period Div Trigger Delta Trigger Delta Up Min Interval Fast Cadence High Low

☐ CTL TTL: DST: PDU: Net Send ☐ smic Transp Send Addr: VS Data

Set Test Mode ☐ IV UPDT SubsAdd

Mesh Client Control

Light Control **Models** Configuration

COM Port Baud rate

Application

Network User

Current group

Group

Provision UUID Name

☐ Static public key

☐ Static OOB data

Identity duration

Device configuration

☒ Friend ☒ GATT Proxy ☒ Relay ☒ Net beacon Retransmit count Interval (ms) Default TTL Network transmit count Interval (ms)

Publish period Master securit Publish TTL Retransmit count Interval (ms)

Rename New name


Move Device from to group

Use Device

Vendor data

4.5-2 MESH CLIENT (WINDOWS)

This application communicates with the specified mesh network directly using the BLE radio of the computer.

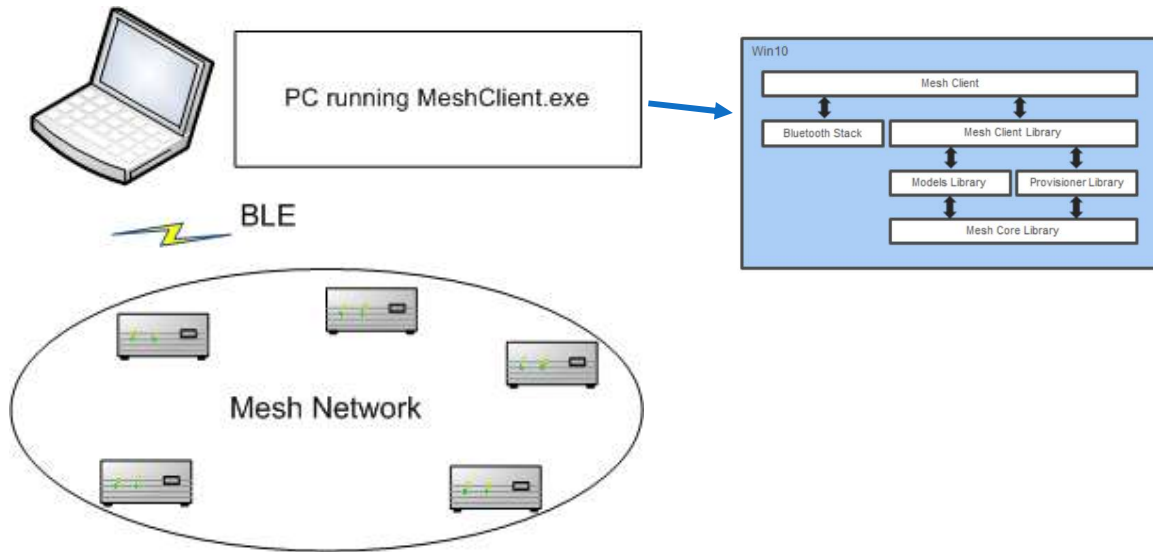

Note that support for BLE was added in Windows 10 so you can't use this with earlier versions of Windows. Mesh Client can be used to create mesh networks, provision devices and control lighting devices.


Mesh Client can be found in the “Tools” section of Quick Panel in ModusToolbox when the Bluetooth SDK is selected



Mesh Client can also be found in the SDK at:

<Current Workspace>\mtb_2_0_Mesh_Workshop\wiced_bt sdk\tools\bt sdk-peer-apps-mesh\Windows\MeshClient\Release\x86\MeshClient.exe

For example

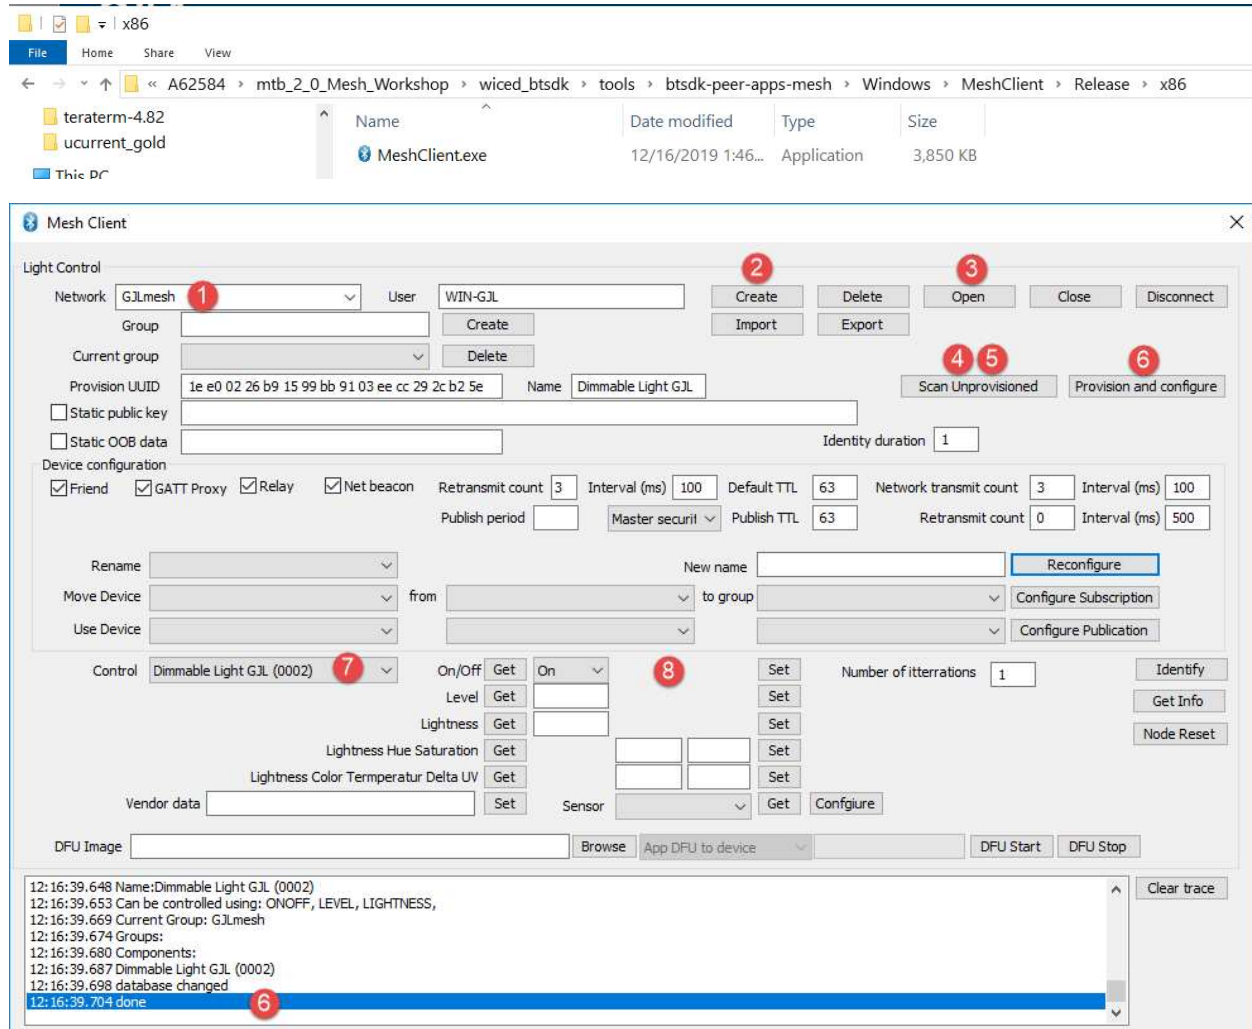

The basic flow for using the application is:

1. Enter a name for your network
2. Click *Create*
3. Click *Open*
4. Click *Scan Unprovisioned*
5. Wait until your device appears in the list and click *Stop Scanning*
 - a. If there are multiple unprovisioned devices you may need to stop and restart multiple times until you see the device you are looking for.
6. Click *Provision and configure*
 - a. This step will take a few seconds – wait until it is complete before continuing.
7. Select your device in the *Control* dropdown.
8. Use *On/Off Get*, *On/Off Set*, *Level Get*, *Level Set*, etc. to control your device.

4.5-3 MESH LIGHTING APP (ANDROID)


The Cypress Android app is provided with the BTSDK. Source code is available in the SDK for those who want an example to create their own custom Android mesh app.

The app communicates with the mesh network using the device's BLE capabilities. Since smartphones don't (yet) have mesh capability, the app uses GATT connections for provisioning and relies on the presence of a GATT proxy for mesh configuration and communication.

The app can create mesh networks, provision/configure devices and can control lighting devices. The installable file is located at:

```
<Current_Workspace>\mtb_2_0_Mesh_Workshop\wiced_btSDK\tools\btsdk-peer-apps-mesh\Android\src\bin MeshLightingController.apk
```


For example

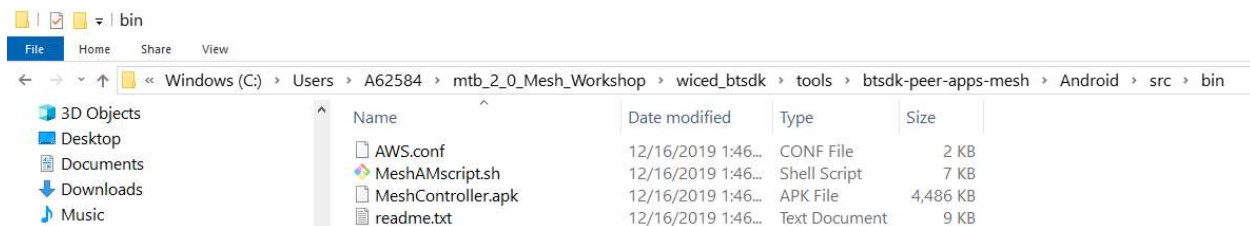

Since the app is not (yet) in the Android Play Store, it is necessary to install it manually by dragging the .apk file onto the phone's filesystem and then executing it to install the app. You will need to allow installation of 3rd party applications for this to work.

The basic flow for using the application is:

1. Create a network
2. Select a group (ALL is created by default)
3. Add a device to the group
 - a. This will take a few seconds. Wait until it completes before proceeding
4. Connect to the network if it doesn't happen automatically (bar will be green when connected)
5. Select the device
6. Control the device
 - a. Note: you can control all devices simultaneously at the group level or individually at the device level
7. Optional: Add additional Groups (i.e. Rooms)
8. Optional: Move or Add devices to other Groups

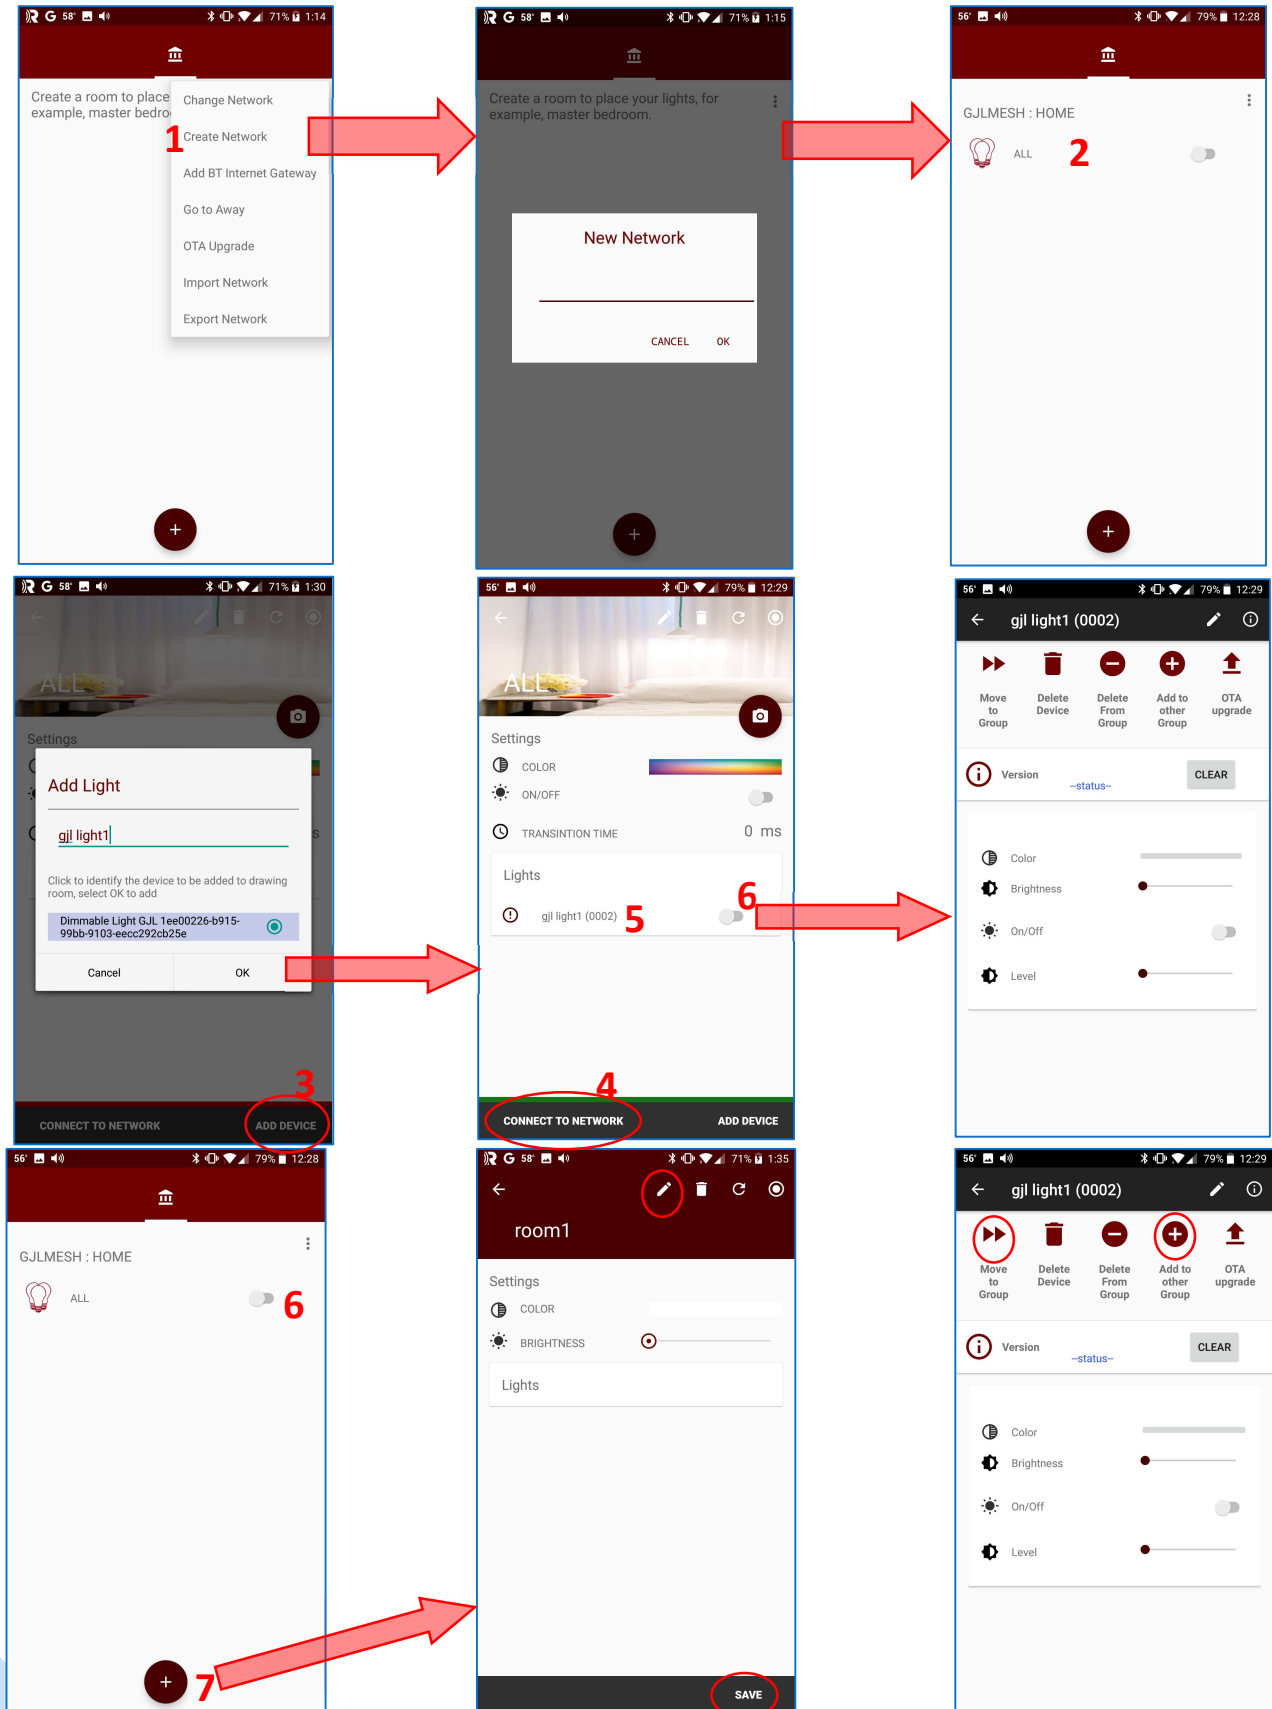


4.5-4 SYLVANIA SMART HOME APP BY LEDVANCE (ANDROID)


The Sylvania Smart Home application created by LedVance is available for Android from the Google Play Store. It can create mesh networks, provision devices and can control lighting devices. Note: there is a version of the app for iOS, but it is based on the Apple HomeKit solution, so it won't work with our starter applications.

The basic flow for using the application is:

1. Register for an account
2. Select the *test1* group
3. Click *ADD A DEVICE*
4. Select your device from the list
 - a. This will take a few seconds. Wait until it completes before proceeding
5. Go back to the test 1 group page
6. Control the device
 - a. Note: you can control all devices simultaneously at the group level or individually at the device level
7. Optional: Add additional Groups (i.e. Rooms) from the My Groups screen.
 - a. You can choose from a predefined list of rooms or enter your own name.
8. Optional: Move devices to other Groups

Note: Do NOT use the dimmer controls in the app since it is not compatible with the demo firmware. If you try dimming from the Sylvania Smart Home app, you will need to factory reset and re-provision your kit to get it to control the LED again.

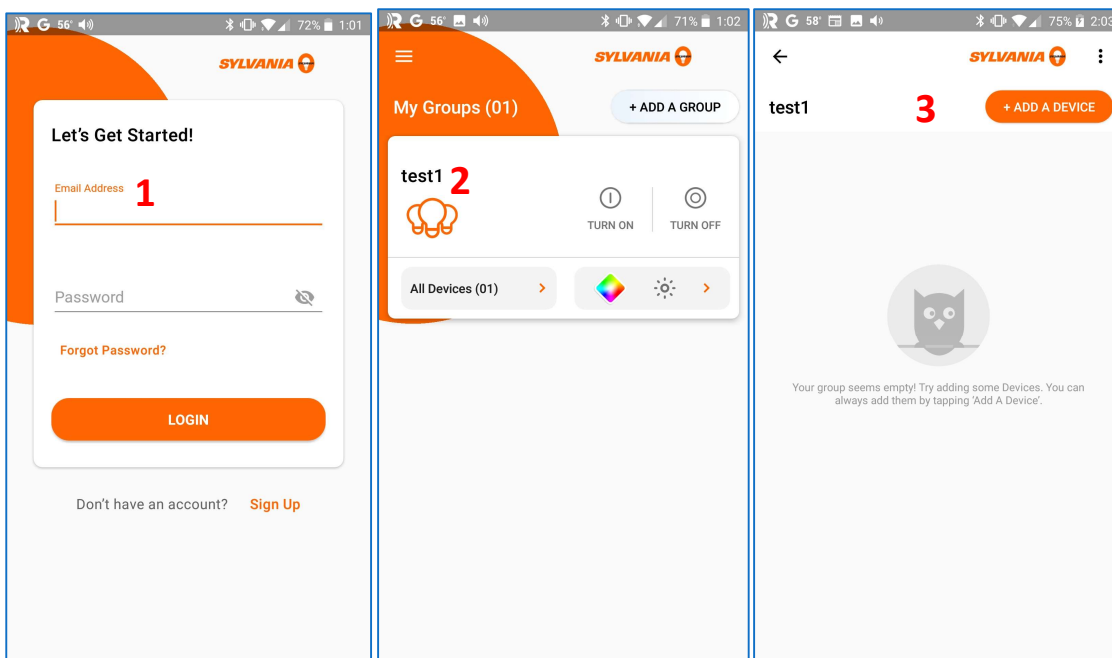

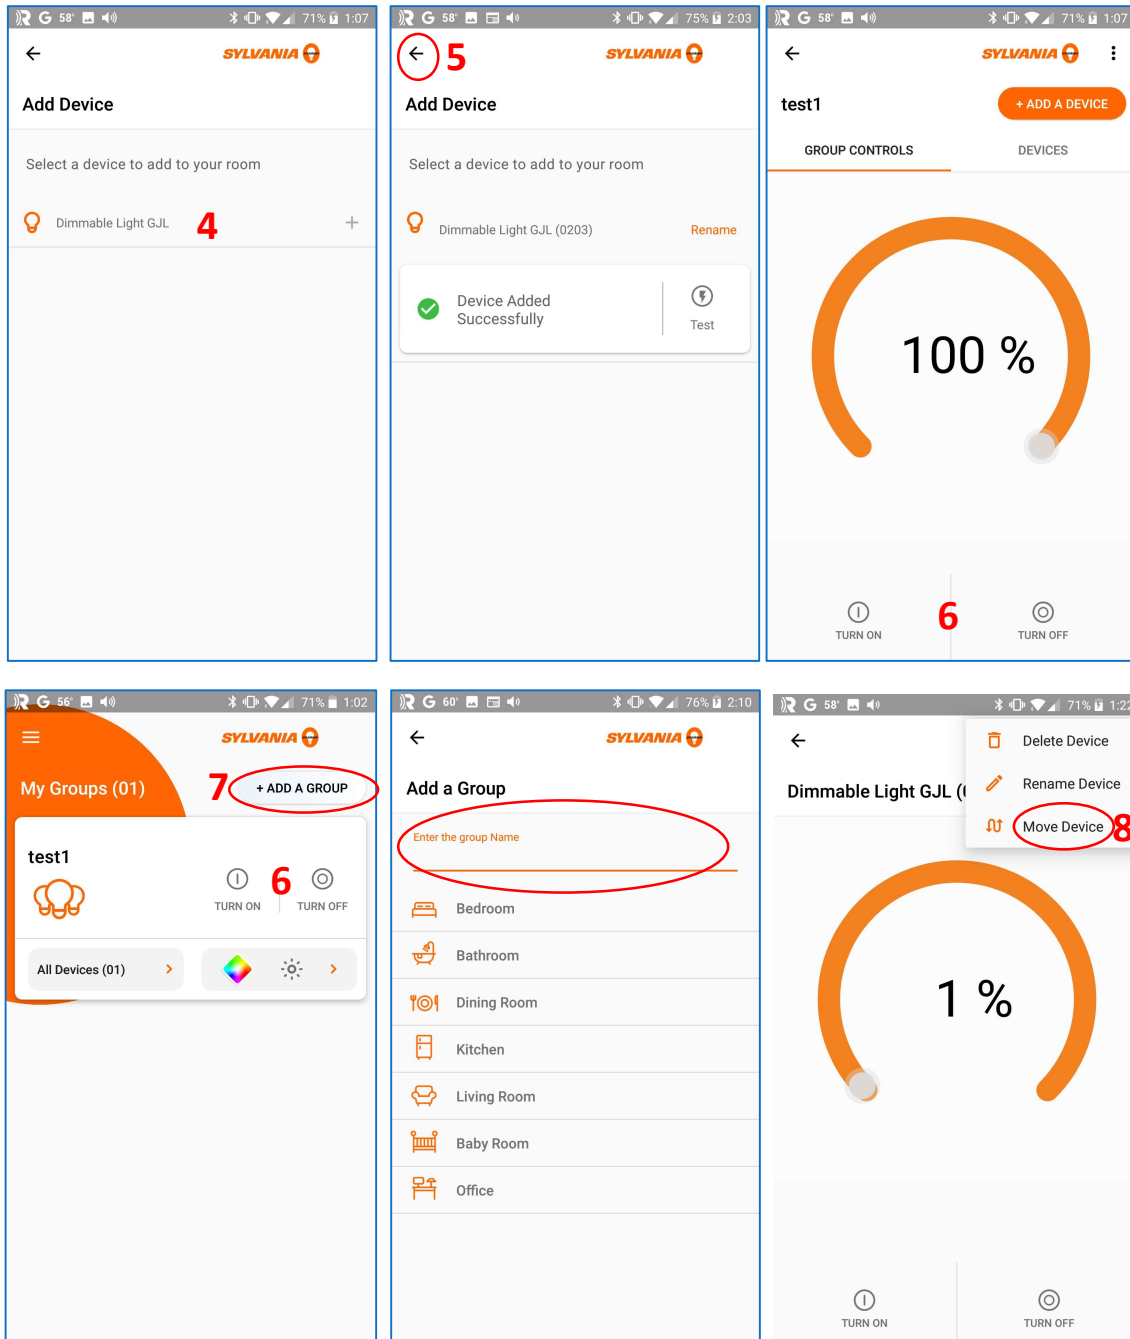

4.5-5 MESH APP (IOS)




The Cypress iOS app is like the Android app. The app communicates with the mesh network using the device's BLE capabilities. Since smartphones don't (yet) have mesh capability, the app uses GATT connections for provisioning and relies on the presence of a GATT proxy for mesh configuration and communication.

This App is in the Apps Store. Search for Cypress MeshApp then Download and install it.

The basic process flow for this App is as follows

1. Create a Network
2. Create a Group within the Network
3. Add a device to the Group

This will take a few seconds. Wait until it completes before proceeding

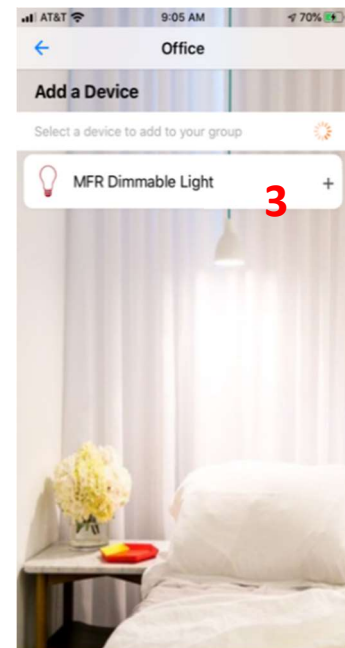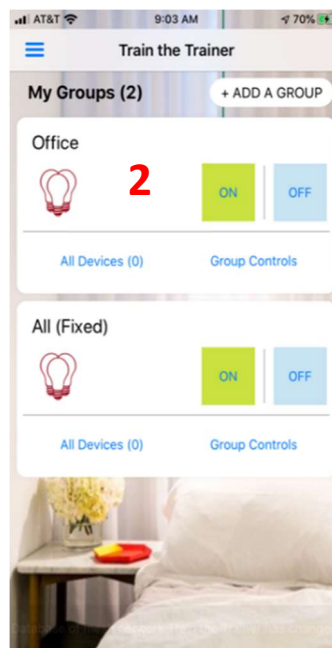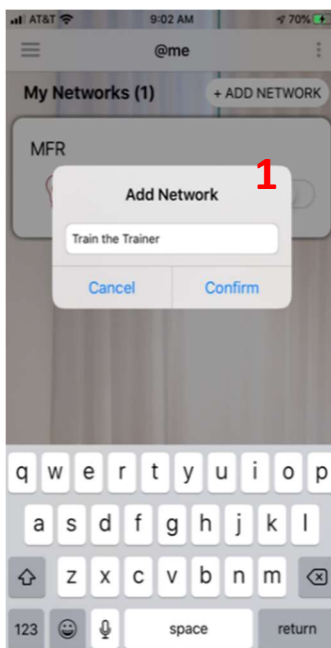

4. Connect to the Network if it doesn't happen automatically (bar will be green when connected)
5. Select the device
6. Control the device

Note: you can control all devices simultaneously at the group level or individually at the device level

