


## Chapter 6: Bluetooth Mesh Firmware

This chapter covers mesh code examples and mesh firmware architecture. It also covers client applications that can be used to provision and interact with mesh devices.

### TABLE OF CONTENTS

<b>6.1 FIRMWARE ARCHITECTURE.....</b>	<b>2</b>
6.1-1 MESH APPLICATION AND LIBRARIES .....	2
6.1-2 USER APPLICATION .....	3
6.1-2a Includes .....	3
6.1-2b Configuration Variables .....	3
6.1-2c User Function Callbacks.....	8
6.1-2d Sending Messages.....	11
6.1-2e Notifying the Mesh Model Library of Local Changes .....	12
<b>6.2 MESH DEMO STARTER APPLICATIONS .....</b>	<b>12</b>
6.2-1 APPLICATION SETTINGS .....	12
6.2-2 BLE_MESH_LIGHTDIMMABLE (SERVER).....	12
6.2-2a Configuration .....	13
6.2-2b User Application Functionality .....	13
6.2-3 BLE_MESH_ONOFFSWITCH (CLIENT) .....	14
6.2-3a Configuration .....	14
6.2-3b User Application Functionality .....	14
6.2-4 (ADVANCED) BLE_MESH_DIMMER (CLIENT).....	15
6.2-4a Configuration .....	15
6.2-4b User Application Functionality .....	15
6.2-5 (ADVANCED) BLE_MESH_TEMPERATURE_SENSOR.....	16
6.2-5a Configuration .....	16
6.2-5b User Application Functionality .....	17
6.2-6 (ADVANCED) BLE_MESH_2 <sup>ND</sup> _SENSOR (ANALOG DEVICES RED LIGHT SENSOR) .....	18
6.2-6A Configuration .....	18
6.2-6B User Application Functionality .....	19
6.2-6C Configuring the 2 <sup>nd</sup> sensor.....	21
<b>6.3 (ADVANCED) OTA .....</b>	<b>22</b>
<b>6.4 (ADVANCED) APPLE HOMEKIT .....</b>	<b>23</b>

## 6.1 FIRMWARE ARCHITECTURE

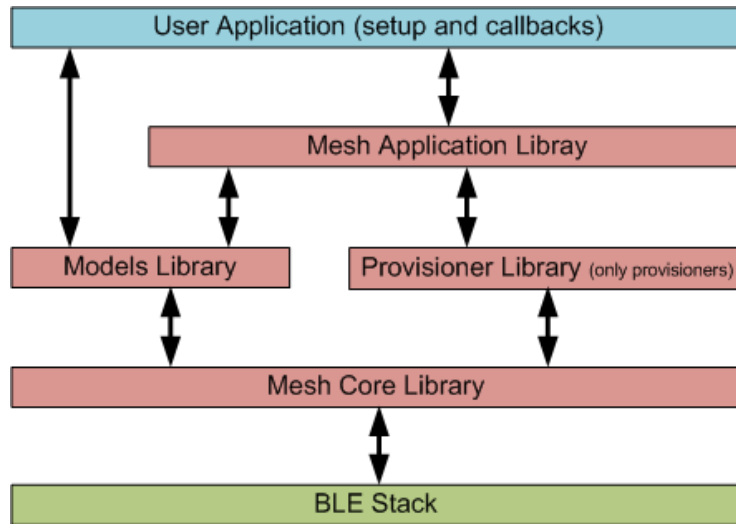

### 6.1-1 MESH APPLICATION AND LIBRARIES

The Mesh application is implemented in a set of files located in `libraries/mesh_app_lib`. The user does not typically need modify any of these files. The files are:

<code>mesh_application.c</code>	Top-level file containing <code>application_start</code> , stack initialization, Bluetooth management callback function, and other helper functions.
<code>mesh_app_gatt.c</code>	GATT database setup, GATT callback function, and all other GATT related functions.
<code>wiced_bt_cfg.c</code>	Bluetooth configuration including advertisement settings.
<code>mesh_app_hci.c</code>	Functions used for sending/receiving data to/from a host when the mesh device is used in HCI mode.
<code>mesh_app_provision_server.c</code>	Functions that allow the mesh device to be provisioned onto a network.

The API for the lower level BT mesh core, client and models library functions can be found in header functions that are found in the ModusToolbox installation directory at:

`libraries/bt_20819A1-1.0/components/BT-SDK/common/include`

Note that the easiest way to get to these files from inside the IDE are to right-click on an item such as a datatype for a structure and select "Open Declaration" (F3).

## 6.1-2 USER APPLICATION

The user application includes the Bluetooth and Mesh header files, sets up several variables and structures to configure mesh behavior, then registers and defines callback functions for various events that will be called from the mesh firmware. All user application functionality is handled in the various callback functions which will be discussed below.

### 6.1-2A INCLUDES

The user application starts with at least the following includes to get access to the Bluetooth, mesh, trace, and HCI library functions:

```
#include "wiced_bt_ble.h"
#include "wiced_bt_gatt.h"
#include "wiced_bt_mesh_models.h"
#include "wiced_bt_trace.h"
#include "wiced_bt_mesh_app.h"

#ifdef HCI_CONTROL

#include "wiced_transport.h"
#include "hci_control_api.h"

#endif
```

There may be other header files included depending on the application's functionality.

### 6.1-2B CONFIGURATION VARIABLES

After the include files, there is a set of variables that are used to configure the application. These variables configure names, models, properties, elements, and features such as relay, GATT proxy, friend, and low power.

#### 6.1-2B-1 TOP LEVEL VARIABLES

The first set of variables set up the manufacturer name, model number, etc. as shown with an example here:

```
char *mesh_dev_name = "Dimmable Light";

uint8_t mesh_appearance[WICED_BT_MESH_PROPERTY_LEN_DEVICE_APPEARANCE] = {
    BIT16_TO_8(APPEARANCE_LIGHT_CEILING) };

uint8_t mesh_mfr_name[WICED_BT_MESH_PROPERTY_LEN_DEVICE_MANUFACTURER_NAME] = { 'C', 'y', 'p', 'r', 'e',
    's', 's', 0 };

uint8_t mesh_model_num[WICED_BT_MESH_PROPERTY_LEN_DEVICE_MODEL_NUMBER] = { 'A', '1', '9', 0 };

uint8_t mesh_prop_fw_version[WICED_BT_MESH_PROPERTY_LEN_DEVICE_FIRMWARE_REVISION] = { '0', '6', '.', '0', '2',
    '.', '0', '5' }; // this is overwritten during init

uint8_t mesh_system_id[8] = { 0xbb, 0xb8, 0xa1, 0x80, 0x5f,
    0x9f, 0x91, 0x71 };
```

## 6.1-2B-2 MODELS

The next item is an array that specifies the models that will be implemented in the device. In fact, you need one of these arrays for each element in the device. So, if the device has two elements, you would have two arrays which each specify the models used in one of the two elements.

For the primary element, the array must contain `WICED_BT_MESH_DEVICE`. It will also contain other models to implement the required functionality of the primary element. For example, if the primary element has a user property server, the array will have an entry for `WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER`. Secondary elements (if there are any) do not require `WICED_BT_MESH_DEVICE` but will contain any other models required for the element's functionality.

An example of a model array for a primary element with three models is shown here:

```
wiced_bt_mesh_core_config_model_t mesh_element1_models[] =
{
    WICED_BT_MESH_DEVICE,
    WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER,
    WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER,
};
```

## 6.1-2B-3 SENSORS

If your device implements sensor models, then you will need an array for each element containing sensors to configure each sensor. Each array has one structure entry per sensor in the given element. If your device does not implement any sensor models, then these arrays are not required and can be deleted.

An example for a configuration array for a single temperature sensor is shown here:

```
wiced_bt_mesh_core_config_sensor_t mesh_element1_sensors[] =
{
    {
        .property_id = WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_TEMPERATURE,
        .prop_value_len = WICED_BT_MESH_PROPERTY_LEN_PRESENT_AMBIENT_TEMPERATURE,

        .descriptor =
        {
            .positive_tolerance = MESH_TEMPERATURE_SENSOR_POSITIVE_TOLERANCE,
            .negative_tolerance = MESH_TEMPERATURE_SENSOR_NEGATIVE_TOLERANCE,
            .sampling_function = MESH_TEMPERATURE_SENSOR_SAMPLING_FUNCTION,
            .measurement_period = MESH_TEMPERATURE_SENSOR_MEASUREMENT_PERIOD,
            .update_interval = MESH_TEMPERATURE_SENSOR_UPDATE_INTERVAL,
        },
        .data = (uint8_t*)&mesh_sensor_sent_value,
        .cadence =
        {
            // Value 1 indicates that cadence does not change depending on the
            // measurements
            .fast_cadence_period_divisor = 1,
            .trigger_type_percentage = WICED_FALSE,
            .trigger_delta_down = 0,
            .trigger_delta_up = 0,
        }
    }
};
```

```

        .min_interval          = (1 << 12), // minimum interval for sending
                                   // data by default is 4 seconds
        .fast_cadence_low      = 0,
        .fast_cadence_high     = 0,
    },
    .num_series                = 0,
    .series_columns            = NULL,
    .num_settings              = 1,
    .settings                  = sensor_settings,
},
};

```

#### 6.1-2B-4 PROPERTIES

If any of the elements have properties associated with them, they are specified in an array of property structures. Each entry in the array specifies one property.

Each element in the device that contains properties has its own array to specify those properties just like with the model and sensor arrays. If there are no properties for a given element, then this array is not required and can be deleted.

An example of a property array for an element with one property (firmware revision) is shown here:

```

wiced_bt_mesh_core_config_property_t mesh_element1_properties[] =
{
    {
        .id          = WICED_BT_MESH_PROPERTY_DEVICE_FIRMWARE_REVISION,
        .type         = WICED_BT_MESH_PROPERTY_TYPE_USER,
        .user_access  = WICED_BT_MESH_PROPERTY_ID_READABLE,
        .max_len      = WICED_BT_MESH_PROPERTY_LEN_DEVICE_FIRMWARE_REVISION,
        .value        = mesh_prop_fw_version
    },
};

```

#### 6.1-2B-5 ELEMENTS

This is one array that configures the elements in the device. There is one entry in the array for each element in the device. The entries define the element's location, default transition time, power up state, etc. Each entry also points to the model array, sensor array (if there is one) and property array (if there is one) for that element.

An example element array for a device with one element is shown here. Note the pointers provided to `mesh_element1_properties` and `mesh_element1_models`. In this case there is no sensor so `sensors_num` is set to 0 and `NULL` is specified for the pointer. The code example applications include comments explaining what each element means.

```

wiced_bt_mesh_core_config_element_t mesh_elements[] =
{
    {
        .location = MESH_ELEM_LOC_MAIN,
        .default_transition_time = MESH_DEFAULT_TRANSITION_TIME_IN_MS,
        .onpowerup_state = WICED_BT_MESH_ON_POWER_UP_STATE_RESTORE,
        .default_level = 0,
        .range_min = 1,
        .range_max = 0xffff,
        .move_rollover = 0,
        .properties_num = MESH_APP_NUM_PROPERTIES,
        .properties = mesh_element1_properties,
    },
};

```

```

        .sensors_num = 0,
        .sensors = NULL,
        .models_num = MESH_APP_NUM_MODELS,
        .models = mesh_element1_models,
    },
};

```

## 6.1-2B-6 DEVICE CONFIGURATION

The final structure contains information such as product ID, vendor ID, etc., as well as features such as relay, GATT proxy, friend, and low power. This structure also specifies how many replay caches are available, which limits how many other devices can send application messages to this device. If the node is a friend node or a low power node then those settings are specified in this structure (details below). Finally, a pointer to the element array is provided.

An example mesh configuration structure is shown here. Note the pointer provided to the mesh\_elements array. The code example firmware includes comments explaining what each element means.

```

wiced_bt_mesh_core_config_t mesh_config =
{
    .company_id      = MESH_COMPANY_ID_CYPRESS,
    .product_id      = MESH_PID,
    .vendor_id       = MESH_VID,
    .replay_cache_size = MESH_CACHE_REPLAY_SIZE,
    .features         = WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND |
                       WICED_BT_MESH_CORE_FEATURE_BIT_RELAY |
                       WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER,

    .friend_cfg      =
    {
        .receive_window      = 200,
        .cache_buf_len       = 300
    },
    .low_power        =
    {
        .rssi_factor         = 0,
        .receive_window_factor = 0,
        .min_cache_size_log   = 0,
        .receive_delay        = 0,
        .poll_timeout         = 0
    },
    .gatt_client_only    = WICED_FALSE,
    .elements_num        = (uint8_t)(sizeof(mesh_elements) / sizeof(mesh_elements[0])),
    .elements            = mesh_elements
};

```

The Friend configuration parameters are:

- **receive\_window:** The time window (in ms) that an LPN must listen for a response from its Friend. Lower values allow LPN nodes to turn off quicker thereby saving more power since they don't need to listen in as wide a window but that gives the Friend node less time to prepare a response (see the figure below receive\_delay)
- **cache\_buf\_len:** The number of bytes allocated to store messages for all LPNs supported by the Friend. Each message is 34 bytes long.
- **max\_lpn\_num:** Maximum number of LPNs that can be supported by a Friend.

The LPN configuration parameters are:


- **rss\_factor** and **receive\_window\_factor**: These are weights that are used to determine how "good" a potential friend will be. Both have a range of 1 – 2.5 in steps of 0.5. They allow the application to prioritize the importance of signal strength vs. delay of response. A potential Friend sees a friend request from an LPN and sends its friend offer after a delay calculated using this formula:

$$\text{Friend offer delay} = (\text{receive\_window\_factor} * \text{receive\_window}) - (\text{rss\_factor} * \text{RSSI})$$

An LPN will pick the first friend to respond, since it has the lowest calculated value.

- **min\_cache\_size\_log**: The minimum number of messages (not bytes) the Friend must be able to hold for the LPN.
- **receive\_delay**: This is a time (in ms) requested by the LPN before the Friend can respond to a request. This allows the LPN to stop listening for a time while the Friend prepares its response.


The relationship between **receive\_delay** and **receive\_window** can be seen here:

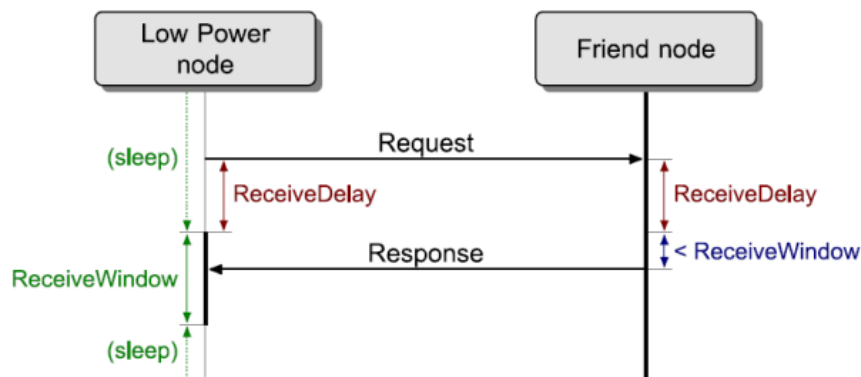

(This figure is taken from the Bluetooth Specification)

- **poll\_timeout**: This is the maximum time (in ms) between consecutive requests from an LPN. If a Friend node doesn't get a request within **poll\_timeout**, it will terminate the friendship. The LPN will not know the friendship is terminated until it sends a request 6 times and does not receive a response. At that point the LPN will begin searching for a new Friend.

The figure below illustrates how the different variables interact with each other to configure the mesh device.

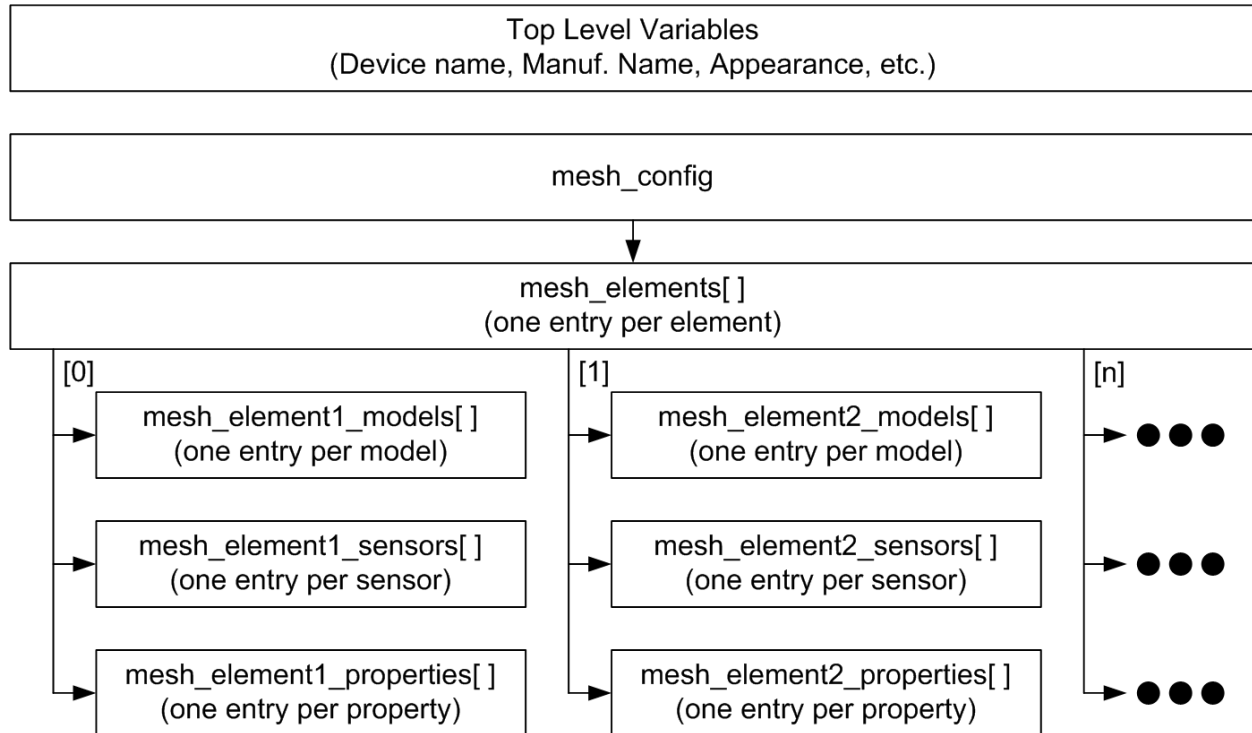

## 6.1-2C USER FUNCTION CALLBACKS

After the configuration variables, there must be a structure defined that contains a table of pointers to the functions that will be called by various mesh events. The structure looks like the following. Note that NULL can be specified for any of the functions that are not required by the user application functionality. Each of the items from the table are discussed in more detail below.

```

wiced_bt_mesh_app_func_table_t wiced_bt_mesh_app_func_table =
{
    mesh_app_init,           // application initialization
    NULL,                   // Default SDK platform button processing
    NULL,                   // GATT connection status
    mesh_app_attention,      // attention processing
    NULL,                   // notify period set
    NULL,                   // WICED HCI command
    NULL,                   // LPN sleep
    NULL,                   // factory reset
};
  
```



## 6.1-2C-1 APPLICATION INITIALIZATION

This function is called once the mesh stack is running and it is ready for the user application to perform any initialization that it requires. The initialization function takes one `wiced_bool_t` parameter called `is_provisioned` which is passed in by the stack. That is, the prototype for the application initialization function is:

```
typedef void(*wiced_bt_mesh_app_init_t)(wiced_bool_t is_provisioned);
```

In addition to any user initialization, the application initialization function should initialize any models, sensors, or property servers that the device requires (other than the required core mesh models). For the element model example shown in the previous section, the following would be placed in the application initialization function:

```
// Initialize Light Lightness Server and register a callback which will be executed
when

// it is time to change the brightness of the bulb

wiced_bt_mesh_model_light_lightness_server_init(MESH_LIGHT_LIGHTNESS_SERVER_ELEMENT_IN
DEX,

    mesh_app_message_handler, is_provisioned);

// Initialize the Property Server. We do not need to be notified when Property is
set,

// because our only property is readonly

wiced_bt_mesh_model_property_server_init(MESH_LIGHT_LIGHTNESS_SERVER_ELEMENT_INDEX,
NULL,

    is_provisioned);
```

The arguments to these initialization functions are:

- Element Index: This is the index of the element in the element array.
- Callback function: The function that is called when a message is received for the model (use NULL if the user application doesn't need a message callback)
- `is_provisioned`: This indicates whether a device has been provisioned or not. If a device has not been provisioned then configuration data for the model is deleted from NVRAM.

## 6.1-2C-2 BUTTON PROCESSING

The function specified here is a callback to the user application to configure button functionality. Typically, the user would configure the buttons with interrupts and then would use interrupt callback functions to process button events. The prototype for this function is:

```
typedef void(*wiced_bt_mesh_app_hardware_init_t)(void);
```

If the platform being used as the target device contains a push button but this callback is specified as NULL, the button is configured in the mesh\_application.c library file to perform a factory reset on the device whenever the button is pressed and then released. Factory reset will return the device to an unprovisioned state.

---

### 6.1-2C-3 GATT CONNECTION STATUS

The function specified here is called when a GATT connection event occurs. That is, when there is a connection up or down GATT callback event. It is passed a structure with the GATT connection status of type wiced\_bt\_gatt\_connection\_status\_t. That is, the prototype for the function is:

```
typedef void (*wiced_bt_mesh_app_gatt_conn_status_t)(wiced_bt_gatt_connection_status_t
*p_status);
```

---

### 6.1-2C-4 ATTENTION PROCESSING

This function is called by the stack whenever it wants the device to alert the user of its presence. For example, it may be used to identify the device that is being provisioned so that the user can visually identify it from a group of unprovisioned nodes.

It is up to the hardware to determine how that alert should be done – e.g. blink and LED, sound a buzzer, etc. The stack provides the index of the element that should be used and a length of time for the alert in seconds from 0 (stop alert) up to 0xFF. The prototype for the alert function is:

```
typedef void (*wiced_bt_mesh_app_attention_t)(uint8_t element, uint8_t time);
```

Since the stack provides a length of time for the attention signal to occur, it is typical for the callback function to use a seconds timer to control when the attention signal stops.

---

### 6.1-2C-5 NOTIFY PERIOD SET

Depending on the model, this function may be called to indicate to the application that it needs to periodically send updates. The function prototype is:

```
typedef wiced_bool_t (*wiced_bt_mesh_app_notify_period_set_t)(uint8_t element,
                                                             uint16_t company_id,
                                                             uint16_t model_id,
                                                             uint32_t time);
```

The arguments provided by the stack are the element, company\_id, model\_id, and the time for periodic updates to be sent in seconds. If the model is a BT SIG defined model, the company\_id will be MESH\_COMPANY\_ID\_BT\_SIG. If it is a vendor specific model, the company\_id will be specific to that vendor (e.g. MESH\_COMPANY\_ID\_CYPRESS).

If the value of time indicated by the stack is 0 then the user application should NOT send periodic updates.

The return value is a wiced\_bool\_t which should be returned as WICED\_TRUE if the application will take care of periodic publications for the specified element, company\_id, and model\_id. This allows the application to handle periodic status updates for some models but not others.

It is mandatory to implement this functionality on sensors (i.e. WICED\_BT\_MESH\_MODEL\_SENSOR\_SERVER). If a device does not have sensors, support for this callback is optional. If a device does not implement this callback it can just specify NULL. Applications that do not want to handle this callback should report all changes to the local states to the Mesh Models library. This will be discussed in a minute.

---

### 6.1-2C-6 WICED HCI COMMAND

This function is used if the application needs to interpret HCI commands received from a host device.

```
typedef uint32_t (*wiced_bt_mesh_app_proc_rx_cmd_t)(uint16_t opcode, uint8_t *p_data,
                                                    uint32_t length);
```

As you can see, the function takes three arguments: the command opcode, a pointer to the command parameters, and the length of the command parameters.

---

### 6.1-2C-7 LOW POWER NODE (LPN) SLEEP

The stack will call this function when it is safe to enter Timed Wake mode. The stack provides the length of time in milliseconds that it does not require any processing, so the application can go into Timed Wake for up to that length of time. It is up to the user application to determine whether to enter Timed Wake mode or not, and to wake up at the appropriate time. The prototype for this function is:

```
typedef void (*wiced_bt_mesh_app_lpn_sleep_t)(uint32_t duration);
```

---

### 6.1-2C-8 FACTORY RESET

If a function is provided here, that function will be executed before a factory reset is performed. This is necessary if the user application has NVRAM data that needs to be erased when a factory reset is done. After that function returns, a factory reset will be performed to return the device to an unprovisioned state. The prototype for this function is:

```
typedef void (*wiced_bt_mesh_app_factory_reset_t)(void);
```

---

### 6.1-2D SENDING MESSAGES

The model initialization functions described above allow the user to specify a callback function when a message is received. On the other hand, when the application has a message that it needs to send, it must call a function to send the appropriate message. For example, a Generic OnOff client may send a message using:

```
wiced_result_t wiced_bt_mesh_model_onoff_client_set(uint8_t element_idx,
                                                    wiced_bt_mesh_onoff_set_data_t* p_data);
```

Likewise, a sensor server may send a status message using:

```
wiced_result_t wiced_bt_mesh_model_sensor_server_data(uint8_t element_idx, uint16_t property_id,
                                                       void *p_ref_data);
```

More examples of messages will be seen in the mesh demo starter applications in the next section.

## 6.1-2E NOTIFYING THE MESH MODEL LIBRARY OF LOCAL CHANGES

In addition to sending messages over the network, it is also necessary in some cases to notify the Mesh Model Library of changes to local values. That is, if a value can be changed locally, the change should be reported so that the stack will be able to send the correct value when a client on the network requests it. For example, if a light on a light lightness server device can be turned on or off by the local hardware, it should use the following function to keep the library synchronized whenever the local value changes:

```
void wiced_bt_mesh_model_light_lc_onoff_changed(uint8_t element_idx,
                                                wiced_bt_mesh_onoff_set_data_t *p_status);
```

This is not required for sensor models because in that case the stack will call a report callback function whenever it receives a get message from a client, so it will always get the most recent sensor value before sending it out.

## 6.2 MESH DEMO STARTER APPLICATIONS

ModusToolbox contains a wealth of example apps and snips for mesh networking. There are four demo starter applications built into the Bluetooth SDK as well as dozens of online examples available on GitHub.


This section covers details about the four mesh demo starter applications and explains how they interact with each other. These demos are available for multiple mesh kits including CYBT213043-MESH and CYW920819EVB-02.

A fifth demo utilizing an external ADI sensor on an Arduino Shield provides an example for adding your own external sensors. This demo is targeted for CYW920819EVB-02 kit, which has an Arduino header.

### 6.2-1 APPLICATION SETTINGS

Each of the mesh applications has a settings window that looks like this:

The first four are platform settings that are common to all Bluetooth applications. The three debug trace options enable UART messages from various library functions which can be very useful for debugging. The REMOTE\_PROVISION\_SRV option is currently unused in the demo applications. The LOW\_POWER\_NODE option is used to enable the low power functionality of a node if the application implements the low power feature.

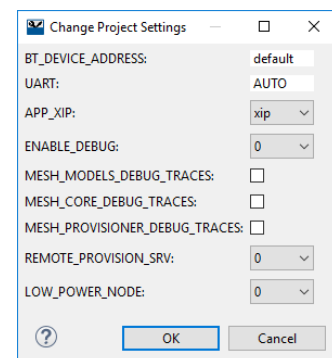

### 6.2-2 BLE\_MESH\_LIGHTDIMMABLE (SERVER)

Most of the code snippets shown as examples up to now have been from the BLE\_MESH\_LightDimmable application so most of the configuration is already familiar to you. This application controls an LED which can be turned on/off and can also be dimmed via a PWM.

## 6.2-2A CONFIGURATION

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE WICED_BT_MESH_MODEL_USER_PROPERTY_SERVER WICED_BT_MESH_MODEL_LIGHT_LIGHTNESS_SERVER
Sensors	N/A
Properties	WICED_BT_MESH_PROPERTY_DEVICE_FIRMWARE_REVISION
Features	WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND WICED_BT_MESH_CORE_FEATURE_BIT_RELAY WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER

## 6.2-2B USER APPLICATION FUNCTIONALITY

The top-level file for the user application is `light_dimmable.c`. There are helper functions to control the LED in `led_control.c/h`.

Two of the mesh callback functions are registered for this application: application initialization (`mesh_app_init`) and attention processing (`mesh_app_attention`).

**mesh\_app\_init:** The application initialization function does the following:

- Set the firmware version
- Initialize a 1 second timer (including specifying the timer callback function (`attention_timer_cb`) that will be used for attention processing)
- Call a function to set up a PWM that will be used to drive the LED (`led_control_init`)
- Initialize the two models
  - The light lightness server model registers a message callback function (`mesh_app_message_handler`)
  - The property server model does not register a callback because the only property is read only so there is no action required for received messages. That is, the stack will handle sending the fixed property value when it is requested.

**mesh\_app\_message\_handler:** The message handler for the light lightness server model only responds to one event - `WICED_BT_MESH_LIGHT_LIGHTNESS_SET`. For that event, the message handler calls the function `mesh_app_process_set_level` which takes the value of `lightness_actual_present` and converts it to a percentage brightness as an 8-bit value. The value is then sent to the function `led_control_set_brightness_level` which sets the PWM duty cycle to achieve the desired brightness.

**mesh\_app\_attention:** The attention callback starts the timer (or stops it if the attention time is 0). Every 1 second, the timer callback is called, and it does whatever is necessary including decrementing the remaining time.

**Button Processing:** Since no callback function is provided for button processing, the default behavior is used. That is, if the target kit has a button defined in its platform, pressing and releasing the button will result in a factory reset that removes all mesh provisioning information from the device.

### 6.2-3 BLE\_MESH\_ONOFFSWITCH (CLIENT)

This application demonstrates a basic on/off client. It can be used in conjunction with a kit that is running the BLE\_MESH\_LightDimmable application so that it can control the LED on that kit over the mesh network.

#### 6.2-3A CONFIGURATION

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE WICED_BT_MESH_MODEL_ONOFF_CLIENT
Sensors	N/A
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)

#### 6.2-3B USER APPLICATION FUNCTIONALITY

The top-level file for the user application is on\_off\_switch.c.

Two of the mesh callback functions are registered for this application: application initialization (mesh\_app\_init) and button processing (mesh\_app\_hardware\_init).

**mesh\_app\_init:** The application initialization function in this case only needs to do one thing. That is, it initializes the onoff client model. The onoff client model has no callback function because it does not check the result of transmission messages or status messages.

**mesh\_app\_hardware\_init:** This function sets up the default button on the kit to have an interrupt on both edges with the callback function button\_interrupt\_handler. It also stores the default state of the button to a global variable. All other application functionality is handled by the interrupt callback.

**button\_interrupt\_handler:** This function does the following:

- Check if the button state has changed. If it has:

- If the button is pressed, increment a counter
- If the button is released, calculate the time that it was pressed:
  - If the button was pressed more than 15 seconds, do a factory reset.
  - Otherwise, call the `process_button_push` function.

**process\_button\_push:** This function sends a mesh message to toggle the on/off state of whatever device(s) it is controlling. It uses the default transition time and a delay of 0.

## 6.2-4 (ADVANCED) BLE\_MESH\_DIMMER (CLIENT)

This application demonstrates a level client. It can be used in conjunction with a kit that is running the BLE\_MESH\_LightDimmable application so that it can control both on/off and dimming of the LED on that kit over the mesh network.

### 6.2-4A CONFIGURATION

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE WICED_BT_MESH_MODEL_LEVEL_CLIENT
Sensors	N/A
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)

### 6.2-4B USER APPLICATION FUNCTIONALITY

The top-level file for the user application is `dimmer.c`. There are helper functions to handle the button in `button_control.c/h`

Two of the mesh callback functions are registered for this application: application initialization (`mesh_app_init`) and button processing (`button_hardware_init`).

**mesh\_app\_init:** The application initialization function calls the helper function `button_control_init` and then initializes the level client model. The model has a callback function called `mesh_app_message_handler` that is used to act on messages that come back from the server.

**mesh\_app\_message\_handler:** The message callback function for the level client handles two events:

**WICED\_BT\_MESH\_TX\_COMPLETE:** This event occurs when the light lightness model responds that a transmission is complete.

**WICED\_BT\_MESH\_LEVEL\_STATUS:** This event occurs when a status message is received from the light lightness model. The callback function prints out the current level, the target level, and the time remaining in the transition.

**button\_control\_init:** This function initializes a timer and registers the callback function `button_timer_callback`. It then saves the current button state.

**button\_hardware\_init:** This function just sets up the default button on the kit to have an interrupt on both edges with the callback function `button_interrupt_handler`. All other application functionality is handled by the interrupt callback.

**button\_interrupt\_handler:** This function does the following:

- If the button state has not changed, just return.
- If the button is pressed, start a 500 ms timer.
- If the button was released after being held down for less than 500 ms, call `button_set_level` to send a message to toggle the LED on or off.
- If the button has been held down for more than 500ms but less than 15 seconds, call `button_set_level` to send a final message to adjust the brightness of the LED.

**button\_timer\_callback:** The 500 ms timer callback calculates the next brightness value for the LED and calls `button_set_level` to send a message to the server to adjust the brightness of the LED .

**button\_set\_level:** This function sends a level message to the server using `wiced_bt_mesh_model_level_client_set`.

## 6.2-5 (ADVANCED) BLE\_MESH\_TEMPERATURE\_SENSOR

This application demonstrates a sensor server. In this case, the sensor measures temperature. It sends status messages to report values on a periodic basis.

### 6.2-5A CONFIGURATION

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

Models	WICED_BT_MESH_DEVICE WICED_BT_MESH_MODEL_SENSOR_SERVER
Sensors	WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_TEMPERATURE
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND WICED_BT_MESH_CORE_FEATURE_BIT_RELAY WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER



	WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)
--	--

## 6.2-5B USER APPLICATION FUNCTIONALITY

The top-level file for the user application is `sensor_temperature.c`.

Four of the mesh callback functions are registered for this application:

- Application initialization (`mesh_app_init`)
- Notify period set (`mesh_app_notify_period_set`).
- Low power node sleep (`mesh_app_lpn_sleep`)
- Factory reset (`mesh_app_factory_reset`)

**mesh\_app\_init:** The application initialization function:

- Sets up a pointer to the sensor configuration structure
- Sets the FW version
- If the device isn't provisioned yet, that's all it does.
- If the device is provisioned, it:
  - Calls `thermistor_init` to initialize the ADC
  - Reads the temperature using `mesh_sensor_get_temperature_8`
  - Initializes a timer and registers the callback function **mesh\_sensor\_publish\_timer\_callback**
  - Reads the stored sensor cadence value from NVRAM
  - Initializes the sensor server and registers two callback functions – one for the sensor report handler and one for the configuration change handler
    - **mesh\_sensor\_server\_report\_handler**
    - **mesh\_sensor\_server\_config\_change\_handler**
  - Sends the initial temperature value by calling **wiced\_bt\_mesh\_model\_sensor\_server\_data**

**mesh\_sensor\_publish\_timer\_callback:** The timer callback function is used to send periodic temperature updates. It uses the cadence value set by the client to determine how often to send an update.

**mesh\_sensor\_server\_report\_handler:** This is the sensor server callback function for report messages. It only implements the case **WICED\_BT\_MESH\_SENSOR\_GET**. For that case, it gets the temperature value using `mesh_sensor_get_temperature_8` and sends it to the client using **wiced\_bt\_mesh\_model\_sensor\_server\_data**.

**mesh\_sensor\_server\_config\_change\_handler:** This is the sensor server callback function for configuration change messages. It implements two cases:

**WICED\_BT\_MESH\_SENSOR\_CADENCE\_SET:** This event occurs when the client requests a change to the sensor cadence. For this case, the user application calls

**mesh\_sensor\_server\_process\_cadence\_changed.** That function updates the cadence, stores its value in NVRAM, and then restarts the publish timer so that cadence changes take effect.

**WICED\_BT\_MESH\_SENSOR\_SETTING\_SET:** This event occurs when the client requests a change to the sensor settings. For this case, the user application calls

**mesh\_sensor\_server\_process\_setting\_changed** which just prints a UART message that the change has been received.

**mesh\_app\_notify\_period\_set:** This function is called when the client requests a notify period change. The function first makes sure that the request is for the correct element (MESH\_TEMPERATURE\_SENSOR\_INDEX), company ID (MESH\_COMPANY\_ID\_BT\_SIG), and model (WICED\_BT\_MESH\_CORE\_MODEL\_ID\_SENSOR\_SRV). If it is, the publish period is updated and the timer is restarted.

**mesh\_app\_lpn\_sleep:** This function calls **wiced\_sleep\_enter\_hid\_off** with the timeout period that is provided by the mesh stack so that the device wakes up at the appropriate time.

**mesh\_app\_factory\_reset:** This function deletes the cadence information from NVRAM before the factory reset occurs.

## 6.2-6 (ADVANCED) BLE\_MESH\_2<sup>ND</sup>\_SENSOR (ANALOG DEVICES RED LIGHT SENSOR)

This application demonstrates how to add a sensor element to the Temperature Sensor Application. In this case, the CN0397 sensor measures RGB light input. There is no standard RGB light input model, so we will use the Ambient Light Sensor Model with the Red Sensor for the data. In the mesh app, you will see 2 devices, one temperature sensor and one light level sensor.

### 6.2-6A CONFIGURATION

The configuration sets up models, properties and features using the variables and structures as described in the previous section. The models, sensors, properties and features implemented are as follows:

#### Temperature Sensor

Models	WICED_BT_MESH_DEVICE WICED_BT_MESH_MODEL_SENSOR_SERVER
Sensors	WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_TEMPERATURE
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND WICED_BT_MESH_CORE_FEATURE_BIT_RELAY WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)

### Red Light Sensor

Models	WICED_BT_MESH_MODEL_SENSOR_SERVER
Sensors	WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_TEMPERATURE
Properties	N/A
Features	WICED_BT_MESH_CORE_FEATURE_BIT_FRIEND WICED_BT_MESH_CORE_FEATURE_BIT_RELAY WICED_BT_MESH_CORE_FEATURE_BIT_GATT_PROXY_SERVER WICED_BT_MESH_CORE_FEATURE_BIT_LOW_POWER (if enabled in application settings)

Both of these sensors support Low Power features. They are excellent candidates for a Low Power Node, but that is not something that we are going to address in this Workshop.

## 6.2-6B USER APPLICATION FUNCTIONALITY

The top-level file for the user application is `sensor_temperature.c`.

Four of the mesh callback functions are registered for this application:

- Application initialization (`mesh_app_init`)
- Notify period set (`mesh_app_notify_period_set`).
- Low power node sleep (`mesh_app_lpn_sleep`)
- Factory reset (`mesh_app_factory_reset`)

**mesh\_app\_init:** The application initialization function:

- Sets up a pointer to the sensor configuration structure
- Sets the FW version
- If the device isn't provisioned yet, that's all it does
- If the device is provisioned, it:
  - o Calls `thermistor_init` to initialize the ADC
  - o Reads the temperature using `mesh_sensor_get_temperature_8`
  - o Initializes the SPI port for reading the CN0397 `wiced_hal_pspi_init`
  - o Initializes the CN0397 with `CN0397_Init()`
  - o Reads the red light sensor using `CN0397_ReadData`
  - o Initializes 2 timers and registers the callback functions
    - mesh\_sensor\_publish\_timer\_callback**  
(this doesn't change from the Temp Sensor)
    - mesh\_red\_sensor\_publish\_timer\_callback**
  - o Reads the stored temper sensor cadence value from NVRAM using:
 

```
#define MESH_TEMPERATURE_SENSOR_CADENCE_NVRAM_ID    WICED_NVRAM_VSID_START
```

o Reads the stored red light sensor cadence value from NVRAM using:

```
#define MESH_RED_SENSOR_CADENCE_VSID          WICED_NVRAM_VSID_START + 0x100
```

Hint: this define need to be created.

o Initializes the 2 sensor servers (MESH\_TEMPERATURE\_SENSOR\_INDEX and (MESH\_RED\_SENSOR\_INDEX) and registers two callback functions – one for the sensor report handler and one for the configuration change handler

```
wiced_bt_mesh_model_sensor_server_init
```

For the Temperature Sensor server nit

- mesh\_temp\_sensor\_server\_report\_handler
- mesh\_sensor\_server\_config\_change\_handler

For the red light sensor server init

- mesh\_red\_sensor\_server\_report\_handler
- mesh\_sensor\_server\_config\_change\_handler

o Sends the initial temperature and red light sensor value by calling

```
wiced_bt_mesh_model_sensor_server_data
```

**mesh\_sensor\_publish\_timer\_callback:** The timer callback function is used to send periodic temperature updates. It uses the cadence value set by the client to determine how often to send an update.

**mesh\_red\_sensor\_publish\_timer\_callback:** The timer callback function is used to send periodic red sensor updates. It uses the cadence value set by the client to determine how often to send an update.

**mesh\_sensor\_server\_report\_handler:** This is the sensor server callback function for report messages. It only implements the case **WICED\_BT\_MESH\_SENSOR\_GET**. For that case, it gets the temperature value using **mesh\_sensor\_get\_temperature\_8** and the red light sensor value using **CN0397\_ReadData** sends the value requested to the client using **wiced\_bt\_mesh\_model\_sensor\_server\_data**.

**mesh\_sensor\_server\_config\_change\_handler:** This is the sensor server callback function for configuration change messages. It implements two cases:

**WICED\_BT\_MESH\_SENSOR\_CADENCE\_SET:** This event occurs when the client requests a change to the sensor cadence. For this case, the user application calls

**mesh\_sensor\_server\_process\_cadence\_changed.** That function updates the cadence, stores its value in NVRAM, and then restarts the publish timer so that cadence changes take effect.

**WICED\_BT\_MESH\_SENSOR\_SETTING\_SET:** This event occurs when the client requests a change to the sensor settings. For this case, the user application calls

**mesh\_sensor\_server\_process\_setting\_changed** which just prints a UART message that the change has been received.

**mesh\_app\_notify\_period\_set:** This function is called when the client requests a notify period change. The function first makes sure that the request is for the correct element (MESH\_TEMPERATURE\_SENSOR\_INDEX), company ID (MESH\_COMPANY\_ID\_BT\_SIG), and model (WICED\_BT\_MESH\_CORE\_MODEL\_ID\_SENSOR\_SRV). If it is, the publish period is updated and the timer is restarted.

**mesh\_app\_lpn\_sleep:** This function calls **wiced\_sleep\_enter\_hid\_off** with the timeout period that is provided by the mesh stack so that the device wakes up at the appropriate time.

**mesh\_app\_factory\_reset:** This function deletes the cadence information from NVRAM before the factory reset occurs.

---

## 6.2-6C CONFIGURING THE 2<sup>ND</sup> SENSOR

```
wiced_bt_mesh_core_config_sensor_t mesh_element2_sensors[] =
{
    {
        .property_id      = WICED_BT_MESH_PROPERTY_PRESENT_AMBIENT_LIGHT_LEVEL,
        .prop_value_len   = WICED_BT_MESH_PROPERTY_LEN_PRESENT_AMBIENT_LIGHT_LEVEL,
        .descriptor =
        {
            .positive_tolerance = MESH_RED_SENSOR_POSITIVE_TOLERANCE,
            .negative_tolerance = MESH_RED_SENSOR_NEGATIVE_TOLERANCE,
            .sampling_function  = MESH_RED_SENSOR_SAMPLING_FUNCTION,
            .measurement_period = MESH_RED_SENSOR_MEASUREMENT_PERIOD,
            .update_interval    = MESH_RED_SENSOR_UPDATE_INTERVAL,
        },
        .data = (uint8_t*)&mesh_red_sensor_sent_value,
        .cadence =
        {
            // Value 0 indicates that cadence does not change depending on the measurements
            .fast_cadence_period_divisor = 32,           // Recommended publish period is 320sec, 32 will
                                                         // make fast period 10sec

            .trigger_type_percentage      = WICED_FALSE, // The Property is Bool, does not make sense to
                                                         // use percentage

            .trigger_delta_down          = 0,           // This will not cause message when presence
                                                         // changes from 1 to 0

            .trigger_delta_up            = 1,           // This will cause immediate message when presence
                                                         // changes from 1 to 0

            .min_interval                = (1 << 10),  // Milliseconds. Conversion to SPEC values is done
                                                         // by the mesh models library

            .fast_cadence_low            = 1,           // If fast_cadence_low is greater than
                                                         // fast_cadence_high and the measured value is
                                                         // either is lower than fast_cadence_high or
                                                         // higher than fast_cadence_low, then the message
                                                         // shall be published with publish period (equals
                                                         // to mesh_sensor_publish_period divided by
                                                         // fast_cadence_divisor_period)

            .fast_cadence_high           = 0,           // is more or equal cadence_low or less then
                                                         // cadence_high. This is what we need.
        },
    },
}
```

```

        .num_series      = 0,
        .series_columns = NULL,
        .num_settings   = 0,
        .settings       = NULL,
    },
};

```

For the `.prop_value_len`, we use the value defined by the BT Sig so that it will be displayed in the app

```
.prop_value_len = WICED_BT_MESH_PROPERTY_LEN_PRESENT_AMBIENT_LIGHT_LEVEL
```

This is a value of 3 which means 3 octets with the MSB being the 1<sup>st</sup> octet. So we define it as follows:

```
uint8_t mesh_red_sensor_sent_value[3] = {0,0,0}; // Ambient Light Sensor Element
```

The tolerances, sampling functions, measurement period and update interval of the red light sensor are not known, so we define them to unknown.

```
// The Red Sensor defines
```

```

#define MESH_RED_SENSOR_POSITIVE_TOLERANCE WICED_BT_MESH_SENSOR_TOLERANCE_UNSPECIFIED
#define MESH_RED_SENSOR_NEGATIVE_TOLERANCE WICED_BT_MESH_SENSOR_TOLERANCE_UNSPECIFIED

#define MESH_RED_SENSOR_SAMPLING_FUNCTION WICED_BT_MESH_SENSOR_SAMPLING_FUNCTION_UNKNOWN
#define MESH_RED_SENSOR_MEASUREMENT_PERIOD WICED_BT_MESH_SENSOR_VAL_UNKNOWN
#define MESH_RED_SENSOR_UPDATE_INTERVAL WICED_BT_MESH_SENSOR_VAL_UNKNOWN

```

For the `.data`, we set up the variable, so you put it's address here

```
.data = (uint8_t*)&mesh_red_sensor_sent_value
```

The rest remain unchanged from the Temperature Sensor configuration

### 6.3 (ADVANCED) OTA

The mesh library GATT definition includes the OTA upgrade service by default. Therefore, it is possible to update the firmware over BLE on an unprovisioned mesh device. However, the 20819 does not have enough on-chip flash to hold two copies of the application so an external flash must be used to support OTA. In this case, the XIP option (execute in place) is used instead of XIP\_PI (execute in place, position independent) since the active application will always be the one in the internal flash while the external flash is used to store new firmware during OTA.

This feature is not supported in the BT\_20819A1 SDK 1.0. It will be available in release 1.1.

## 6.4 (ADVANCED) APPLE HOMEKIT

Apple HomeKit uses a completely different protocol. It is (currently) not based on Bluetooth Mesh but rather on a proprietary protocol that uses WiFi and BLE. The Cypress mesh library will allow devices that support mesh to also support HomeKit in the following ways:

1. Soon: Allow a single device to advertise as both an unprovisioned mesh device and an unpaired HomeKit device. The user can then choose to use it as a mesh device or a HomeKit device but not both at the same time.
2. Future: Allow a single device to be controlled simultaneously by Mesh clients and HomeKit clients.