



BREAKER

USER MANUAL

SYSTEM REQUIREMENTS

XILINX ZYNQ MICROZED APO KIT

ETHERNET CONNECTION


USB TYPE-B

EXTERNAL PC WITH LINUX FOR INSTALLATION

INSTALATION

1) READ IP ADDRESS FROM THE MZAPO SCREEN

(BLACK RECTANGLE - ENABLED VALUE, WHITE RECTANGLE - DISABLED VALUE)

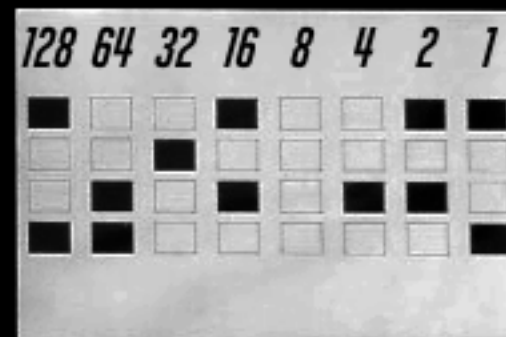


2) OPEN TERMINAL IN GAME FOLDER AT EXTERNAL PC

3) ENTER ". /INSTALL.SH IP_ADDRESS"


4) ENJOY THE GAME



GAME CONTROLS

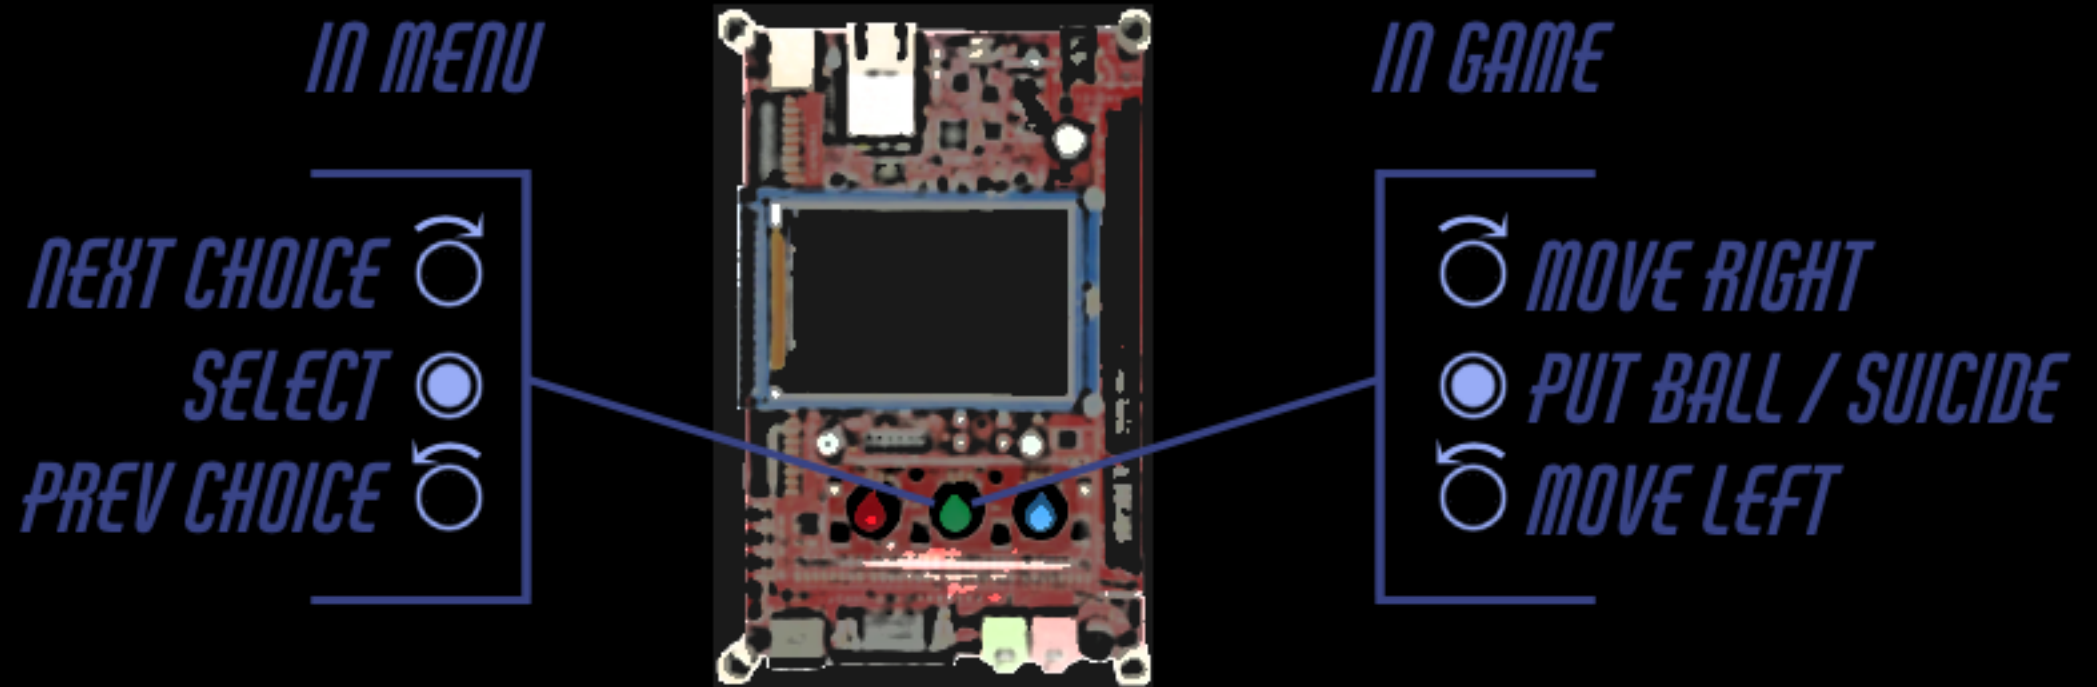

INTERFACE

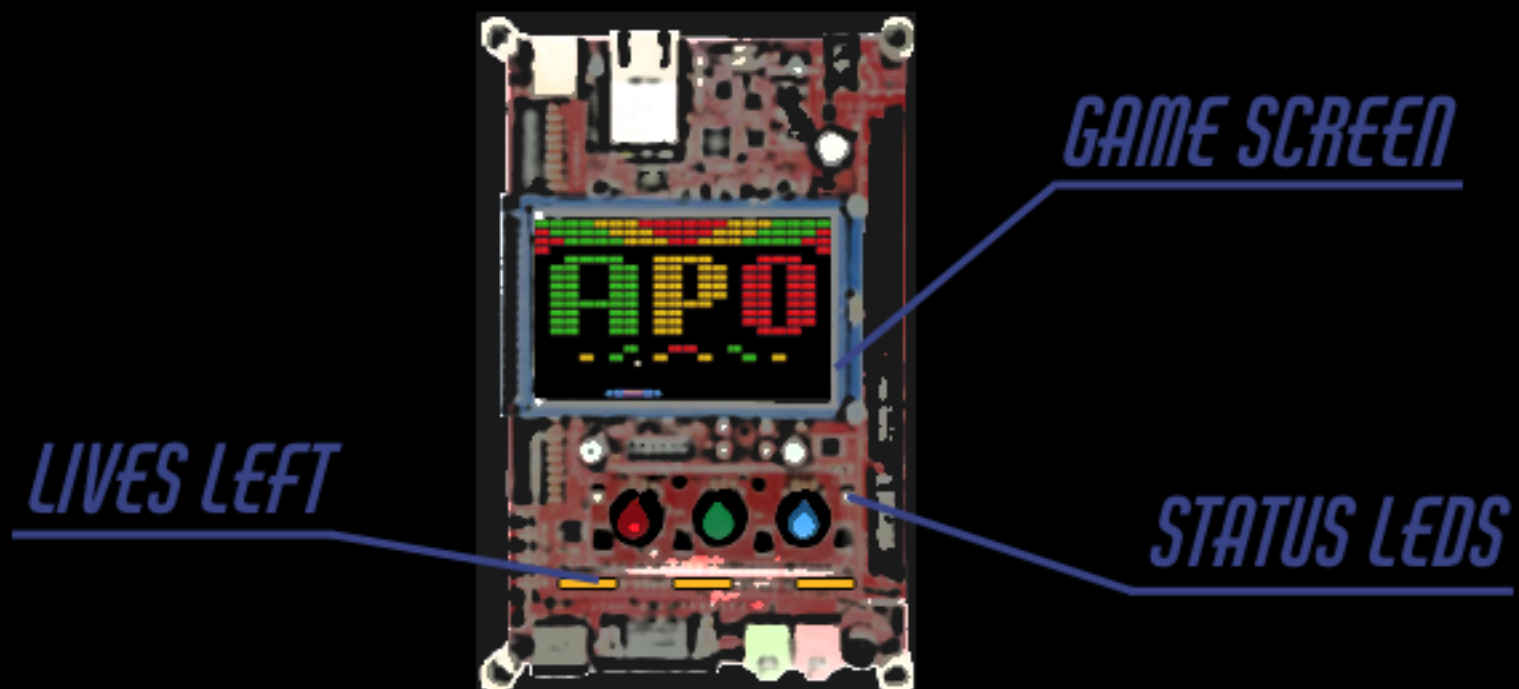

NEW GAME


1) SELECT "PLAY"
FROM THE MAIN MENU




2) SELECT LEVEL, GAME SPEED
AND PRESS "START"




3) DON'T LET THE BALL FALL DOWN
AND BREAK ALL BRICKS

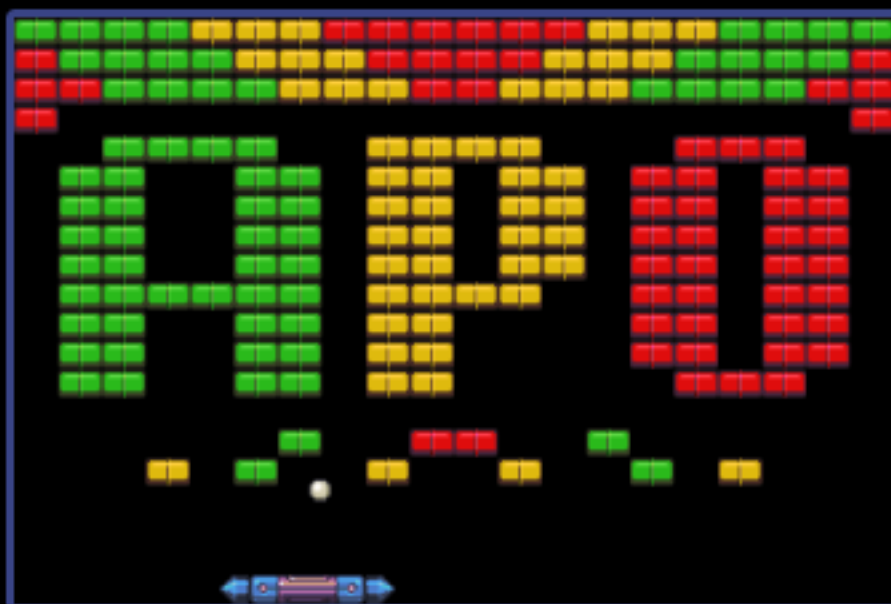

4) PRESS "BACK" TO RETURN
TO THE MAIN MENU

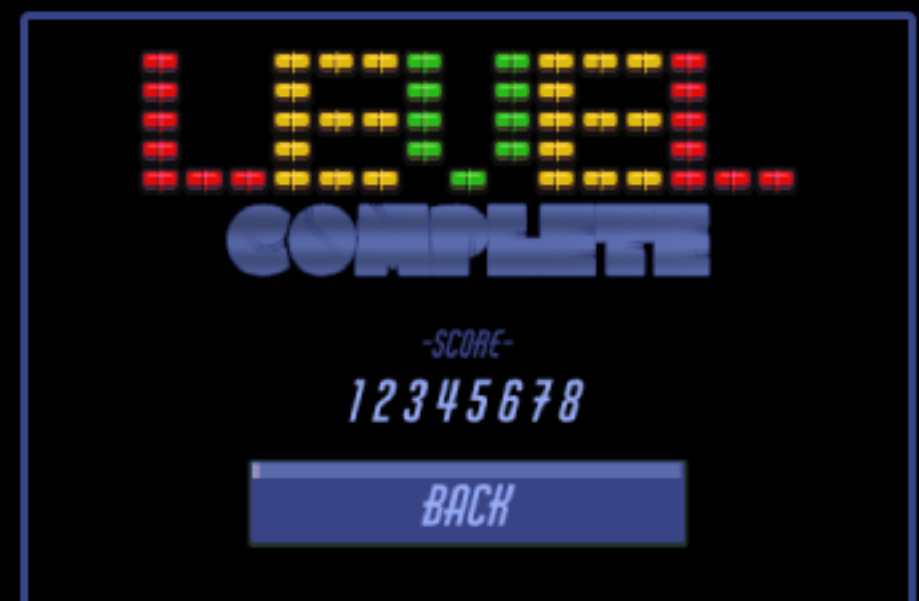


LEVELS

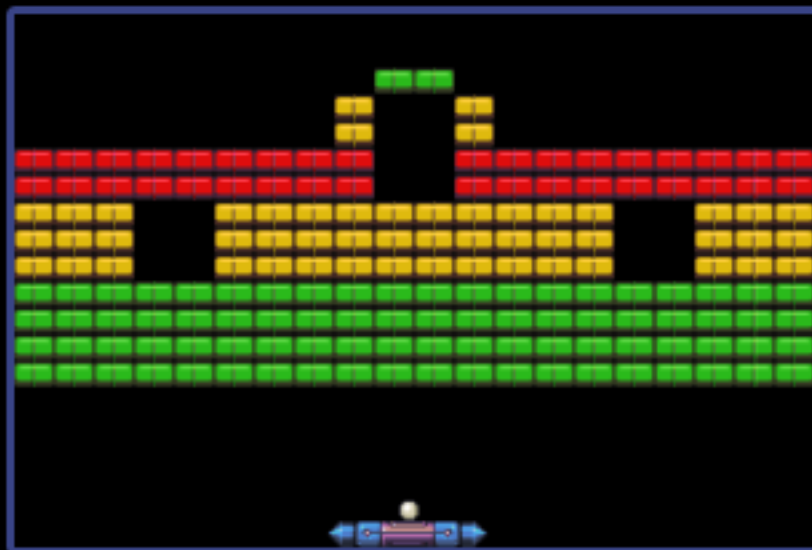


MAX.SCORE
297000




MAX.SCORE
366000

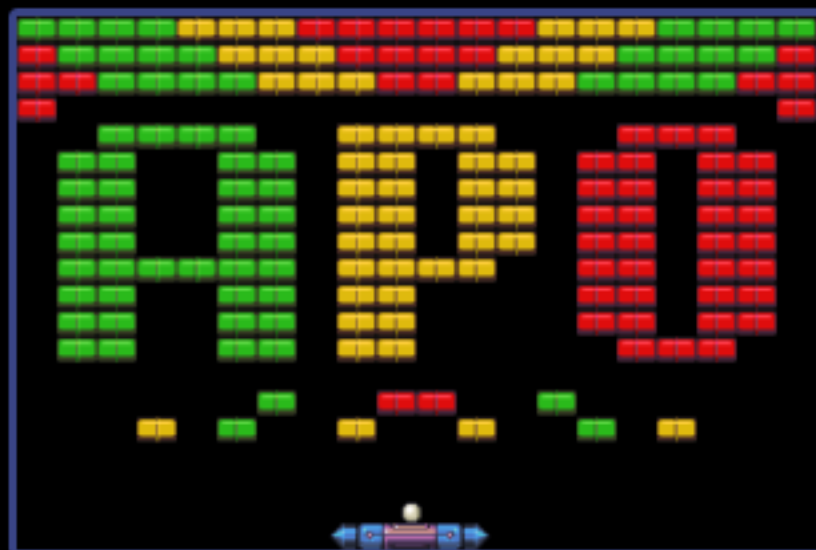

MAX.SCORE
319000

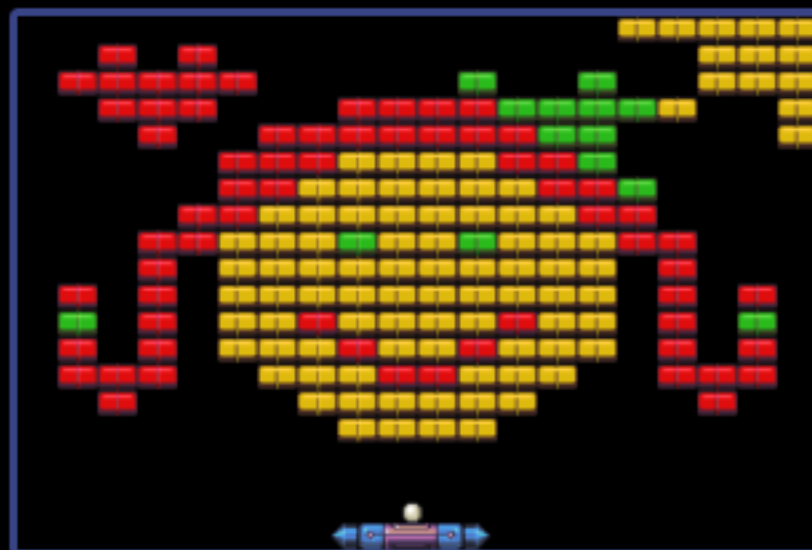

MAX.SCORE
346500

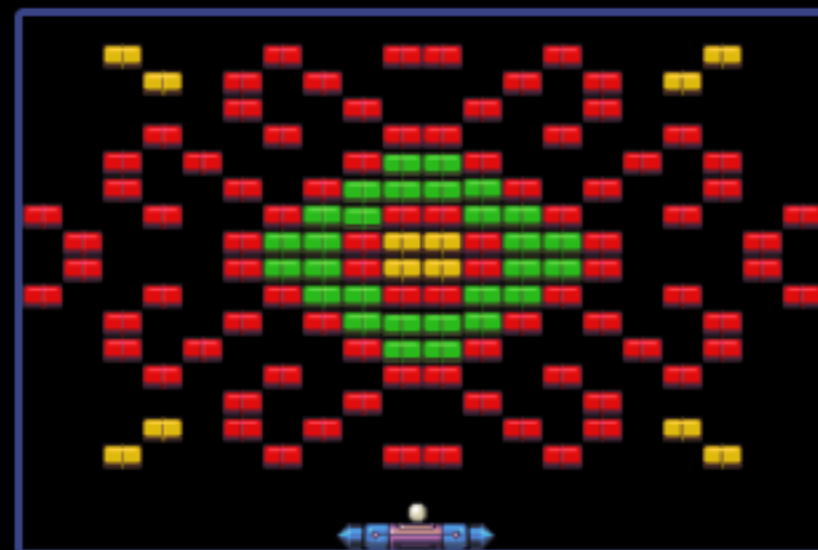

MAX.SCORE
308000

