

## **INSTRUCTION MANUAL FOR PORCH SIGNS**

### **Unpacking and Preparation**

Carefully remove the PVC porch sign from its packaging to avoid scratches or dents. Inspect the surface for any damage and ensure all protective films (if any) are removed. Choose a clean, flat area near your front door, porch, or entryway where the sign will be visible and safely supported.

### **Installation and Display**

This sign is designed for both leaning and hanging display. For a leaning setup, simply place the base of the sign securely against a wall or porch rail to prevent it from tipping in the wind. If you prefer to hang it, use the pre-drilled holes (if included) or affix mounting hooks or adhesive strips rated for outdoor use. Ensure it is straight and secure to maintain aesthetic appeal and stability.

### **Care and Maintenance**

Made from durable, weather-resistant PVC, the sign is built to withstand outdoor elements. To keep it looking vibrant, occasionally wipe it down with a damp cloth to remove dirt or dust. Avoid using harsh chemicals or abrasives. Store indoors during extreme weather conditions or off-seasons to prolong its lifespan and preserve its patriotic design.