

# gpNvm Reference Manual

## API Description

*Elemlf version*

Version 2.10.2.0  
November 15, 2021

# Contents

<b>1</b>	<b>Introduction</b>	<b>2</b>
<b>2</b>	<b>Module Documentation</b>	<b>3</b>
2.1	General NVM functions . . . . .	3
2.2	Element interface NVM functions . . . . .	5
<b>3</b>	<b>Data Structure Documentation</b>	<b>20</b>
3.1	gpNvm_CompatibilityEntry Struct Reference . . . . .	20
3.2	gpNvm_CompatibilityEntry_t Struct Reference . . . . .	20
3.3	gpNvm_ElementDefine_t Struct Reference . . . . .	20
3.4	gpNvm_IdentifiableTag Struct Reference . . . . .	20
3.5	gpNvm_IdentifiableTag_t Struct Reference . . . . .	20
3.6	gpNvm_LookUpTableHeader Struct Reference . . . . .	21
3.7	gpNvm_LookUpTableHeader_t Struct Reference . . . . .	21
3.8	gpNvm_Section_t Struct Reference . . . . .	21
3.9	gpNvm_Tag_t Struct Reference . . . . .	21
<b>4</b>	<b>File Documentation</b>	<b>23</b>
4.1	gpNvm.h File Reference . . . . .	23
4.2	gpNvm_ElemIf.h File Reference . . . . .	32

## Chapter 1

# Introduction

This document describes in a formal manner the API interface that can be used to control all the functionality of the Non-Volatile Memory (NVM) component.

The document covers the element based interface.

## Chapter 2

# Module Documentation

### 2.1 General NVM functions

The general NVM functionality is implemented in these functions.

#### Functions

- void [gpNvm\\_RegisterSection](#) (UInt8 componentId, const ROM [gpNvm\\_Tag\\_t](#) \*tags, UInt8 nbrOfTags, [gpNvm\\_cbCheckConsistency\\_t](#) cbCheckConsistency)

*Registers a component to the NVM software block.*

#### 2.1.1 Detailed Description

Checking and clearing the NVM is made possible by these functions. The implementation of these functions can be unique for each type of NVM used.

#### 2.1.2 Function Documentation

##### gpNvm\_RegisterSection()

```
void gpNvm_RegisterSection (
    UInt8 componentId,
    const ROM gpNvm\_Tag\_t * tags,
    UInt8 nbrOfTags,
    gpNvm\_cbCheckConsistency\_t cbCheckConsistency )
```

Registers a component to the NVM software block. This will define a NVM section. The function should be called from the `_init` function of the component.

##### Parameters

<i>componentId</i>	An unique identifier of the registered section, which will be used further on to refer to this section. The <code>GP_COMPONENT_ID</code> should be used for this.
<a href="#">gpNvm_Tag_t</a>	A pointer to a <code>gpNvmTag_t</code> array allocated in flash containing the information of all nvm-tags of the registered section.
<i>nbrOfTags</i>	The number of tags in the <a href="#">gpNvm_Tag_t</a> array tags.

**Parameters**

<i>cbCheckConsistency</i>	A function pointer to a callback which will be called by the nvm-component if it's performing a consistency check. This allows specific checks on the content of the section which are only known by the component. If specified as NULL, this additional check will be ommitted.
---------------------------	---

## 2.2 Element interface NVM functions

This file contains element specific interface to the gpNvm component.

### Functions

- void [gpNvm\\_Config](#) (const ROM [gpNvm\\_LookUpTableHeader\\_t](#) \*baseTableHeader, const ROM [gpNvm\\_ElementDefine\\_t](#) \*baseTableElements, const ROM [gpNvm\\_VersionCrc\\_t](#) \*inheritedNvmVersion)  
*Configures NVM for base tables other than gpNvm\_elementBaseLUTHeader and gpNvm\_elementBaseLUTElements.*
- void [gpNvm\\_RegisterElement](#) (const ROM [gpNvm\\_IdentifiableTag\\_t](#) \*pTag)  
*Registers an element to the NVM software block.*
- void [gpNvm\\_RegisterElements](#) (const ROM [gpNvm\\_IdentifiableTag\\_t](#) \*pTag, UInt8 nbrOfTags)  
*Registers multiple elements to the NVM software block.*

### 2.2.1 Detailed Description

This header is implicitly included via the main interface header if the element interface diversity is selected. The element interface version of the gpNvm component treats various NVM attributes in a different way than the standard gpNvm version. In the standard version the components register arrays of tags for the NVM attributes which form sections belonging to its component. Tag IDs are derived implicitly from the index of a tag within the section array and if application was to configure a component in such way that attributes are added or dropped, the implicit tag IDs could change. In addition to that, the attributes are placed in the NVM one after another without embedding information to help disambiguate them when the firmware changes.

The element interface offers solution to this problem having in mind also the possibility to reuse inherited standard NVM by the element interface compatible application. The following image illustrates the reference situation (NVM usage of last non-up/downgradeable firmware) and relationship of it to the unique IDs of the attributes:

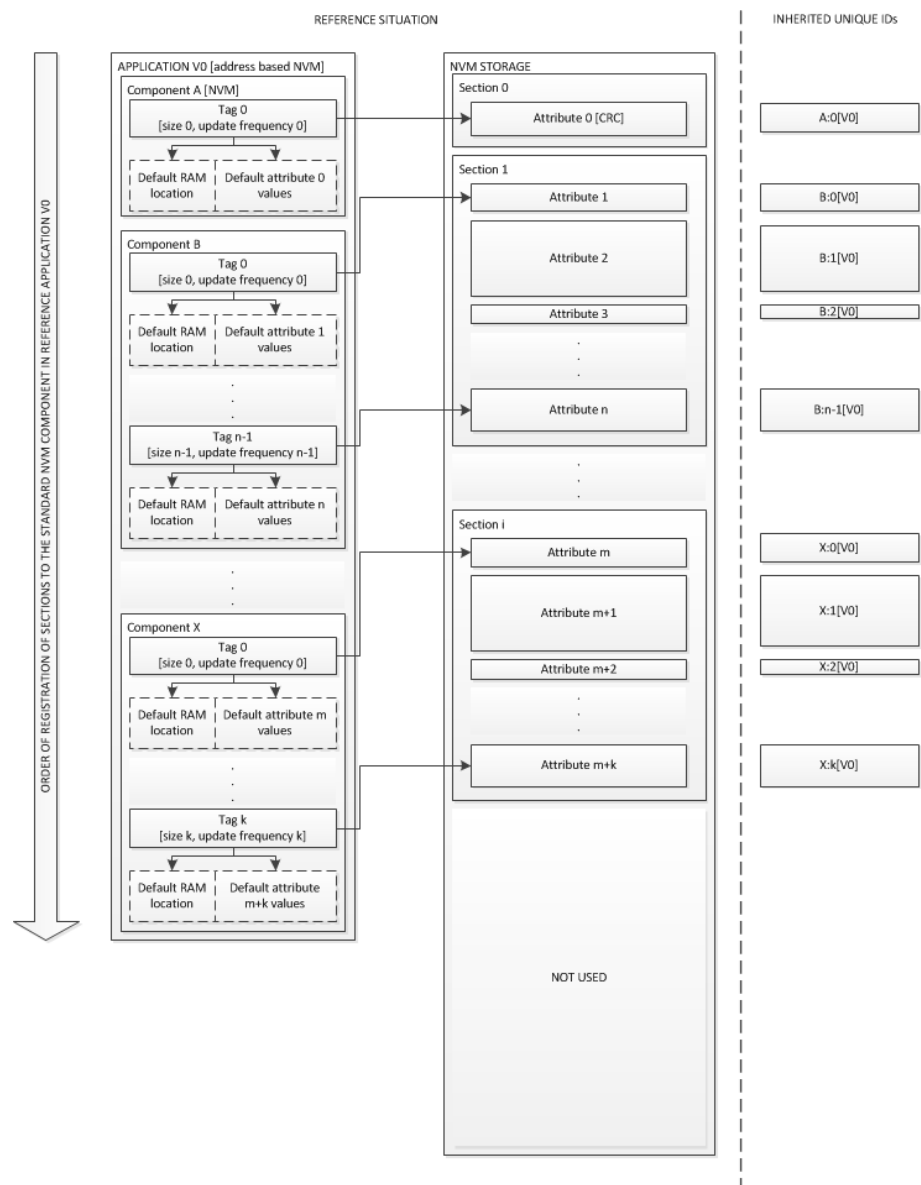 


Figure 2.1: Reference NVM and mapping to UIDs

To resolve the issue of lacking the information about the attributes in the inherited standard NVM, the application is required to provide this information in a form of a program memory look-up table as illustrated in the following image:

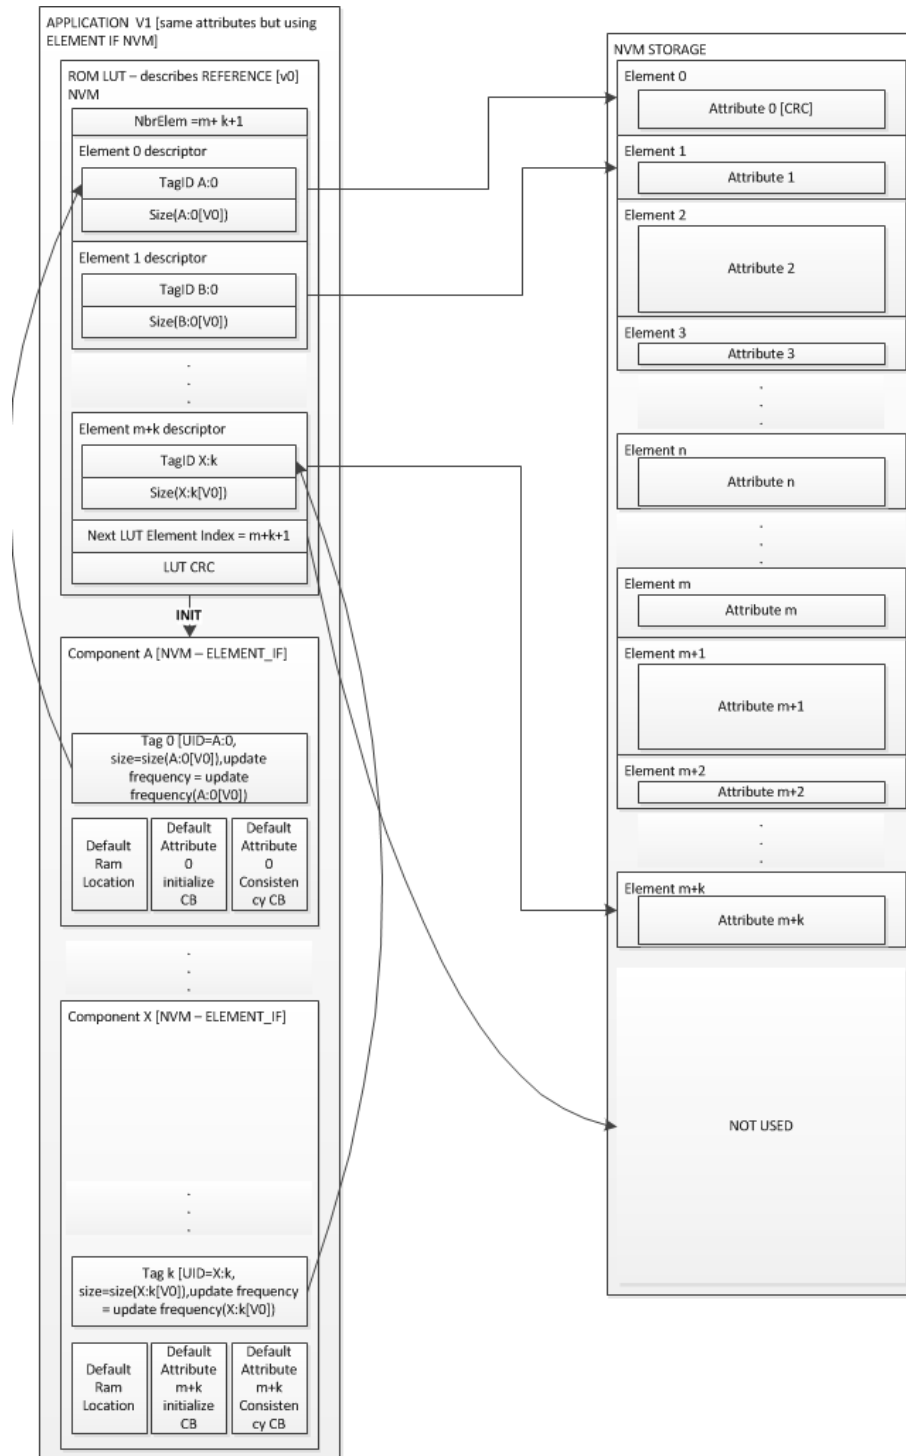 


Figure 2.2: Element interface based application and inherited NVM

Element interface based application is allowed to add/remove attributes and change attribute sizes (with limitation that the common denominator always stays aligned to the beginning of the attribute). The information about the added content into the NVM is embedded in the NVM as linked list of look-up tables. Initial program memory based look-up table is used as starting point



for parsing of this linked list. Each time some component registers attribute not known already in the NVM, NVM look-up table gets extended with this information and new attribute gets its space reserved in the NVM. Look-up tables are NVM elements themselves and as such are limited in size so the link list chaining is provided as mechanism for further extension.

The following images illustrate several typical situations of firmware upgrades and downgrades causing redefinition of the attributes:

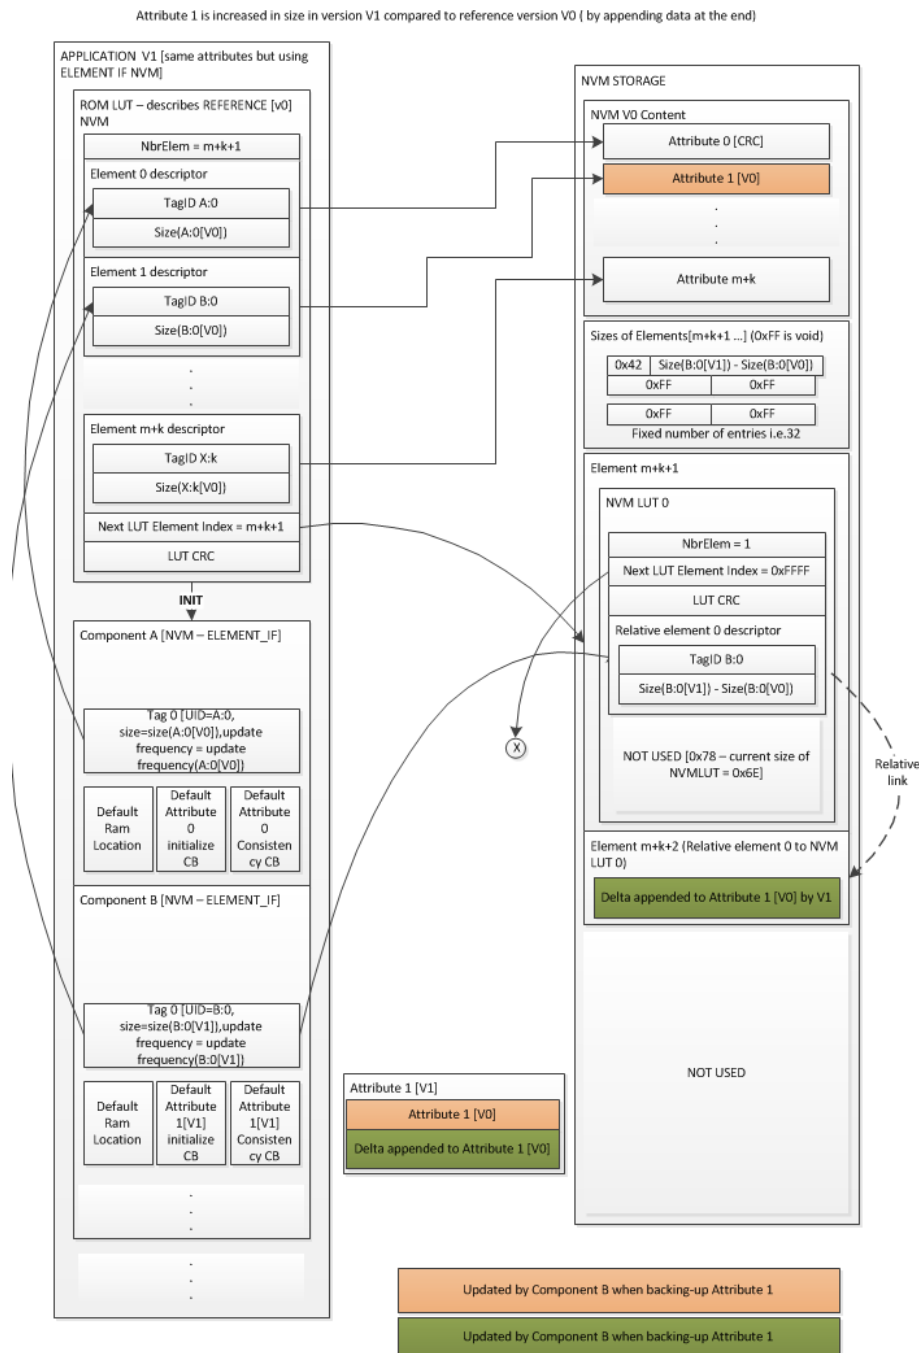 


Figure 2.3: Upgrading to attribute increased in size

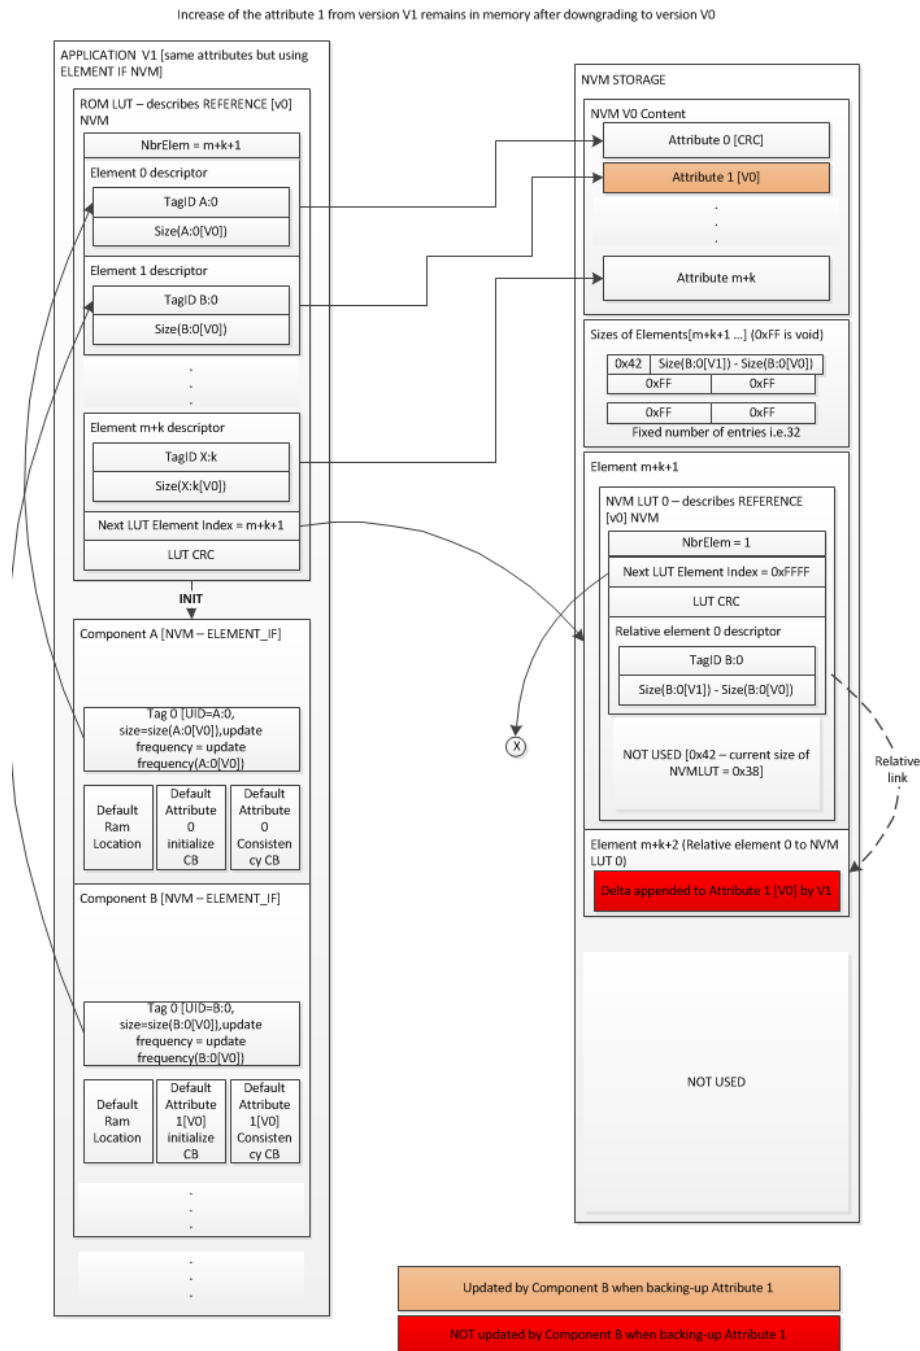 


Figure 2.4: Downgrading to attribute smaller in size

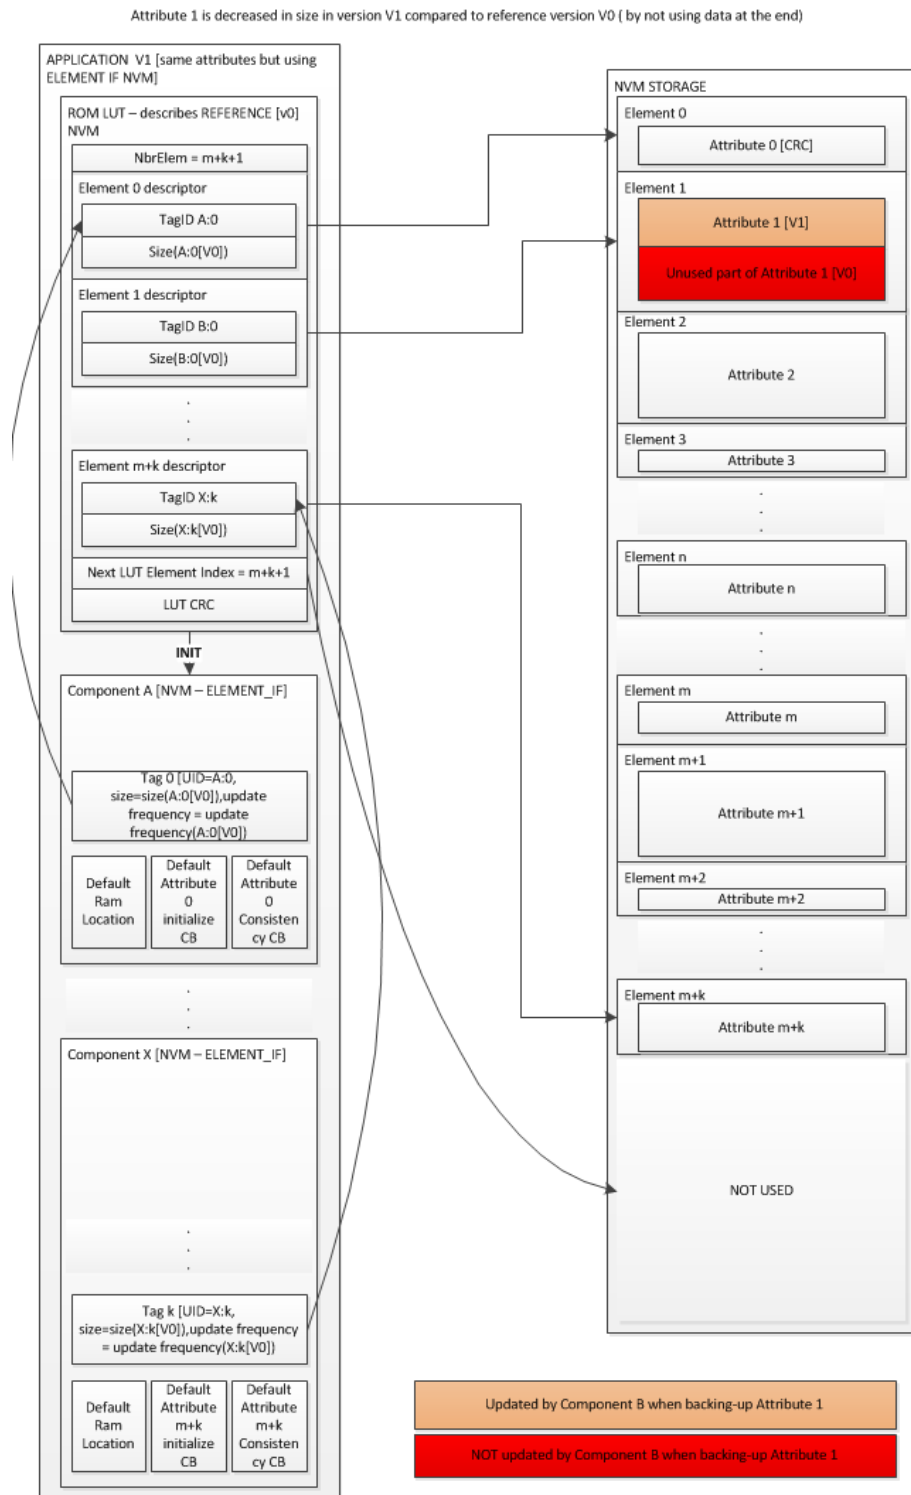 


Figure 2.5: Upgrading to attribute decreased in size

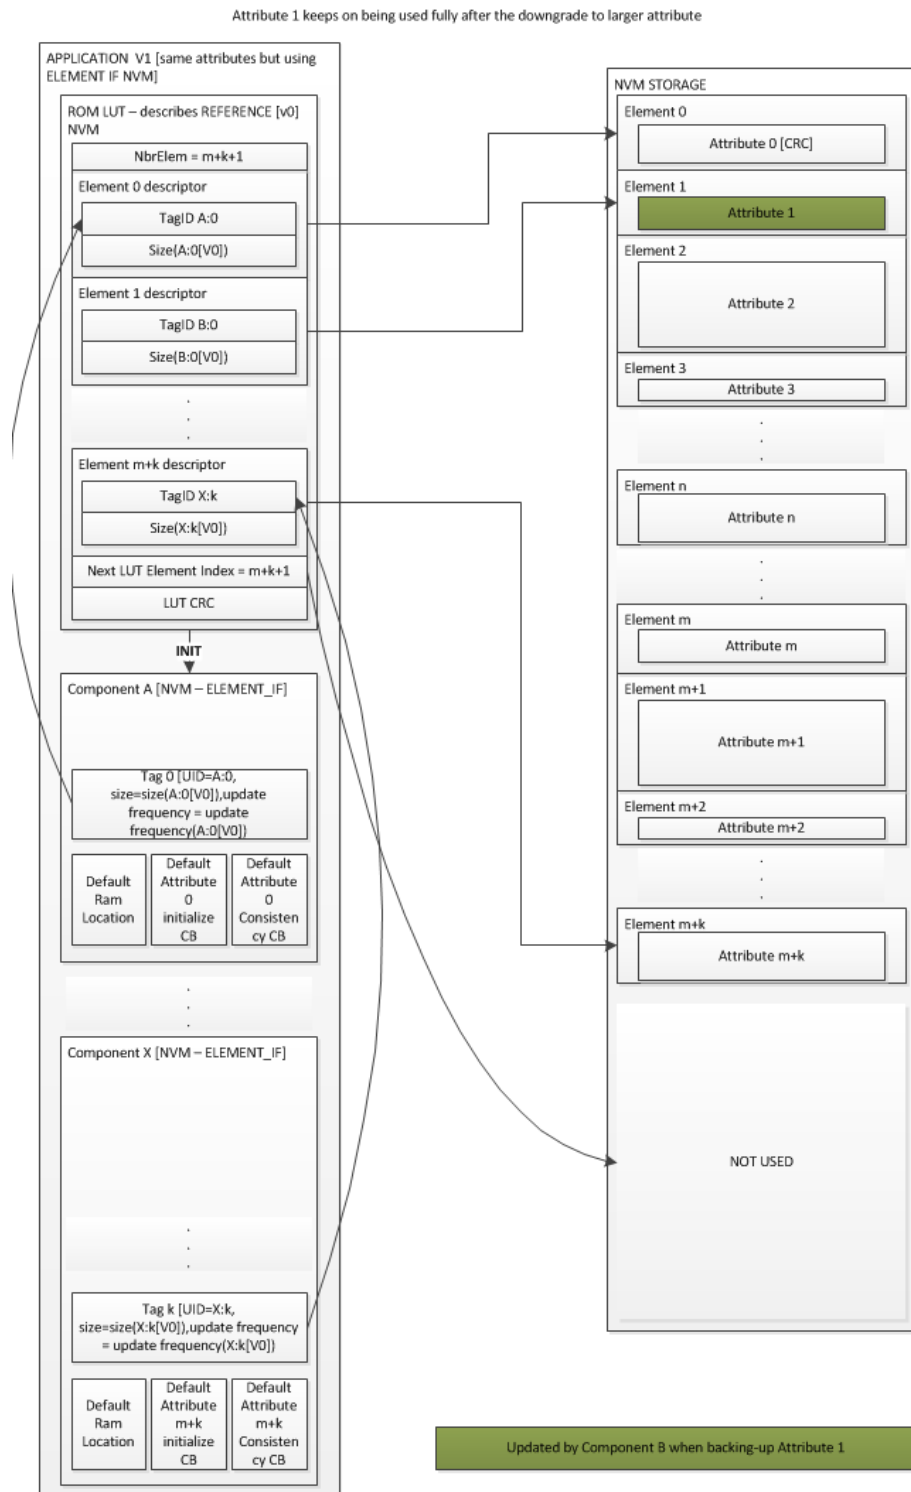 


Figure 2.6: Downgrading to attribute larger in size

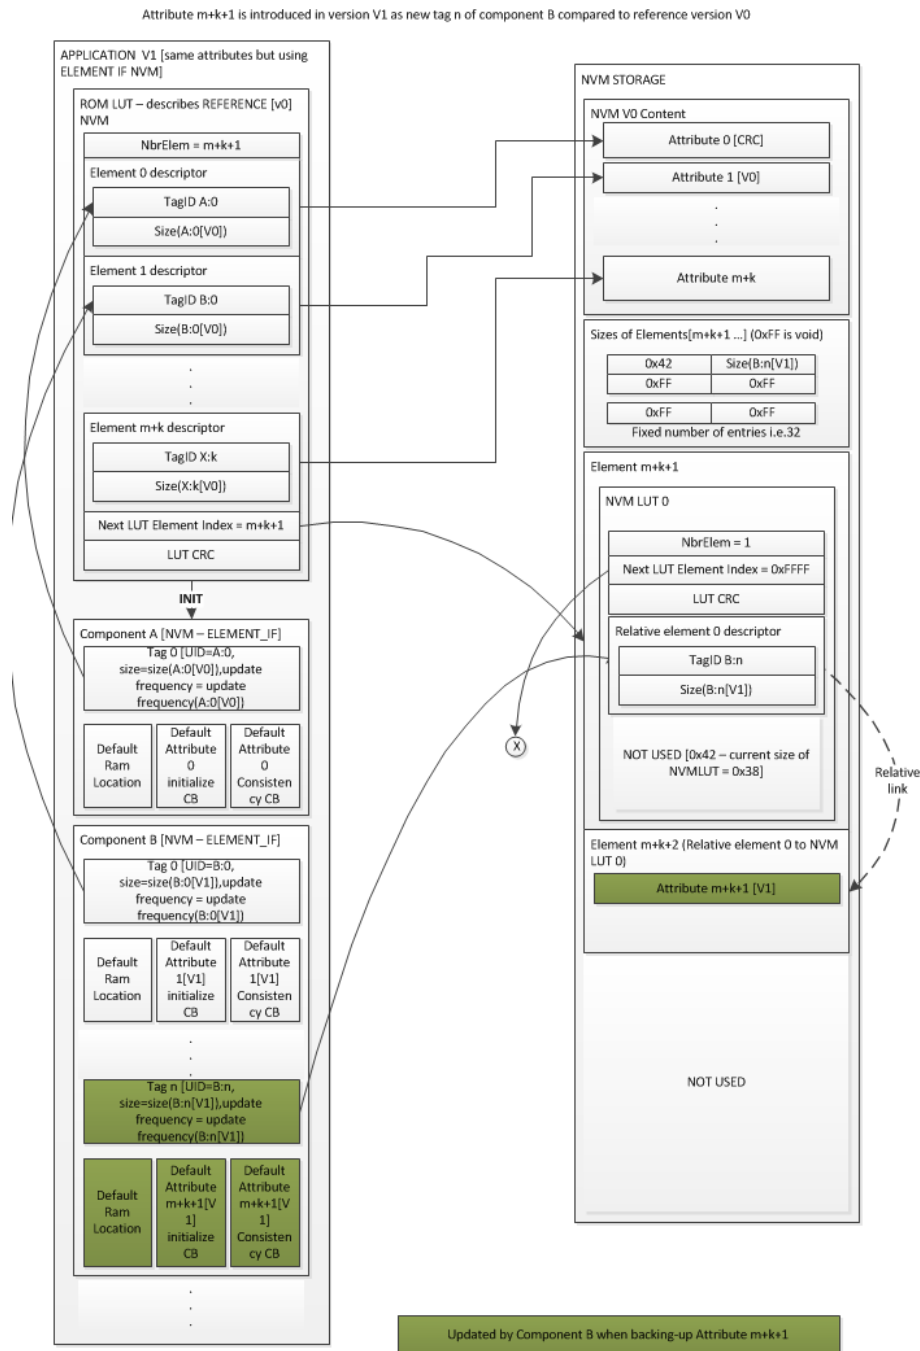 


Figure 2.7: Upgrading by adding attributes

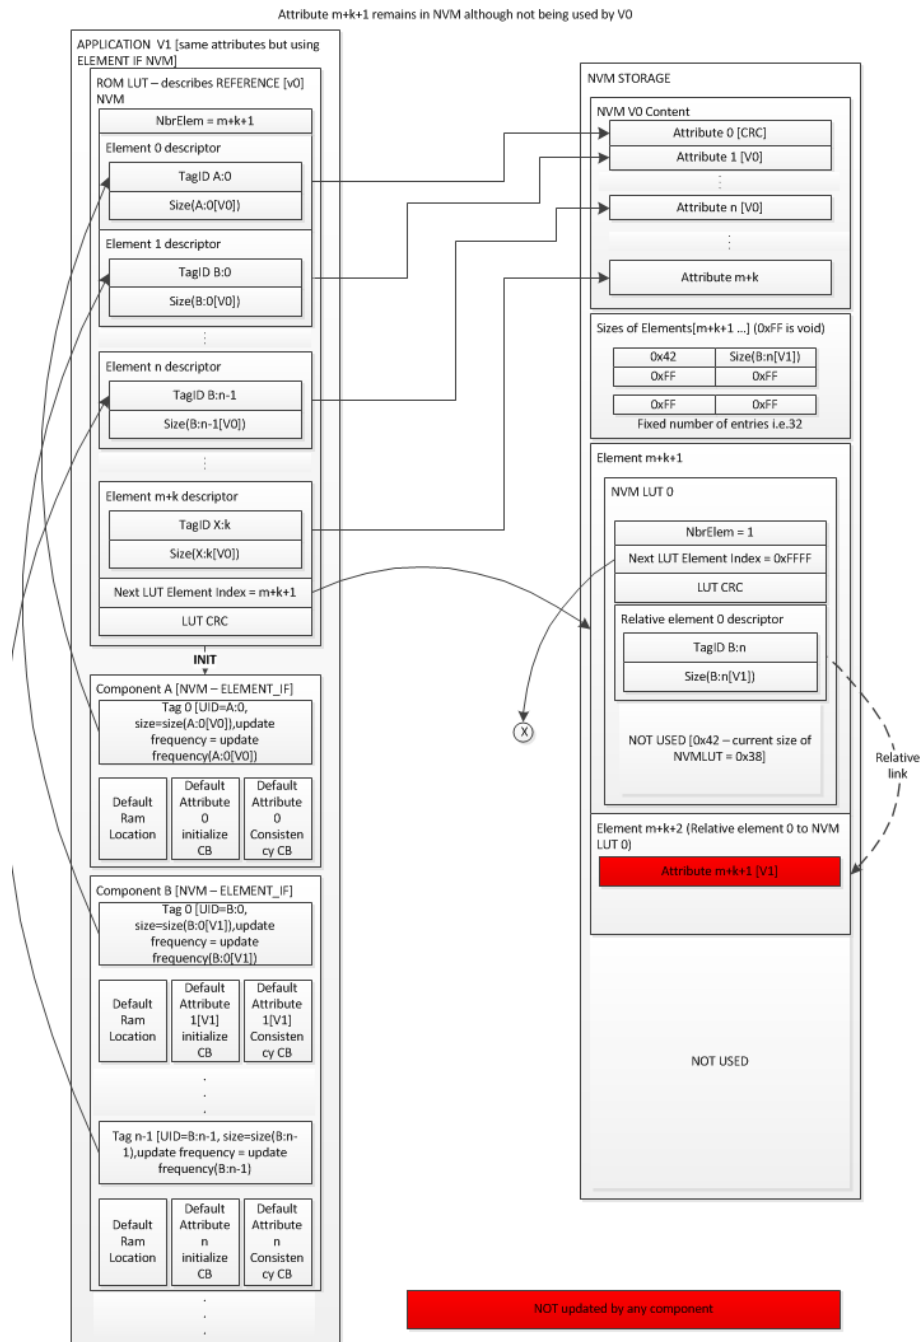 


Figure 2.8: Downgrading to smaller number of attributes

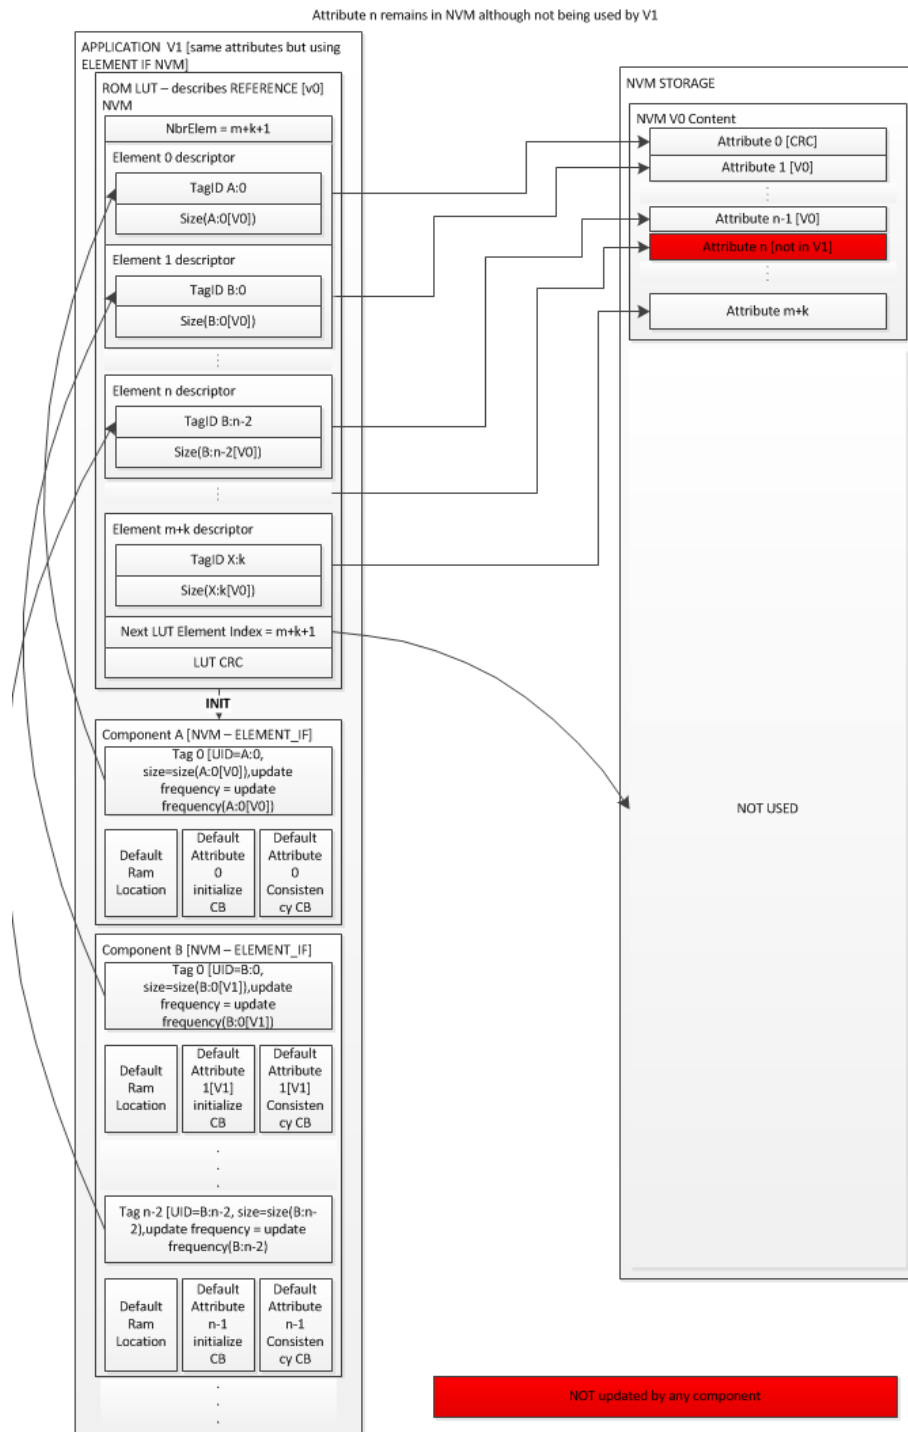 


Figure 2.9: Upgrading to smaller number of attributes

Elements themselves are defined in the NVM in two ways. The inherited NVM has implicit definition of the elements as inherited attributes and their sizes. The subsequent elements are added in the NVM in a platform specific way. Simple way to implement platform specific element access is to have a table of fixed size located right after the inherited NVM. This table can contain array of values (8 or 16 bit) specifying element sizes. It should be initialized to all 1 values (all

0 and all 1 values indicating void element). Elements would be added one after another and the size array would be updated accordingly. When locating the element within the NVM, first query would be made to program memory look-up table. If element is not found there, the NVM element size array located right after the last known inherited attribute could be used to locate noninherited elements.

The explained manipulations with NVM based look-up tables are illustrated in the following images:

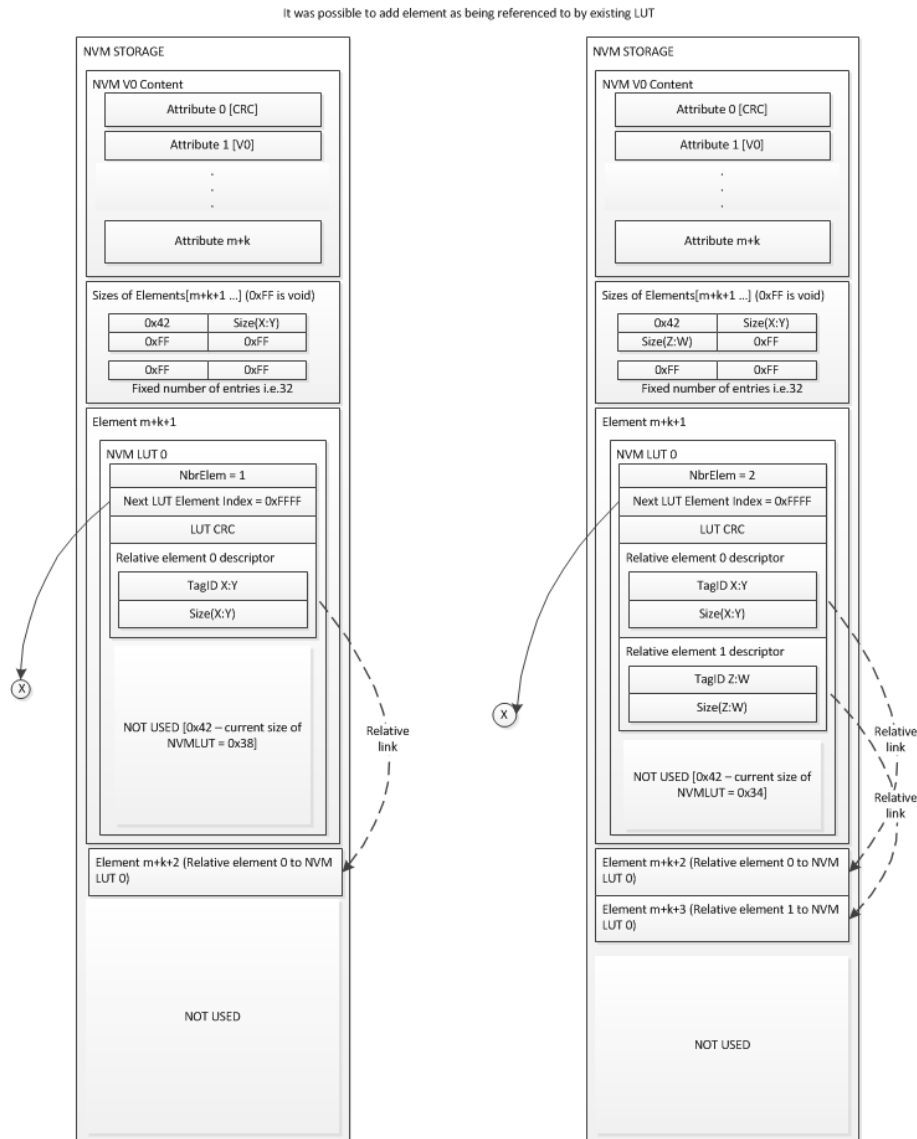 


Figure 2.10: Extending the existing NVM LUT with additional element



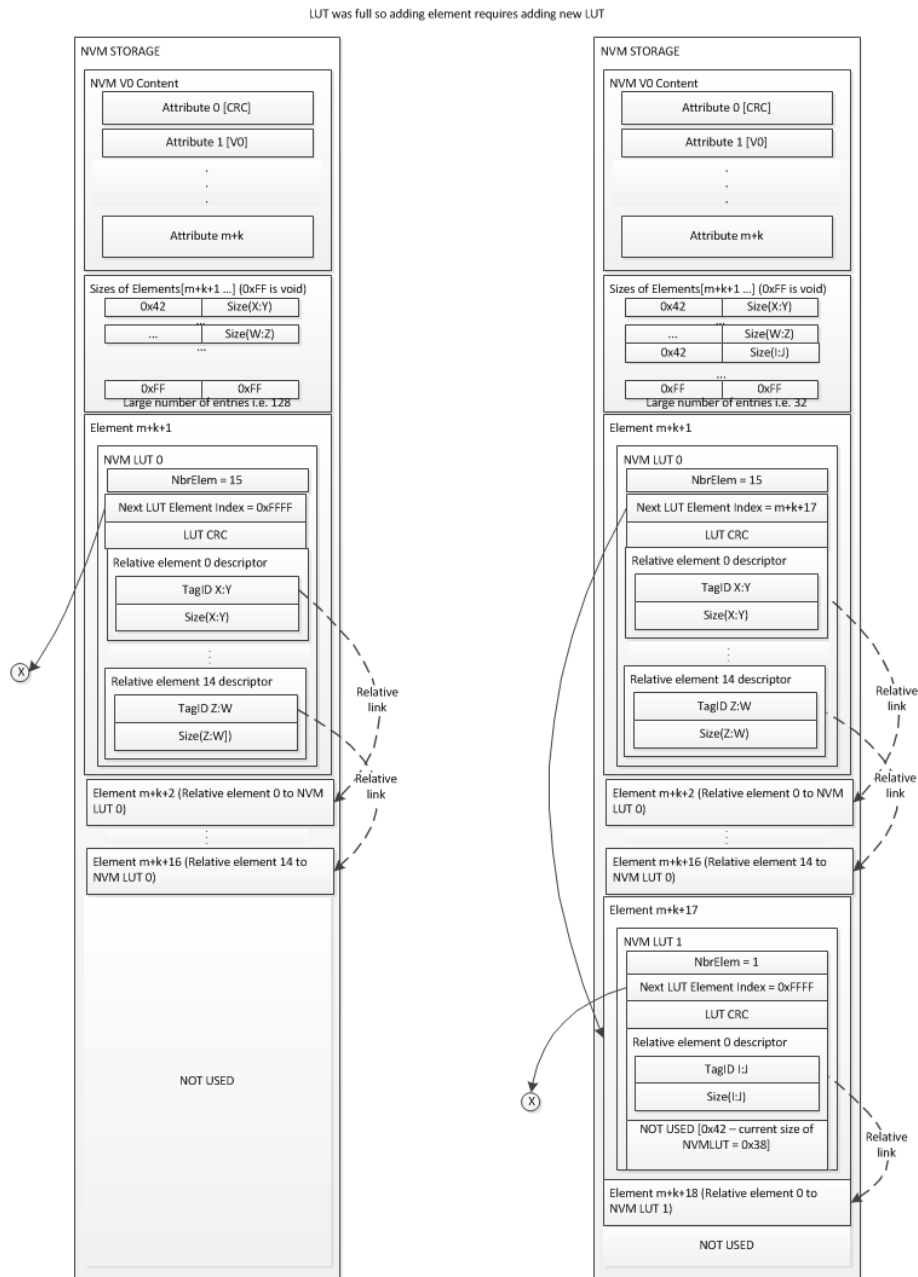 


Figure 2.11: Adding NVM LUT with referring to newly added element

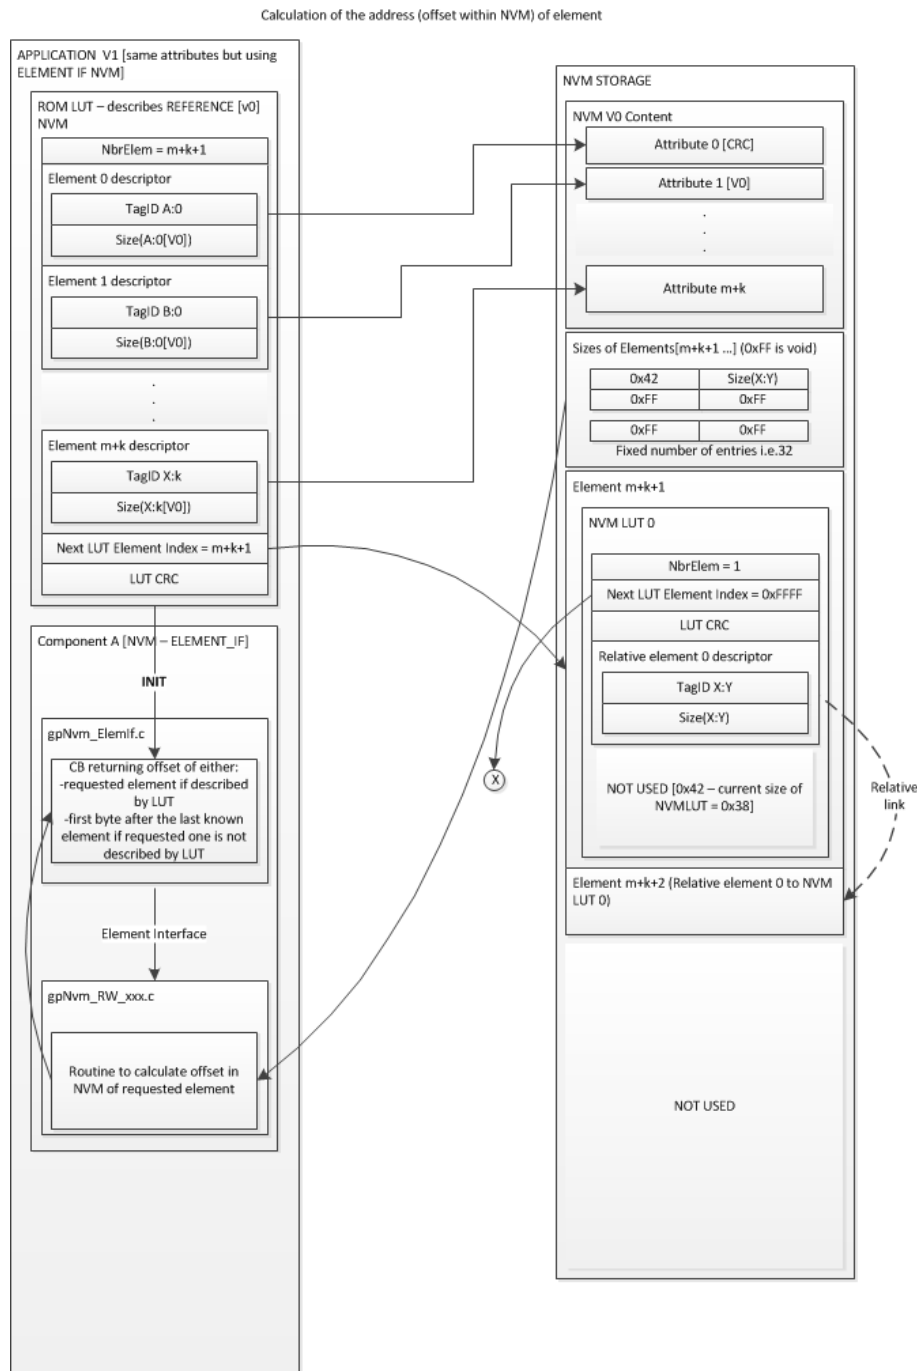 


Figure 2.12: Calculation of the address of the element in the NVM

All of the premises for the driver stated so far imply that the way the attributes are registered to the NVM driver had to change. Information about attribute identity has to be provided explicitly rather than implicitly so new registration function is introduced. Elements may be registered individually or in group(s) where order (IDs within componen or componets them selves) is not relevant. Any mix is possible, match will be found. Since the element tags had to change in structure to accommodate this explicit information, opportunity is taken to also change the way the default value initialization is done. Instead of providing the pointer to default data (if any) a default

initialization function reference is provided making large sparse default information compressed better in the program memory. Another addition to the tag is element (and not section) specific consistency checker function reference that can be used to assess integrity per attribute.

The special attention is given to make the best effort approach in reusing the attribute values when traversing among the firmware versions. The standard applications have the first attribute contain the CRC signing the section-attribute structure of the NVM. The element interface based applications will reconstruct this information from the program memory look-up table and will be able to assess if the inherited NVM is valid. This information is not dependant on the actual attributes used by the element interface based application. All of the reused attributes are updated in the inherited memory and if some attributes are extended, only the delta of the extended attribute will be allocated in the separate NVM element.. Initial value of extended attribute will be composite of already present value in inherited attribute and the rest will be default initialized. In unlikely event of reducing the inherited attribute size, the part of the inherited attribute known and used by the new application will be kept up to date. **IMPORTANT NOTE:** although in most of cases this approach provides valid attribute data when up or downgrading, care must be taken that the attribute values created by default extension of previous shorter attributes or by truncating previous longer attributes actually make sense. It is recommended to use consistency checker functions if the consistency can be broken by up/downgrading.

Compatibility between the applications in regard to NVM is defined by two requirements:

- All mutually compatible versions have to use same base program memory LUT content
- All mutually compatible versions have to use same unique IDs for same attributes

One special situation occurs with applications offering remote NVM service over the serial interface. The RW\_NVM storage is allocated as array of elements that total in size required remote NVM. These elements are attributes being registered with common tag ID but internally their ID is incremented on every registration of such special element to stop them from being treated as one single attribute.

## 2.2.2 Function Documentation

### gpNvm\_Config()

```
void gpNvm_Config (
    const ROM gpNvm_LookUpTableHeader_t * baseTableHeader,
    const ROM gpNvm_ElementDefine_t * baseTableElements,
    const ROM gpNvm_VersionCrc_t * inheritedNvmVersionCrc )
```

This function call may be used if there can be different possibilities for the NVM structure inherited. This function can't be used for detection of the type of the NVM used since the failure to validate NVM content against the registered table causes NVM defaulting.

#### Parameters

<i>baseTableHeader</i>	A reference to the header of the base LUT
<i>baseTableElements</i>	A reference to the array of element descriptors of the base LUT

### gpNvm\_RegisterElement()

```
void gpNvm_RegisterElement (
```

```
const ROM gpNvm_IdentifiableTag_t * pTag )
```

Registers an element to the NVM software block. The function should be called from the `_init` function of the component for each element being registered.

#### Parameters

<i>pTag</i>	A pointer to a tag of the element allocated in flash containing the information about the attribute.
-------------	--

### gpNvm\_RegisterElements()

```
void gpNvm_RegisterElements (
    const ROM gpNvm_IdentifiableTag_t * pTag,
    UInt8 nbrOfTags )
```

Registers multiple of elements reported as array of tags to the NVM software block. The function should be called from the `_init` function of the component for each element being registered.

#### Parameters

<i>pTag</i>	A pointer to array of tags of the elements allocated in flash containing the information about the attributes.
-------------	--

## Chapter 3

# Data Structure Documentation

### 3.1 gpNvm\_CompatibilityEntry Struct Reference

The [gpNvm\\_CompatibilityEntry](#) structure specifies the information for compatible NVM versions.

### 3.2 gpNvm\_CompatibilityEntry\_t Struct Reference

#### Data Fields

- UInt16 **crc**
- [gpNvm\\_cbUpdate\\_t](#) **upgradeCb**
- [gpNvm\\_cbUpdate\\_t](#) **downgradeCb**

### 3.3 gpNvm\_ElementDefine\_t Struct Reference

#### Data Fields

- UInt16 **uniqueTagId**  
*Unique tag identifier composed from the unique component ID located in MSB and unique tag ID within the component located in LSB.*
- UInt16 **elementSize**  
*The number of bytes of the attribute in the element.*

### 3.4 gpNvm\_IdentifiableTag Struct Reference

The [gpNvm\\_IdentifiableTag](#) structure specifies the fields that describe an uniquely identifiable nvm-tag.

### 3.5 gpNvm\_IdentifiableTag\_t Struct Reference

#### Data Fields

- UInt16 **uniqueTagId**  
*Unique tag identifier composed from the unique component ID located in MSB and unique tag ID within the component located in LSB.*

- `UInt8 * pRamLocation`  
*A pointer to the corresponding RAM memory of the attribute to be backed up in nvm.*
- `UInt16 size`  
*The number of bytes of the nvm-tag.*
- `gpNvm_UpdateFrequency_t updateFrequency`  
*An indication of the update frequency.*
- `Bool(* DefaultValueInitializerCB )(const ROM void *pTag, UInt8 *pBuffer)`  
*A pointer to function that initializes attribute default values. 0xFF will be used as default values if pointer is specified as NULL.*
- `Bool(* ConsistencyCheckerCB )(const ROM void *pTag)`  
*A pointer to function that performs consistency check of the attribute value.*

### 3.6 gpNvm\_LookUpTableHeader Struct Reference

The `gpNvm_LookUpTableHeader` structure specifies the fields that describe header of the element LookUp Table.

### 3.7 gpNvm\_LookUpTableHeader\_t Struct Reference

#### Data Fields

- `UInt16 nbrTags`  
*The number of tags for attribute elements contained in the LookUp Table.*
- `UInt16 indexNextLUT`  
*The index of the element containing next LookUp Table. LUTs are forming single direction linked list.*
- `gpNvm_VersionCrc_t crcLUT`  
*The CRC calculated over the rest of the header and element defines belonging to the LookUp Table.*

### 3.8 gpNvm\_Section\_t Struct Reference

#### Data Fields

- `UInt8 componentId`
- `const ROM gpNvm_Tag_t *FLASH_PROGMEM tags`
- `UInt8 nbrOfTags`
- `UInt8 * baseAddr`
- `gpNvm_cbCheckConsistency_t cbCheckConsistency`

### 3.9 gpNvm\_Tag\_t Struct Reference

The `gpNvm_Tag` structure specifies the fields that describe an nvm-tag.

## Data Fields

- UInt8 \* [pRamLocation](#)  
*A pointer to the corresponding RAM memory of the attributed to be backuped in nvm.*
- UInt16 [size](#)  
*The number of bytes of the nvm-tag.*
- [gpNvm\\_UpdateFrequency\\_t](#) [updateFrequency](#)  
*An indication of the update frequency.*
- GP\_NVM\_CONST ROM UInt8 \* [pDefaultValues](#)  
*A pointer to flash memory containing the default values for the tag, 0xFF will be used as default values if pointer is specified as NULL.*

## Chapter 4

# File Documentation

### 4.1 gpNvm.h File Reference

#### Data Structures

- struct [gpNvm\\_Tag\\_t](#)  
*The gpNvm\_Tag structure specifies the fields that describe an nvm-tag.*
- struct [gpNvm\\_Section\\_t](#)
- struct [gpNvm\\_CompatibilityEntry\\_t](#)

#### Macros

- #define [gpNvm\\_LookupTable\\_Handle\\_Invalid](#) (0xff)
- #define [gpNvm\\_AllComponents](#) 0xEE  
*Wildcard used to select all nvm-sections in a backup/restore/clear call.*
- #define [gpNvm\\_AllTags](#) 0xEE  
*Wildcard used to select all tags of the specified nvm-sections in a backup/restore/clear call.*
- #define [GP\\_NVM\\_SECTIONID\\_TAG](#) 16
- #define [GP\\_NVM\\_MAX\\_TOKENLENGTH](#) 1
- #define [GP\\_NVM\\_MAX\\_PAYLOADLENGTH](#) 241
- #define [GP\\_NVM\\_NBR\\_OF\\_POOLS](#) 1
- #define [GP\\_NVM\\_NBR\\_OF\\_UNIQUE\\_TAGS](#) 255

#### Typedefs

- typedef UInt8 [gpNvm\\_LookupTable\\_Handle\\_t](#)
- typedef UInt16 [gpNvm\\_Type\\_t](#)  
*defined(GP\_NVM\_NBR\_OF\_POOLS)*
- typedef UInt8 [gpNvm\\_KeyIndex\\_t](#)
- typedef UInt16 [gpNvm\\_VersionCrc\\_t](#)
- typedef Bool(\* [gpNvm\\_cbCheckConsistency\\_t](#)) (void)  
*The gpNvm\_cbCheckConsistency\_t defines the callback type for an additional section specific check-consistency routine (see [gpNvm\\_RegisterSection\(\)](#))*
- typedef Bool(\* [gpNvm\\_cbUpdate\\_t](#)) (void)  
*The gpNvm\_cbUpdate\_t defines the callback type for the up or downgrade routine between NVM versions.*



## Functions

- void [gpNvm\\_Init](#) (void)  
*Initializes the NVM software block. After execution of this function data can be read or written to NVM.*
- void [gpNvm\\_DeInit](#) (void)
- UInt16 [gpNvm\\_ReserveRemoteNvmSpace](#) (UInt16 requiredSize)  
*Reserves part of space on local NVM for remote NVM usage. This function should be called at most once. If not called, no space is reserved for remote NVM.*
- void [gpNvm\\_ClearNvm](#) (void)  
*Clears the complete NVM. This function clears the complete NVM. This includes all tags of all registered nvm-sections and all legacy implementations of the component specific interfaces described in the other sections. Readonly tags will not be erased unless the NVM was unlocked using [gpNvm\\_SetLock\(\)](#).*
- void [gpNvm\\_Flush](#) (void)  
*Requests a forced flush of the write buffers to NVM. This function request the nvm component to flush all pending write data to NVM. If the NVM implementation doesn't use buffers, the function should be stubbed.*
- void [gpNvm\\_Dump](#) (UInt8 componentId, UInt8 tagId)  
*Dumps the NVM content. This function dumps the content of the specified tag of the specified component. It will also indicate with a '\*' that this content is not in sync with the current values of the corresponding ram variables.*
- void [gpNvm\\_DumpStructure](#) (void)  
*This function dumps the structure of the NVM tags and NVM CRC.*
- void [gpNvm\\_Backup](#) (UInt8 componentId, UInt8 tagId, UInt8 \*pRamLocation)  
*Backup the content of the specified NVM-tag. The content of the RAM memory (pRamLocation parameter) specified by the combination of the component and tag will be written to the non-volatile memory.*
- void [gpNvm\\_Restore](#) (UInt8 componentId, UInt8 tagId, UInt8 \*pRamLocation)  
*Restore the content of the specified NVM-tag using the provided RAM location. The content of the RAM memory (pRamLocation parameter) specified by the combination of the component and tag will be updated with the corresponding copy in the the non-volatile memory.*
- void [gpNvm\\_Clear](#) (UInt8 componentId, UInt8 tagId)  
*Clears the content of the specified NVM-tag using the provided RAM location. The non-volatile memory specified by the combination of the component and tag will be updated to the default values (pDefaultValues). If there are no default values specified the content of the non-volatile memory will be set to 0xFF.*
- void **Nvm\_WriteByte** (UIntPtr address, UInt8 value, [gpNvm\\_UpdateFrequency\\_t](#) updateFrequency)
- UInt8 **Nvm\_ReadByte** (UIntPtr address, [gpNvm\\_UpdateFrequency\\_t](#) updateFrequency)  
(defined(GP\_NVM\_DIVERSITY\_TAG\_IF))
- void [gpNvm\\_SetLock](#) (Bool lock)  
(defined(GP\_NVM\_DIVERSITY\_TAG\_IF))
- void [gpNvm\\_CheckConsistency](#) (void)  
*Checks if NVM is consistent. The function checks if the NVM is consistent. If not, NVM is cleared.*
- Bool [gpNvm\\_CheckAccessible](#) (void)  
*Checks if NVM is accessible. The function checks if the NVM is accessible.*
- void **Nvm\_ReadBlock** (UIntPtr address, UInt16 lengthBlock, UInt8 \*data, [gpNvm\\_UpdateFrequency\\_t](#) updateFrequency)
- void [gpNvm\\_Refresh](#) (void)  
(defined(GP\_NVM\_DIVERSITY\_TAG\_IF))

- gpNvm\_Result\_t **gpNvm\_AcquireLutHandle** (gpNvm\_LookupTable\_Handle\_t \*pHandle, gpNvm\_PoolId\_t poolId, gpNvm\_UpdateFrequency\_t updateFrequencySpec, UInt8 tokenLength, UInt8 \*pToken, Bool \*freeAfterUse, gpNvm\_KeyIndex\_t maxNbrOfMatches)
- gpNvm\_Result\_t **gpNvm\_ReadNext** (gpNvm\_LookupTable\_Handle\_t handle, gpNvm\_PoolId\_t poolId, gpNvm\_UpdateFrequency\_t \*pUpdateFrequency, UInt8 maxTokenLength, UInt8 \*pTokenLength, UInt8 \*pToken, UInt8 maxDataLength, UInt8 \*pDataLength, UInt8 \*pData)
 

*Retrieve the next data that matches the filter criteria from the NVM, this method requires the availability of a temporary lookup table. You should always call gpNvm\_FreeLookup when gpNvm\_Result\_DataAvailable or gpNvm\_Result\_Truncated is returned, and you are done working with the lookup table.*
- gpNvm\_Result\_t **gpNvm\_ReadUnique** (gpNvm\_LookupTable\_Handle\_t handle, gpNvm\_PoolId\_t poolId, gpNvm\_UpdateFrequency\_t updateFrequencySpec, gpNvm\_UpdateFrequency\_t \*pUpdateFrequency, UInt8 tokenLength, UInt8 \*pToken, UInt8 maxDataLength, UInt8 \*pDataLength, UInt8 \*pData)
 

*method to retrieve data of an attribute which has a unique match of the specified filters in the temporary lookup table*
- void **gpNvm\_FreeLookup** (gpNvm\_LookupTable\_Handle\_t handle)
 

*Method to free a lookup table after use.*
- gpNvm\_Result\_t **gpNvm\_Remove** (gpNvm\_PoolId\_t poolId, gpNvm\_UpdateFrequency\_t updateFrequencySpec, UInt8 tokenLength, UInt8 \*pToken)
 

*Remove an nvm entry.*
- gpNvm\_Result\_t **gpNvm\_ErasePool** (gpNvm\_PoolId\_t poolId)
 

*Erase the content of a specific pool.*
- gpNvm\_Result\_t **gpNvm\_GetNextTokenKey** (gpNvm\_LookupTable\_Handle\_t handle, gpNvm\_PoolId\_t poolId, gpNvm\_UpdateFrequency\_t updateFrequencySpec, UInt8 tokenLength, UInt8 \*pToken, UInt8 \*pTokenKey)
- gpNvm\_Result\_t **gpNvm\_ResetIterator** (gpNvm\_LookupTable\_Handle\_t handle)
 

*Reset the iteration sequence of ReadNext to the first item.*
- void **gpNvm\_cbFailedCheckConsistency** (void)
 

*Callback triggered if consistency check failed.*
- void **gpNvm\_SetBackgroundDefragmentationMode** (Bool enable)
 

*Controls the automatic background defragmentation. To allow multiple usage a counter mechanism is implemented. The auto defragmentation is enabled by default.*
- void **gpNvm\_RegisterSection** (UInt8 componentId, const ROM gpNvm\_Tag\_t \*tags, UInt8 nbrOfTags, gpNvm\_cbCheckConsistency\_t cbCheckConsistency)
 

*Registers a component to the NVM software block.*
- gpNvm\_Result\_t **gpNvm\_GetNvmType** (UInt8 \*pNvmType)
- #define **gpNvm\_UpdateFrequencyHigh** 0
 

*Updated more often, typically used for attributes that can get updated during normal user usage.*
- #define **gpNvm\_UpdateFrequencyLow** 1
 

*Updated in rare condition.*
- #define **gpNvm\_UpdateFrequencyInitOnly** 2
 

*Updated only during initialisation phase, typically used for attributes which are only set once.*
- #define **gpNvm\_UpdateFrequencyReadOnly** 3
 

*Set during configuration, read-only information.*
- #define **gpNvm\_UpdateFrequencyIgnore** 4
 

*Wildcard value used with read queries.*
- #define **gpNvm\_NrOfUpdateFrequencyTypes** 5
- typedef UInt8 **gpNvm\_UpdateFrequency\_t**

*The gpNvm\_UpdateFrequency\_t type defines indicating the frequency a tag will require a new backup into NVM.*

- #define **gpNvm\_Result\_DataAvailable** 0
- #define **gpNvm\_Result\_NoDataAvailable** 1
- #define **gpNvm\_Result\_NoLookUpTable** 2
- #define **gpNvm\_Result\_NoUniqueMaskMatch** 4
- #define **gpNvm\_Result\_Truncated** 5
- #define **gpNvm\_Result\_Error** 0xFF
- typedef UInt8 **gpNvm\_Result\_t**
  
- #define **gpNvm\_PoolId\_Tag** 0  
*The pool used by the tag API.*
- #define **gpNvm\_PoolId\_Application1** 1  
*Application specified pool.*
- #define **gpNvm\_PoolId\_Application2** 2  
*Application specified pool.*
- #define **gpNvm\_PoolId\_Application3** 3  
*Application specified pool.*
- #define **gpNvm\_PoolId\_Application4** 4  
*Application specified pool.*
- #define **gpNvm\_PoolId\_AllPoolIds** 0xFE  
*Used to iterate all pools.*
- typedef UInt8 **gpNvm\_PoolId\_t**  
*TBD:Namespace prefix or physical pool id.*

#### 4.1.1 Macro Definition Documentation

##### **GP\_NVM\_MAX\_PAYLOADLENGTH**

```
#define GP_NVM_MAX_PAYLOADLENGTH 241
GP_NVM_MAX_PAYLOADLENGTH
```

##### **GP\_NVM\_MAX\_TOKENLENGTH**

```
#define GP_NVM_MAX_TOKENLENGTH 1
GP_NVM_MAX_TOKENLENGTH
```

##### **GP\_NVM\_SECTIONID\_TAG**

```
#define GP_NVM_SECTIONID_TAG 16
GP_NVM_SECTIONID_TAG
```

##### **gpNvm\_AllComponents**

```
#define gpNvm_AllComponents 0xEE
gpNvm_AllComponents
```

**gpNvm\_AllTags**

```
#define gpNvm_AllTags 0xEE
gpNvm_AllTags
```

**4.1.2 Typedef Documentation****gpNvm\_cbCheckConsistency\_t**

```
typedef Bool(* gpNvm_cbCheckConsistency_t) (void)
to function gpNvm_cbCheckConsistency_t
```

Returns

status

**gpNvm\_cbUpdate\_t**

```
typedef Bool(* gpNvm_cbUpdate_t) (void)
to function gpNvm_cbUpdate_t
```

Returns

status

**4.1.3 Function Documentation****gpNvm\_Backup()**

```
void gpNvm_Backup (
    UInt8 componentId,
    UInt8 tagId,
    UInt8 * pRamLocation )
```

**Parameters**

<i>componentId</i>	The unique identifier nvm-section of the section to be backedup, gpNvm_AllComponents can be used as wildcard.
<i>tagId</i>	The sequence number of the tag to be backedup
<i>pRamLocation</i>	Pointer to the data that should be backedup. When this pointer is NULL, the internal stored pointer is used.

**gpNvm\_CheckAccessible()**

```
Bool gpNvm_CheckAccessible (
    void )
```

**Returns**

result Boolean that returnns the result of the check.

**gpNvm\_Clear()**

```
void gpNvm_Clear (
    UInt8 componentId,
    UInt8 tagId )
```

**Parameters**

<i>componentId</i>	The unique identifier nvm-section of the section to be cleared, gpNvm_AllComponents can be used as wildcard.
<i>tagId</i>	The sequence number of the tag to be cleared, gpNvm_AllTags can be used as wildcard.

**gpNvm\_Dump()**

```
void gpNvm_Dump (
    UInt8 componentId,
    UInt8 tagId )
```

**Parameters**

<i>componentId</i>	The unique idenditfier nvm-section of the section to be restored, gpNvm_AllComponents can be used as wildcard.
<i>tagId</i>	The sequence number of the tag to be restored, gpNvm_AllTags can be used as wildcard.

**gpNvm\_ErasePool()**

```
gpNvm_Result_t gpNvm_ErasePool (
    gpNvm_PoolId_t poolId )
```

**Parameters**

<i>poolId</i>	The pool ID to be erased. Use gpNvm_PoolId_AllPoolIds to erase all pools.
---------------	---

**Returns**

result gpNvm\_Result\_DataAvailable gpNvm\_Result\_Error

**gpNvm\_FreeLookup()**

```
void gpNvm_FreeLookup (
```

```
gpNvm_LookupTable_Handle_t handle )
```

### Parameters

<i>handle</i>	lookupable handle
---------------	-------------------

### gpNvm\_ReadNext()

```
gpNvm_Result_t gpNvm_ReadNext (
    gpNvm_LookupTable_Handle_t handle,
    gpNvm_PoolId_t poolId,
    gpNvm_UpdateFrequency_t * pUpdateFrequency,
    UInt8 maxTokenLength,
    UInt8 * pTokenLength,
    UInt8 * pToken,
    UInt8 maxDataLength,
    UInt8 * pDataLength,
    UInt8 * pData )
```

### Parameters

<i>handle</i>	lookupable handle
<i>poolId</i>	The pool ID to be used
<i>pUpdateFrequency</i>	used to return the updateFrequency of the read data typically used by caller when lookup table is created with gpNvm_BuildLookupOverAllUpdateFrequencies; will be ignored when specifying NULL
<i>maxTokenLength</i>	maximum length in bytes of pToken
<i>pTokenLength</i>	filled in number of bytes in pToken typically used by caller when lookup table is created with tokenlength 0; will be ignored when specifying 0
<i>pToken</i>	pointer to buffer to return token information typically used by caller when lookup table is created with gpNvm_BuildLookupOverAllUpdateFrequencies; will be ignored when specifying NULL
<i>maxDataLength</i>	maximum length in bytes of pData
<i>pDataLength</i>	number of bytes in pData
<i>pData</i>	pointer to buffer to return data

### Returns

result gpNvm\_Result\_Truncated in case there were more entries than requested

### gpNvm\_ReadUnique()

```
gpNvm_Result_t gpNvm_ReadUnique (
    gpNvm_LookupTable_Handle_t handle,
```

```

gpNvm_PoolId_t poolId,
gpNvm_UpdateFrequency_t updateFrequencySpec,
gpNvm_UpdateFrequency_t * pUpdateFrequency,
UInt8 tokenLength,
UInt8 * pToken,
UInt8 maxDataLength,
UInt8 * pDataLength,
UInt8 * pData )

```

#### Parameters

<i>handle</i>	lookuptable handle
<i>poolId</i>	The pool ID to be used
<i>updateFrequencySpec</i>	specify the updateFrequency of the read data, gpNvm_UpdateFrequencyIgnore can be used as wildcard
<i>pUpdateFrequency</i>	returns the update frequency of the attribute
<i>tokenLength</i>	length in bytes of pToken
<i>pToken</i>	array forming the unique reference tot the attribute within the updateFrequency scope - will result in unique match
<i>maxDataLength</i>	maximum length in bytes of pData
<i>pDataLength</i>	number of bytes in pData
<i>pData</i>	pointer to buffer to return data

#### Returns

result gpNvm\_Result\_DataAvailable gpNvm\_Result\_NoDataAvailable gpNvm\_Result\_NoLookUpTable  
gpNvm\_Result\_NoUniqueMaskMatch

### gpNvm\_Remove()

```

gpNvm_Result_t gpNvm_Remove (
    gpNvm_PoolId_t poolId,
    gpNvm_UpdateFrequency_t updateFrequencySpec,
    UInt8 tokenLength,
    UInt8 * pToken )

```

#### Parameters

<i>poolId</i>	The pool ID to be used
<i>updateFrequencySpec</i>	specify the updateFrequency of the read data, gpNvm_UpdateFrequencyIgnore can be used as wildcard
<i>tokenLength</i>	length in bytes of pToken
<i>pToken</i>	array forming the unique reference tot the attribute within the updateFrequency scope - will result in unique match

## Returns

result gpNvm\_Result\_DataAvailable gpNvm\_Result\_Error

**gpNvm\_ReserveRemoteNvmSpace()**

```
UInt16 gpNvm_ReserveRemoteNvmSpace (
    UInt16 requiredSize )
```

## Parameters

<i>requiredSize</i>	Size of the NVM to be used remotely.
---------------------	--------------------------------------

## Returns

offset Offset within local NVM where remote NVM may store sections

**gpNvm\_ResetIterator()**

```
gpNvm_Result_t gpNvm_ResetIterator (
    gpNvm_LookupTable_Handle_t handle )
```

## Parameters

<i>handle</i>	lookuptable handle
---------------	--------------------

## Returns

result gpNvm\_Result\_DataAvailable gpNvm\_Result\_Error

**gpNvm\_Restore()**

```
void gpNvm_Restore (
    UInt8 componentId,
    UInt8 tagId,
    UInt8 * pRamLocation )
```

## Parameters

<i>componentId</i>	The unique identifier nvm-section of the section to be restored, gpNvm_AllComponents can be used as wildcard.
<i>tagId</i>	The sequence number of the tag to be restored.
<i>pRamLocation</i>	Pointer to the data that should be restored. When this pointer is NULL, the internal stored pointer is used.



**gpNvm\_SetBackgroundDefragmentationMode()**

```
void gpNvm_SetBackgroundDefragmentationMode (
    Bool enable )
```

**Parameters**

<i>enable</i>	false = disable defragmentation (counter is incremented), true = enable defragmentation (counter is decremented). The number of calls with true should match the number with calls with false to enable the background defragmentation.
---------------	---

**gpNvm\_SetLock()**

```
void gpNvm_SetLock (
    Bool lock )
```

Locks or unlocks the possibility to write or clear read-only elements. Default the NVM area will be unable to write or clear read-only elements (tags with update frequency gpNvm\_UpdateFrequencyReadOnly). One can 'unlock' the area by calling this function with false. Re-lock the area after the needed manipulations by calling this function with true.

**Parameters**

<i>lock</i>	Lock (true) or Unlock (false) the NVM area.
-------------	---

**4.2 gpNvm\_ElemIf.h File Reference****Data Structures**

- struct [gpNvm\\_ElementDefine\\_t](#)
- struct [gpNvm\\_LookUpTableHeader\\_t](#)
- struct [gpNvm\\_IdentifiableTag\\_t](#)

**Macros**

- #define [GP\\_NVM\\_MAX\\_NUM\\_BASE\\_LUT\\_ELEMENTS](#) 255  
*GP\_NVM\_MAX\_NUM\_BASE\_LUT\_ELEMENTS is a macro defining the limit for the number of attributes inherited from the standard application.*
- #define [GP\\_NVM\\_MAX\\_NUM\\_LUT\\_ELEMENTS](#) 15  
*GP\_NVM\_MAX\_NUM\_LUT\_ELEMENTS is a macro defining the limit for the number of attributes defined in NVM based LookUp Table.*
- #define [GP\\_NVM\\_NO\\_LUT\\_INDEX](#) 0xFFFF  
*GP\_NVM\_NO\_LUT\_INDEX is a macro defining the value used in the list link field of the last LUT in the list.*
- #define [NVM\\_MAX\\_TAG\\_SIZE](#) 239  
*NVM\_MAX\_TAG\_SIZE is a macro defining the maximal size in bytes of object located in the NVM element.*
- #define [GP\\_NVM\\_VERSION\\_CRC\\_UNIQUE\\_TAG\\_ID](#) 0

*GP\_NVM\_VERSION\_CRC\_UNIQUE\_TAG\_ID is a macro defining the tag ID of the inherited NVM CRC attribute. Must always be 0.*

- #define [GP\\_NVM\\_TYPE\\_UNIQUE\\_TAG\\_ID](#) 0xEF

*Wildcard used to access Nvm type.*

- #define [GP\\_NVM\\_REMOTE\\_RW\\_TAG\\_ID\\_BASE](#) 128

*GP\_NVM\_REMOTE\_RW\_TAG\_ID\_BASE is a macro defining the tag ID base used for elements storing remote NVM. This is the value that should be used for all of the elements registered for remote NVM.*

## Typedefs

- typedef Bool(\* [gpNvm\\_cbDefaultValueInitializer\\_t](#)) (const ROM void \*pTag, UInt8 \*pBuffer)  
*The gpNvm\_cbDefaultValueInitializer\_t type describes reference to a function that initializes attribute with default values.*
- typedef Bool(\* [gpNvm\\_cbConsistencyChecker\\_t](#)) (const ROM [gpNvm\\_IdentifiableTag\\_t](#) \*pTag)  
*The gpNvm\_cbConsistencyChecker\_t type describes reference to a function that provides additional element specific check-consistency routine.*

## Functions

- [gpNvm\\_Result\\_t gpNvm\\_GetNvmType](#) (UInt8 \*pNvmType)  
*Get the Nvm Type describing the Nvm building blocks used.*
- void [gpNvm\\_Config](#) (const ROM [gpNvm\\_LookUpTableHeader\\_t](#) \*baseTableHeader, const ROM [gpNvm\\_ElementDefine\\_t](#) \*baseTableElements, const ROM [gpNvm\\_VersionCrc\\_t](#) \*inheritedNvmVersionCrc)  
*Configures NVM for base tables other than gpNvm\_elementBaseLUTHeader and gpNvm\_elementBaseLUTElements.*
- void [gpNvm\\_RegisterElement](#) (const ROM [gpNvm\\_IdentifiableTag\\_t](#) \*pTag)  
*Registers an element to the NVM software block.*
- void [gpNvm\\_RegisterElements](#) (const ROM [gpNvm\\_IdentifiableTag\\_t](#) \*pTag, UInt8 nbrOfTags)  
*Registers multiple elements to the NVM software block.*

### 4.2.1 Macro Definition Documentation

#### GP\_NVM\_TYPE\_UNIQUE\_TAG\_ID

```
#define GP_NVM_TYPE_UNIQUE_TAG_ID 0xEF
gpNvm_VersionKey
```

### 4.2.2 Typedef Documentation

#### gpNvm\_cbConsistencyChecker\_t

gpNvm\_cbConsistencyChecker\_t

##### Parameters

<i>pTag</i>	points to the description of the element to be checked
-------------	--

**Returns**

true if the check passed and false otherwise

**gpNvm\_cbDefaultValueInitializer\_t**

gpNvm\_cbDefaultValueInitializer\_t

**Parameters**

<i>pTag</i>	points to the description of the element to be initialized. If pTag indicates non NULL pRamLocation default values will be stored there.
<i>pBuffer</i>	points to buffer that will be used (if not NULL) to store default values.

**Returns**

true if the initialization was successful and false otherwise

**4.2.3 Function Documentation****gpNvm\_GetNvmType()**

```
gpNvm_Result_t gpNvm_GetNvmType (
    UInt8 * pNvmType )
```

**Parameters**

<i>pNvmType</i>	Pointer to UInt8 to store NvmType value.
-----------------	--

**Returns**

result gpNvm\_Result\_DataAvailable gpNvm\_Result\_NoDataAvailable