

Common Settings

1. Sleep time(Default 20s)



Sleep time
SET(%%ALLTIMSET)



20s(%%ALLTIM00)



30s(%%ALLTIM01)



60s(%%ALLTIM02)



2m(%%ALLTIM03)



5m(%%ALLTIM04)



10m(%%ALLTIM05)




20m(%%ALLTIM06)




No sleep
(%%ALL*TIDIS)


2. Shutdown, Restore factory settings, Read version information




Shutdown
(%%POWEROFF)



Read Version
(%%Version)



Read Hardware
(%%HDVersion)



Restore factory
settings(%%Restore
)

3. Dongle work mode (Default HID Mode)




HID (%%HID)




Virtual serial port Mode (%%UART)


4. Work Mode (Default normal mode)




Normal Mode (%%ALLPT-SET)




Take stock Mode SET
(%%ALLMEM-SET)




Keep the data in memory
(%%ALLAEM-SET)



Upload data (%%ALLMEM-
SC)



Total of
records(%%ALLMEM-ZS)



Clear records(%%ALLMEM-
QC)

Advanced settings

1. Channel Setting (2.4G(01-20)433M(01-30))



Make a pair (%%EZPair)

2. Buzzer hint 1: “Scanned barcode” Tweet (Default OFF)



ON (%%BZOpen1)



OFF (%%BZClose1)

3. Buzzer hint 2 : “RF Uploaded successfully” Tweet (Default OFF)



ON(%%BZOpen2)



OFF(%%BZClose2)

4. Display battery power (Only for Bluetooth Scanner)



Display battery power
(%%Batt)