

Work mode setting for Bluetooth Barcode Scanner (BevoLink SS920/SS930)

F. Bluetooth Mode Setting



HID Mode



SPP Mode

Work on HID mode

HID is default work mode, the developer users can scanner the above barcode to switch the work mode.

iOS, Android, Windows, Mac OS and Linux support the HID devices.


After long click the trigger button, PC and mobile can scan the barcode scanner as a HID device for making a pair.

Work on SPP (Serial Port) mode

Step 1. Configure to work well for HID mode.

Step 2. Scan SPP Mode barcode command then long click the trigger for make a new pair for SPP.

windows Bluetooth manager can get 2 devices as below for the Bluetooth scanner.

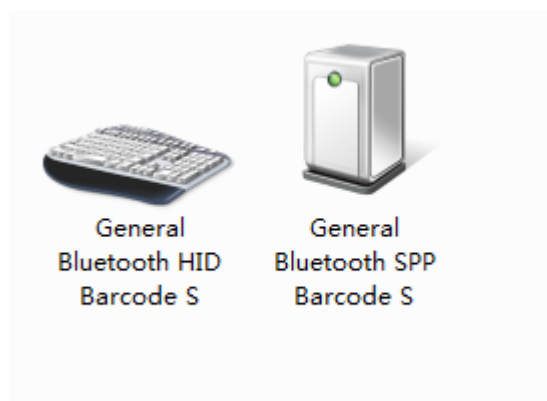


The configuration is done

Step 3. Debugging serial port

Download the serial port debug tool from <http://www.sudt.com/en/ap/download.htm>

Set the serial port as below (The com port is different for the OS system):

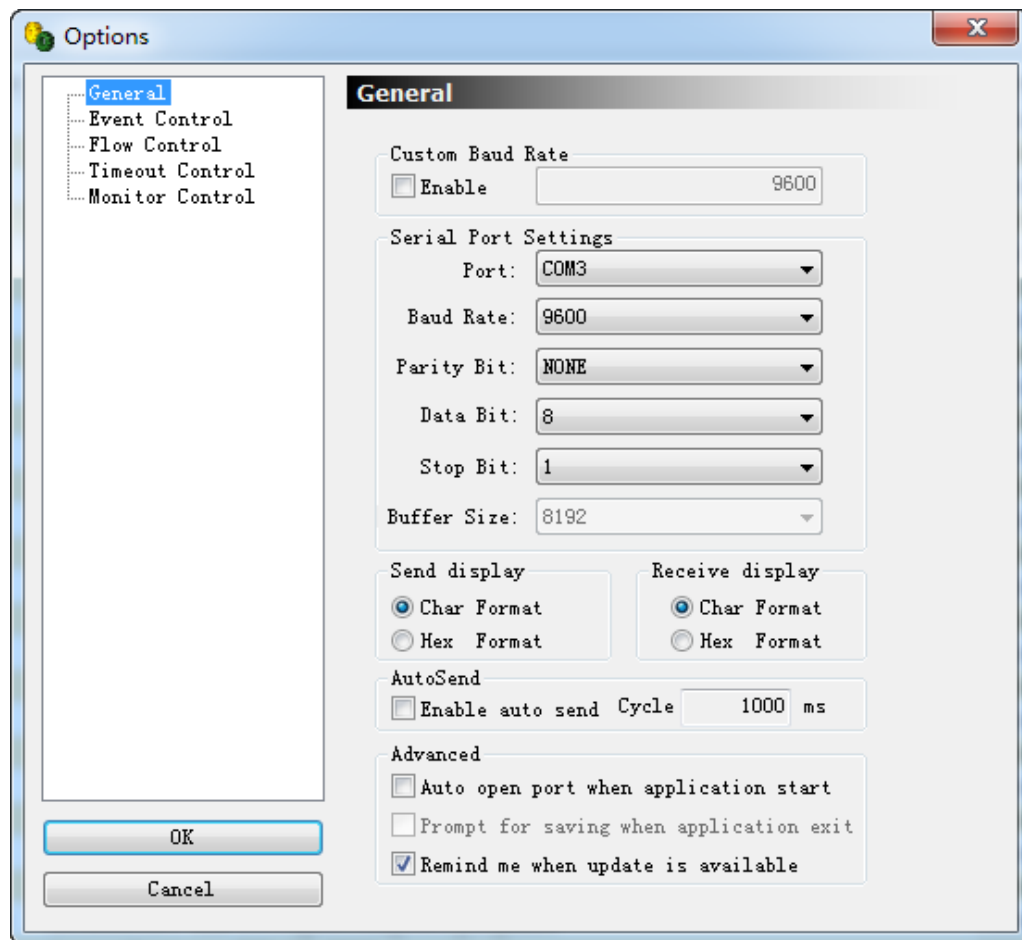

Catch the serial port data as below:

