

Welcome

Thank you for choosing Freenove products!

Get Started

Please follow this tutorial to set up the camera.

Get Support

Encounter problems? Don't worry! Refer to "TroubleShooting.pdf" or contact us.

When there are packaging damage, quality problems, questions encountering in use, etc., just send us an email. We will reply to you within one working day and provide a solution.

support@freenove.com

About

Freenove provides open source electronic products and services.

Freenove is committed to helping customers learn programming and electronic knowledge, quickly implement product prototypes, realize their creativity and launch innovative products. Our services include:

- Kits for learning programming and electronics
- Kits compatible with Arduino®, Raspberry Pi®, micro:bit®, etc.
- Kits for robots, smart cars, drones, etc.
- Components, modules and tools
- Design and customization

To learn more about us or get our latest information, please visit our website:

<http://www.freenove.com>

Copyright

All the files provided in the ZIP file are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](https://creativecommons.org/licenses/by-nc-sa/3.0/). You can find a copy of the license in the ZIP file.



It means you can use these files on your own derived works, in part or completely. But not for commercial use.

Freenove® brand and logo are trademarks of Freenove Creative Technology Co., Ltd. Must not be used without permission.



Other registered trademarks and their owners appearing in this document:

Arduino® is a trademark of Arduino LLC (<https://www.arduino.cc/>).

Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

micro:bit® is a trademark of Micro:bit Educational Foundation (<https://www.microbit.org/>)

Get Started

Note (Important)

Please note that our FNK0056 product, which comes with the camera model OV5647, is only compatible with Raspberry Pi; while the product FNK0056B, with camera model IMX219, can work with both Raspberry Pi and Jetson Nano.


This tutorial introduces the use of product FNK0056(B) on Raspberry Pi.

Product SKU	Camera Model	Work with Raspberry Pi	Work with Jetson Nano
FNK0056	OV5647	Yes(this tutorial)	No
FNK0056B	IMX219	Yes(this tutorial)	Yes

Step 1 What you will need

Raspberry Pi computer with a Camera Module port

All current models of Raspberry Pi have a port for connecting the Camera Module.

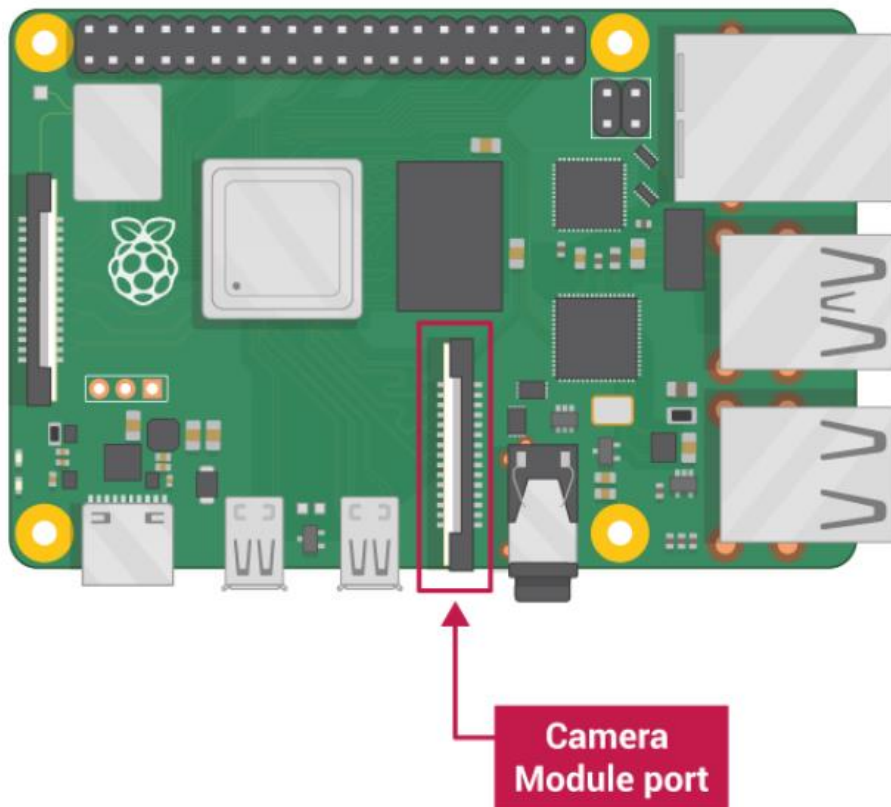

Note: If you want to use a Raspberry Pi Zero, you need a Camera Module ribbon cable that fits the Raspberry

Pi Zero's smaller Camera Module port.

Raspberry Pi Camera Module



There are two versions of the Camera Module:


The standard version (<https://www.raspberrypi.org/products/camera-module-v2/>), which is designed to take pictures in normal light

The NoIR version (<https://www.raspberrypi.org/products/pi-noir-camera-v2/>), which doesn't have an infrared filter, so you can use it together with an infrared light source to take pictures in the dark.


Step 2 Connect and install the Camera Module

Ensure your Raspberry Pi is turned off.


1. Locate the Camera Module port.

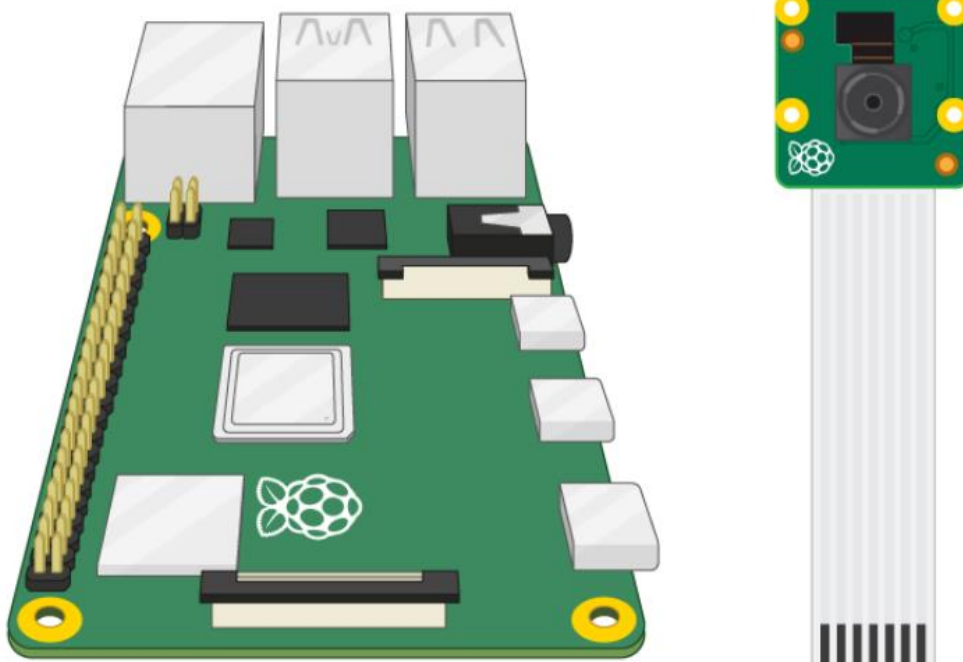


2. Gently pull up on the edges of the port's plastic clip.

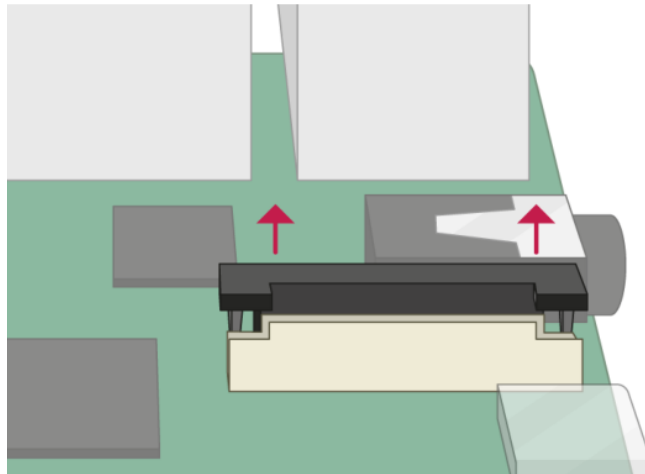


3. Insert the Camera Module ribbon cable; make sure the connectors at the bottom of the ribbon cable are facing the contacts in the port.

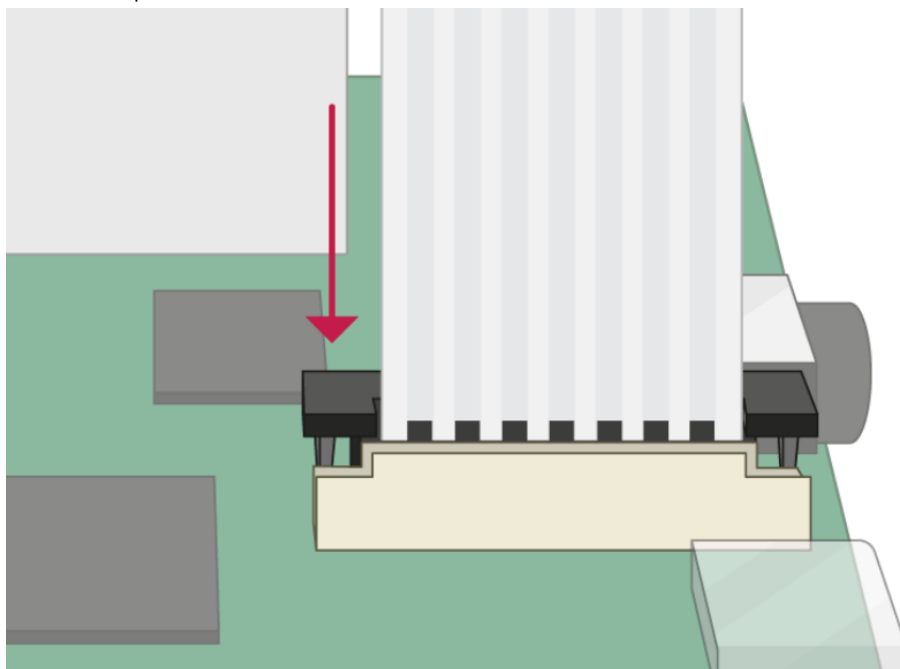


4. Push the plastic clip back into place.

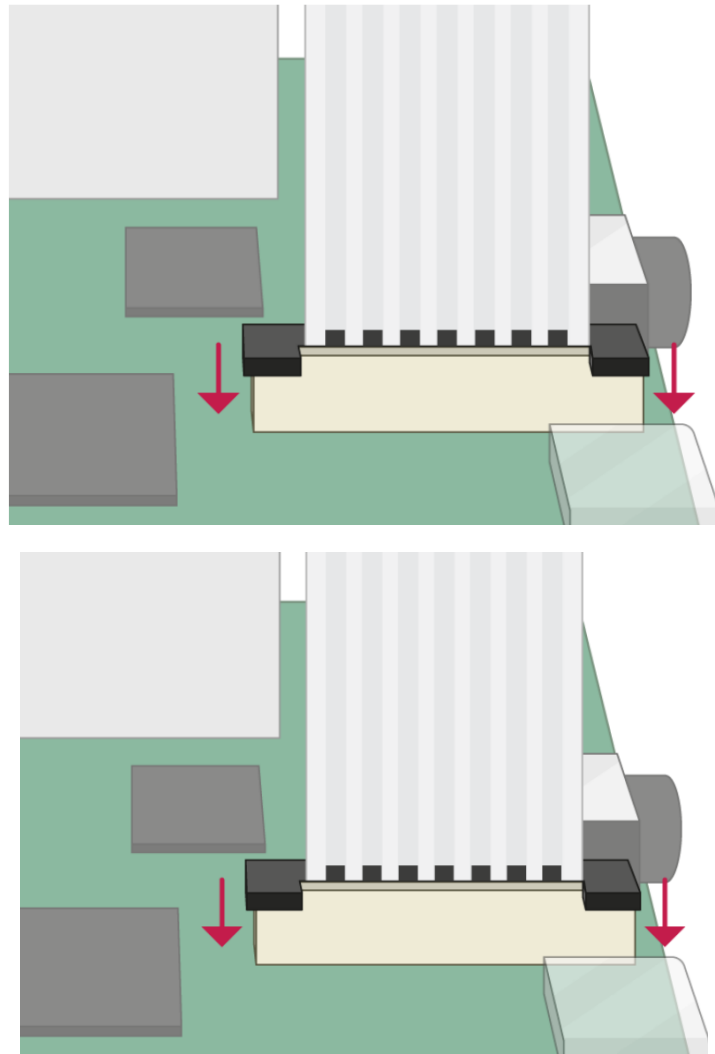

Assemble the camera support

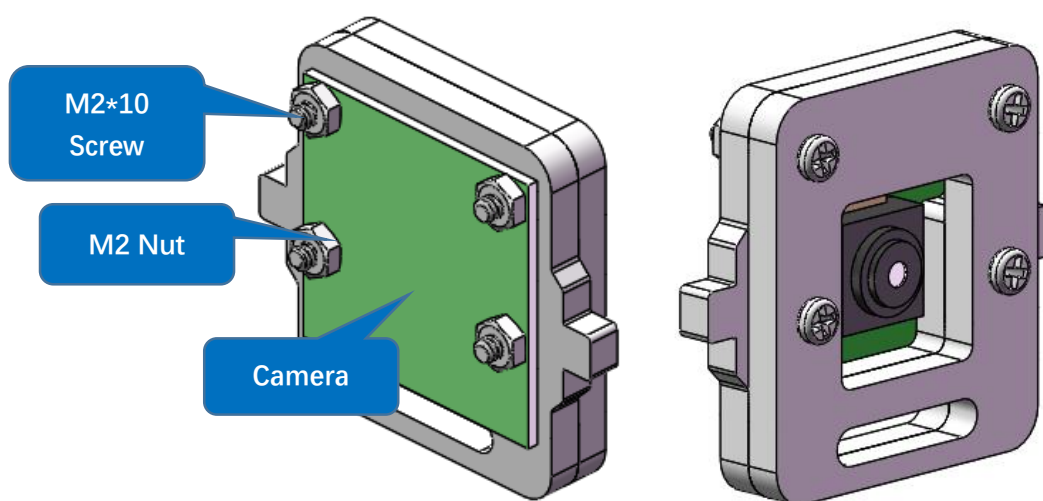

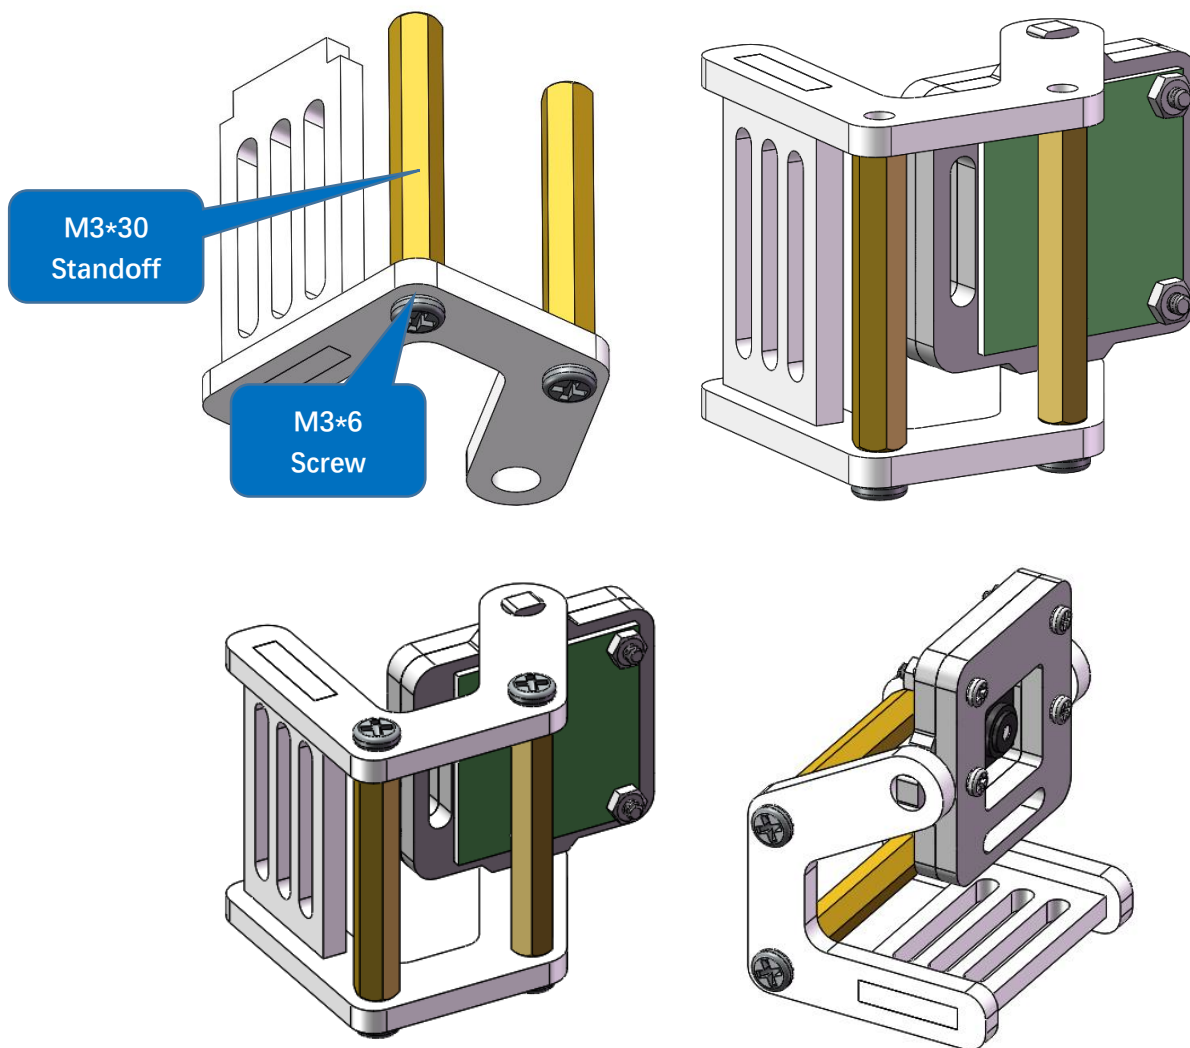

Start up your Raspberry Pi.

Step 3 How to control the Camera Module via the command line

The Python Picamera2 module currently uses the latest version of the Raspberry PI operating system (called Bullseye) by default.

Picamera2 is designed for systems running either Raspberry Pi OS version or Raspberry Pi OS Lite, using a Bullseye or later image. It is pre-installed in current images downloaded from the Raspberry Pi website, or can be installed using the Raspberry Pi Imager tool. Users with older images should consider updating them or proceed to the installation instructions.

Picamera2 can operate in a headless manner, not requiring an attached screen or keyboard. When first setting up such a system we would recommend attaching a keyboard and screen if possible, as it can make troubleshooting easier. Raspberry Pi OS Bullseye and later images by default run the libcamera camera stack, which is required for Picamera2.

Open a terminal window by clicking the black monitor icon in the taskbar:



If you are using the **FNK0056B 8MP camera**, to have the camera be detected successfully, you need to modify the configuration file to add the designated camera driver.

If you are using the FNK0056 5MP camera, you can skip this configuration.

Run the command to open and edit the configuration file.

```
sudo nano /boot/config.txt
```

Add `dtoverlay=imx219` to the final line of the `/boot/config.txt`. Press Ctrl+O, Enter to save the change and Ctrl+Z to exit.

```
dtoverlay=imx219
```

Reboot your raspberry pi.

```
sudo reboot
```

Before testing the camera, run the following command to see if the camera can be detected.

```
libcamera-hello --list-cameras
```



```
pi@raspberrypi:~ $ libcamera-hello --list-cameras
Available cameras
-----
0 : ov5647 [2592x1944 10-bit GBRG] (/base/soc/i2c0mux/i2c@1/ov5647@36)
    Modes: 'SGBRG10_CSI2P' : 640x480 [58.92 fps - (16, 0)/2560x1920 crop]
        1296x972 [43.25 fps - (0, 0)/2592x1944 crop]
        1920x1080 [30.62 fps - (348, 434)/1928x1080 crop]
        2592x1944 [15.63 fps - (0, 0)/2592x1944 crop]

pi@raspberrypi:~ $
```

Or this command:

```
ls /dev/video*
```

```
pi@raspberrypi:~ $ ls /dev/video*
/dev/video0  /dev/video12 /dev/video15 /dev/video19 /dev/video22
/dev/video10 /dev/video13 /dev/video16 /dev/video20 /dev/video23
/dev/video11 /dev/video14 /dev/video18 /dev/video21 /dev/video31
pi@raspberrypi:~ $
```

/dev/video0 indicates the camera is connected. If you do not find this device, please check the camera wiring. You may reconnect it and try again.

Please note that when operating the camera wiring, you need to shut down the raspberry pi first; otherwise, it may burn the camera.

You can check that libcamera is working by opening a command window and typing:

```
libcamera-hello
```

You should see a camera preview window for about five seconds. If you do not, please refer to the Raspberry Pi camera documentation.

You can also enter the following command to capture an image with a resolution of 800 by 600. The image is saved in the current directory path by default.

```
libcamera-jpeg -o test.jpg -t 2000 -width 800 -height 600
```

If you have any concerns, please contact us via email: support@freenove.com

libcamera-apps does not work properly on Pi 0 to 3 devices when running the latest Bullseye images.

A workaround is to open a terminal, run "**sudo raspi-config**", navigate to "**Advanced Options**" and enable "**Glamor**" graphic acceleration. Then reboot your Pi.

```
sudo raspi-config
```

```
pi@raspberrypi:~ $ sudo raspi-config
```

```
pi@raspberrypi: ~  
File Edit Tabs Help  
Raspberry Pi 3 Model A Plus Rev 1.0  
  
Raspberry Pi Software Configuration Tool (raspi-config)  
  
1 System Options      Configure system settings  
2 Display Options     Configure display settings  
3 Interface Options   Configure connections to peripherals  
4 Performance Options Configure performance settings  
5 Localisation Options Configure language and regional settings  
6 Advanced Options    Configure advanced settings  
8 Update              Update this tool to the latest version  
9 About raspi-config  Information about this configuration tool  
  
<Select> <Finish>
```

```
pi@raspberrypi: ~  
File Edit Tabs Help  
  
Raspberry Pi Software Configuration Tool (raspi-config)  
  
A1 Expand Filesystem  Ensures that all of the SD card is available  
A2 GL Driver          Enable/disable experimental desktop GL driver  
A3 Compositor         Enable/disable xcompmgr composition manager  
A4 Network Interface Names Enable/disable predictable network i/f names  
A5 Network Proxy Settings Configure network proxy settings  
A8 Glamor             Enable/disable glamor graphics acceleration  
A9 Wayland            Enable experimental Wayland backend  
AA Network Config     Set network configuration tool  
  
<Select> <Back>
```

```
pi@raspberrypi: ~  
File Edit Tabs Help  
  
Would you like glamor acceleration to be enabled?  
  
<Yes> <No>
```

Reboot your Pi.

If you are using Raspberry Pi 5, the camera may not work with the latest system. In this case, please update the kernel of the Raspberry Pi OS and test again.

The steps to update the kernel are as follows:

Run the command to update to the system that is compatible with the camera.

```
sudo rpi-update pulls/5691
```

```
pi@raspberrypi:~ $ sudo rpi-update pulls/5691
```

After the update, reboot your Raspberry Pi and run the image capture command again to see if it works.

```
libcamera-jpeg -o test.jpg -t 2000 -width 800 -height 600
```

If the update fails, please check your network.

If you see the error like this, you may try the solutions below.

```
pi@raspberrypi:~ $ sudo rpi-update pulls/5691
```

```
*** Raspberry Pi firmware updater by Hexxeh, enhanced by AndrewS and Dom
```

```
*** Performing self-update
```

```
!!! Failed to download update for rpi-update!
```

```
!!! Make sure you have ca-certificates installed and that the time is set correctly
```

Should such error occur, please turning the proxy service and configuring DNS separately in /etc/hosts.

Run the command to open the etc/hosts file.

```
sudo nano /etc/hosts
```

Add the configuration to the last line.

```
199.232.68.133 raw.githubusercontent.com
```

```

pi@raspberrypi: ~
File Edit Tabs Help
GNU nano 7.2 /etc/hosts
127.0.0.1    localhost
::1         localhost ip6-localhost ip6-loopback
ff02::1     ip6-allnodes
ff02::2     ip6-allrouters

127.0.1.1    raspberrypi
199.232.68.133 raw.githubusercontent.com

```


Press Ctrl+O, Enter, Ctrl x to save the change and exit it.

Reboot your Raspberry Pi and run the image capture command again to see if it works.

```
libcamera-jpeg -o test.jpg -t 2000 -width 800 -height 600
```

Step 4 How to control the Camera Module with Python code

The Python picamera library allows you to control your Camera Module and create amazing projects. Open a Python 3 editor, such as **Thonny Python IDE**:

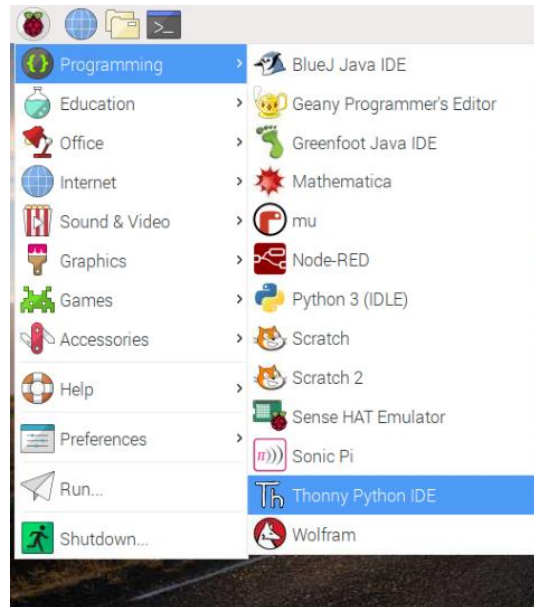

Open a new file and save it as camera.py.

Note: it's important that you never save the file as picamera2.py.

Enter the following code:

```
1 from picamera2 import Picamera2, Preview
2 import time
3 picam2 = Picamera2()
4 camera_config = picam2.create_preview_configuration()
5 picam2.configure(camera_config)
6 picam2.start_preview(Preview.QTGL)
7 picam2.start()
8 time.sleep(2)
9 picam2.capture_file("test.jpg")
10 picam2.close()
```

Or you can Open Terminal,

1. Download tutorial and code with the command:


```
https://github.com/Freenove/Freenove_Camera_Module_for_Raspberry_Pi
```

2. Enter Raspberry_Pi folder with cd command.

```
cd ~/Freenove_Camera_Module_for_Raspberry_Pi/Raspberry_Pi
```

3. Run the code

```
python camera.py
```

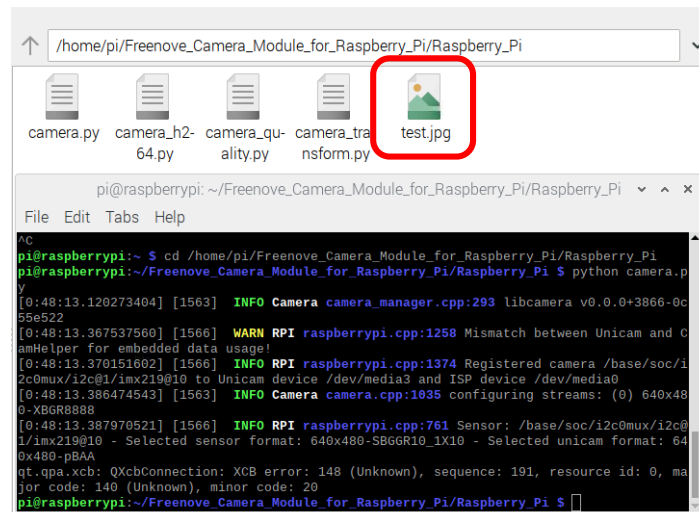

The following script will:

1. Open the camera system
2. Generate a camera configuration suitable for preview
3. Configure the camera system with that preview configuration
4. Start the preview window
5. Start the camera running
6. Wait for two seconds and capture a JPEG file (still in the preview resolution)

NOTE:

Users of Raspberry Pi 3 or earlier devices will need to enable Glamor in order for this example script using X Windows to work. To do this, run **sudo raspi-config** in a command window, choose Advanced Options and then enable Glamor graphic acceleration. Finally reboot your device.

In addition, you can set Preview window parameters,

The preview implementation takes exactly the same parameters:

- x - the x-offset of the preview window
- y - the y-offset of the preview window
- width - the width of the preview window
- height - the height of the preview window
- transform - a transform that allows the camera image to be horizontally and/or vertically flipped on the display

All the parameters are optional, and default values will be chosen if omitted. The following example will place an

800x600 pixel preview window at (100, 200) on the display, and will horizontally mirror the camera preview image:

Open Terminal,

1. Enter Raspberry_Pi folder with cd command.

```
cd ~/Freenove_Camera_Module_for_Raspberry_Pi/Raspberry_Pi
```

2. Run the code

```
python camera_transform.py
```


Enter the following code:

```
1 from picamera2 import Picamera2, Preview
```

```

2 from libcamera import Transform
3 picam2 = Picamera2()
4 picam2.start_preview(Preview.QTGL, x=100, y=200, width=800, height=600,
5 transform=Transform(hflip=1))
6 picam2.start()

```

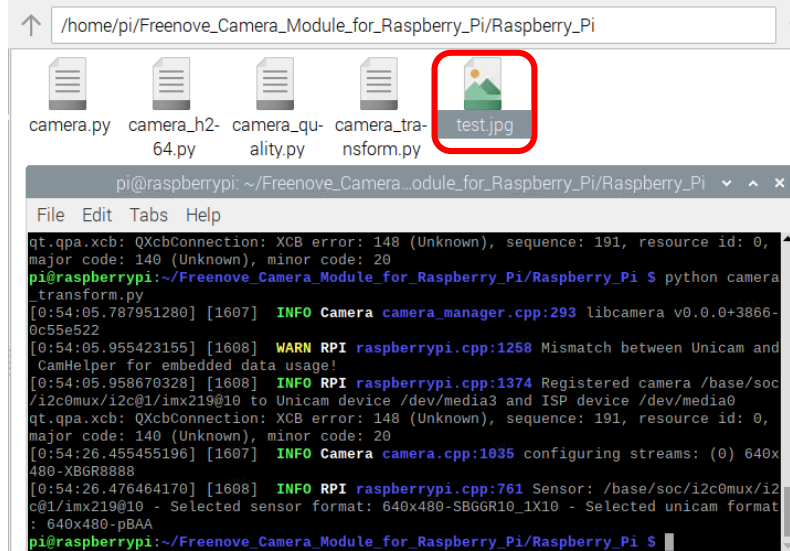

The supported transforms are:

- Transform() - the identity transform, which is the default
- Transform(hflip=1) - horizontal flip
- Transform(vflip=1) - vertical flip
- Transform(hflip=1, vflip=1) - horizontal and vertical flip (equivalent to a 180 degree rotation)

It's important to realise that the display transform discussed here does not have any effect on the actual images received from the camera. It only applies the requested transform as it renders the pixels onto the screen. We'll encounter camera transforms again when it comes actually to transforming the images as the camera delivers them. Please also note that in the example above, the **start_preview()** function must be called before the call to **picam2.start()**. Finally, if the camera images have a different aspect ratio to the preview window, they will be letter- or pillar-boxed to fit, preserving the image's proper aspect ratio.

Next use the camera to capture videos:

In Picamera2, the process of capturing and encoding video is largely automatic. The application only has to define what encoder it wants to use to compress the image data, and how it wants to output this compressed data stream.

The mechanics of taking the camera images that arrive, forwarding them to an encoder, which in turn sends the results directly to the requested output, is entirely transparent to the user. The encoding and output all happens in a separate thread from the camera handling to minimise the risk of dropping camera frames.

Here is a first example of capturing a ten-second video.

Open Terminal,

1. Enter Raspberry_Pi folder with cd command.

```
cd ~/Freenove_Camera_Module_for_Raspberry_Pi/Raspberry_Pi
```

2. Run the code


```
python camera_h264.py
```

Enter the following code:

```

1  from picamera2.encoders import H264Encoder
2  from picamera2 import Picamera2
3  import time
4  picam2 = Picamera2()
5  video_config = picam2.create_video_configuration()
6  picam2.configure(video_config)
7  encoder = H264Encoder(bitrate=10000000)
8  output = "test.h264"
9  picam2.start_recording(encoder, output)
10 time.sleep(10)
11 picam2.stop_recording()

```

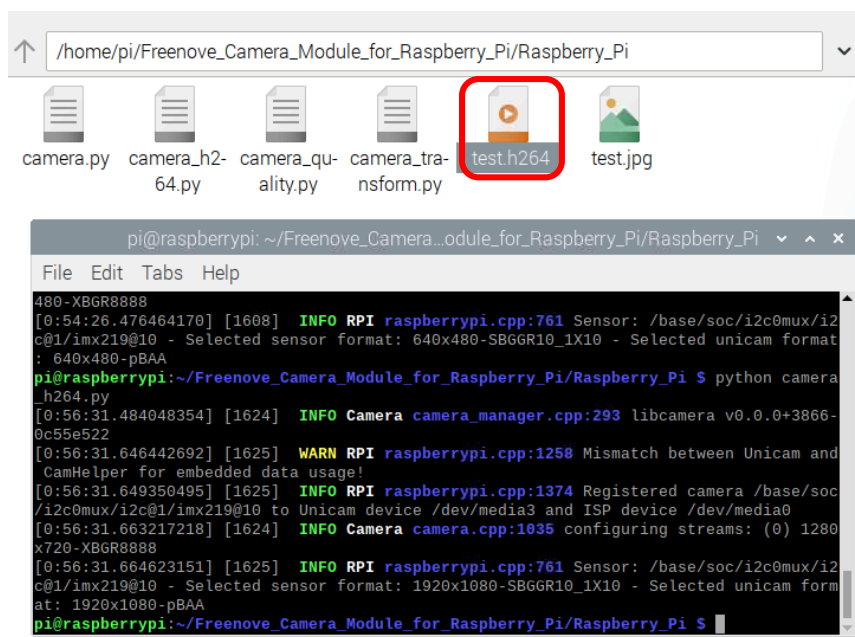

In this example we use the H.264 encoder. For the output object we can just use a string for convenience; this will be interpreted as a simple output file. For configuring the camera, the `create_video_configuration` is a good starting point, as it will use a larger `buffer_count` to reduce the risk of dropping frames.

We also used the convenient `start_recording` and `stop_recording` functions, which start and stop both the encoder and the camera together. Sometimes it can be useful to separate these two operations, for example you might want to start and stop a recording multiple times while leaving the camera running throughout. For this reason, `start_recording` could have been replaced by:

```

1  encoder.output = 'test.h264'
2  picam2.start_encoder(encoder)
3  picam2.start()

```

and `stop_recording` by:

```

1  picam2.stop()
2  picam2.stop_encoder()

```

All the video encoders can be constructed with parameters that determine the quality (amount of compression) of the output, such as the bitrate for the H.264 encoder. For those not so familiar with the details of these encoders, these parameters can also be omitted in favour of supplying a quality to the `start_encoder` or

start_recording functions.

The permitted quality parameters are:

- **Quality.VERY_LOW**
- **Quality.LOW**
- **Quality.MEDIUM** - this is the default for both functions if the parameter is not specified
- **Quality.HIGH**
- **Quality.VERY_HIGH**

This quality parameter only has any effect if the encoder was not passed explicit codec-specific parameters.

It could be used like this:

Open Terminal,

1. Enter Raspberry_Pi folder with cd command.


```
cd ~/Freenove_Camera_Module_for_Raspberry_Pi/Raspberry_Pi
```

2. Run the code

```
python camera_quality.py
```

Enter the following code:

```
1  import time
2  from picamera2.encoders import H264Encoder, Quality
3  from picamera2 import Picamera2
4  picam2 = Picamera2()
5  video_config = picam2.create_video_configuration()
6  picam2.configure(video_config)
7  encoder = H264Encoder()
8
9  picam2.start_recording(encoder, 'low.h264', quality=Quality.VERY_LOW)
10 print(encoder._bitrate)
11 time.sleep(5)
12 picam2.stop_recording()
13
14 picam2.start_recording(encoder, 'medium.h264', quality=Quality.MEDIUM)
15 print(encoder._bitrate)
16 time.sleep(5)
17 picam2.stop_recording()
18
19 picam2.start_recording(encoder, 'high.h264', quality=Quality.VERY_HIGH)
20 print(encoder._bitrate)
21 time.sleep(5)
22 picam2.stop_recording()
```

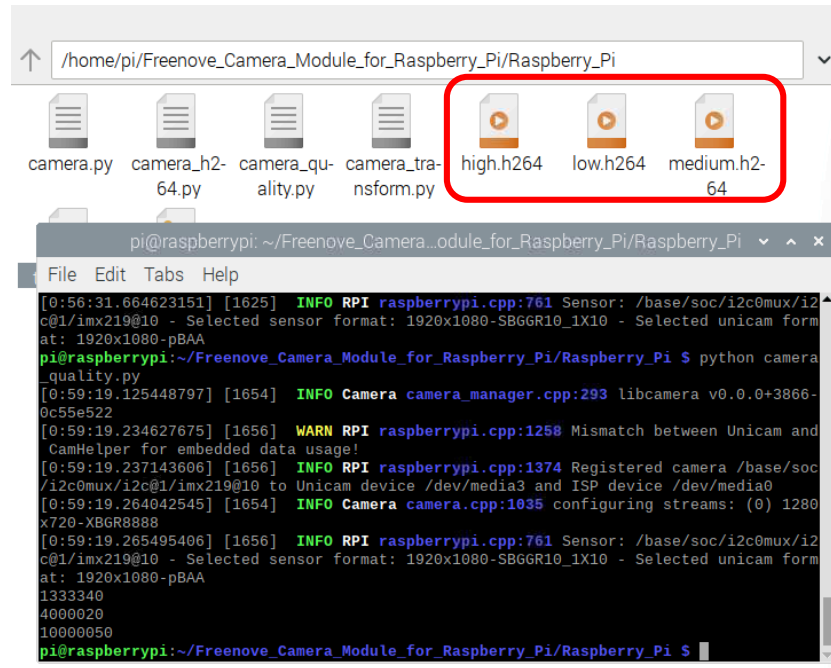You can also check out the official documentation to learn more about picamera2:

<https://datasheets.raspberrypi.com/camera/picamera2-manual.pdf>

There are so many interesting examples for you to learn in picamera2.

The official library link is as follows:

<https://github.com/raspberrypi/picamera2>