

## IMPORTANT SAFETY INFORMATION



### WARNING

### INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

#### Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use may cause unpredictable behavior, leading to fire, explosion, or injury.
- If the product overheats, emits unusual odors or smoke, leaks, or burns, stop using it immediately and contact customer support.
- Never attempt to open, repair, or modify the product. Any tampering may result in electric shock, fire, or battery damage.

age.

- Be aware that liquid ejected from the product may cause irritation or burns. Avoid contact with leaking liquid and seek medical help if it contacts your eyes.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds the rated limit.
- Any use of unrecommended or non-supplied materials or parts may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

## OPERATING INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the specified operating temperature ranges.
- Charging temperature: -4°F to 113°F (-20°C to 45°C).
- Discharging temperature: -4°F to 113°F (-20°C to 45°C).
- To ensure proper air circulation, keep the product vents uncovered.
- Charging in damp or poorly ventilated spaces may cause safety hazards.
- Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product if it has fallen, been dropped, or exposed to vibrations.
- Ensure the device(s) are powered off before connecting

them to the product.

- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions. Place your solar panel where it will get as much direct sunlight as possible.