



Function Codes

- (1) Set function code F02 to "1" (external signals).
- (2) Set function code F01 to "1" (Voltage input to terminal [12]).
- (3) Set function code C34 to 50% (5V = max frequency).
- (4) Set function code F30 to 33% (analog out max = 3.3V)