



Activation process of remote control Receiver

Before carrying out any activation of the remote control it is necessary to verify the correct functioning of it. In the case that of the activation is necessary, please follow the below instructions. This activation should be carried out exclusively from the hood control panel.

PROCEDURE A

- Switch off the light and the motor.
- Press the "Delay"-key for about 5 seconds until:
 - the leds OFF MOTOR and SPEED 1 flash twice to indicate the **ACTIVATION** of the remote control receiver;
 - the leds OFF MOTOR and SPEED 1 flash once indicate the **DISCONNECTION** of the remote control receiver;

PROCEDURE B

- Switch off the light and the motor.
- Press the "Intensive"-key for about 5 seconds until:
 - the relative Led flash twice to indicate the **ACTIVATION** of the remote control receiver;
 - the relative Led flash once to indicate the **ACTIVATION** of the remote control receiver;

PROCEDURE C

- Press the "24H"-key for about 5 seconds until the icons of activated functions will be lit.
- When releasing the key, the "24H"-symbol starts to flash, within 3 seconds press again the "24H"-key and the following will appear on the display:
 - the points under the motor LEDS are lit, the receiver of the remote control is **ACTIVATED**;
 - the points under the motor LEDS are unlit, the receiver of the remote control is **DISCONNECTED**.

PROCEDURE D

- Switch off the light and the motor.
- Press for about 5 seconds the "24H"-key until you will see:
 - "24H" twice, to indicate the **ACTIVATION** of the remote control receiver;
 - "24H" once, to indicate the **DISCONNECTION** of the remote control receiver;

PROCEDURE E

- Switch off the motor and the lighting system.
- Unplug the hood from the mains supply.
- Re-establish the net connection by pressing the button "24H".
- Keep on pressing the button "24H", and on the basis of software's version two situations might appear:
 - A) On the display you can see "SE", then, please immediately release the button "24H", within 3 seconds on the display you can see a sequence, at this point please press the button "24H", you will see:
 - "TC" twice, to indicate the **ACTIVATION** of the remote control receiver;
 - "TC" once, to indicate the **DISCONNECTION** of the remote control receiver.
 - B) After few seconds nothing will appear on the display, please release the button "24H", within 3 seconds on the display you can see a sequence, at this point please press the button "24H", you will see:
 - "TC" twice, to indicate the **ACTIVATION** of the remote control receiver;
 - "TC" once, to indicate the **DISCONNECTION** of the remote control receiver.

PROCEDURA F

- Switch off the light and the motor.
- Press the "T2"-key for about 5 seconds until:
 - the Led T4 flash twice to indicate the **ACTIVATION** of the remote control receiver;
 - the Led T4 flash once to indicate the **ACTIVATION** of the remote control receiver;

Warning!!!

The pictures shown are generic, your product may have symbolic and / or different aesthetic, follow the steps indicated until you turn the receiver ensuring the operation of the Remote Control.

Warning!!!

The remote control replicates the functions on the control panel supplied with the hood. For a clearer understanding of these functions, please consult the instruction manual enclosed with the hood itself.

Avvertenze

- The remote control is powered by a 1.5 V carbon-zinc alkaline batteries of the standard LR03-AAA type (not included).
- Do not place the remote control near to heat sources.
- Used batteries must be thrown in the battery bank.



- IT Libretto di Istruzioni
- EN Instructions Manual
- FR Manuel d'Instructions
- DE Bedienungsanleitung
- NL Gebruiksaanwijzing
- ES Manual de instrucciones
- RU Руководство по эксплуатации

⏻	+	⏻	—	ⓘ	☀
Start up and disconnect the function Delay (where the hood is provided for).	Increases the working speed.	Turns the suction motor on and off.	Decreases the working speed.	Start up / disconnect the motor to the intensive speed starting from each speed (even with switched off motor).	Short pressure, switch on /off lights up to the highest brightness. Long pressure, switch on /off lights up to soft light (where the hood is provided for).