

**GP2040-CE**



**GP2040-CE.INFO**

## SHORTCUTS

Web-config:

Hold **[S2]** while plugging in the controller and then go to **192.168.7.1** on your computer browser.

Input Modes:

Hold **[P1]** while plugging in for PS3/DINPUT

Hold **[P2]** while plugging in for PS4

Hold **[K1]** while plugging in for Nintendo Switch

Hold **[K2]** while plugging in for XINPUT

Hold **[K3]** while plugging in for HID-Keyboards

D-Pad Modes:

**[S1] + [S2] + [DOWN]** = D-Pad

**[S1] + [S2] + [LEFT]** = Emulate left analog stick

**[S1] + [S2] + [RIGHT]** = Emulate right analog stick

SOCD Modes:

**[S2] + [A1] + [UP]** = Up Priority mode


**[S2] + [A1] + [LEFT]** = Last Input Priority (Last Win)

**[S2] + [A1] + [DOWN]** = Neutral mode

Find more at **[gp2040-ce.info/#/gp2040-shortcuts](https://gp2040-ce.info/#/gp2040-shortcuts)**

Main Button Inputs


GP2040	XInput	Switch	PS3	DInput	Arcade	Keyboard
B1	A	B	Cross	2	K1	Left Shift
B2	B	A	Circle	3	K2	Z
B3	X	Y	Square	1	P1	Left Control
B4	Y	X	Triangle	4	P2	Left Alt
L1	LB	L	L1	5	P4	C
R1	RB	R	R1	6	P3	Spacebar
L2	LT	ZL	L2	7	K4	V
R2	RT	ZR	R2	8	K3	X
S1	Back	Minus	Select	9	Coin	5
S2	Start	Plus	Start	10	Start	1
L3	LS	LS	L3	11	LS	Equal
R3	RS	RS	R3	12	RS	Minus
A1	Guide	Home	-	13	-	9
A2	-	Capture	-	14	-	F2

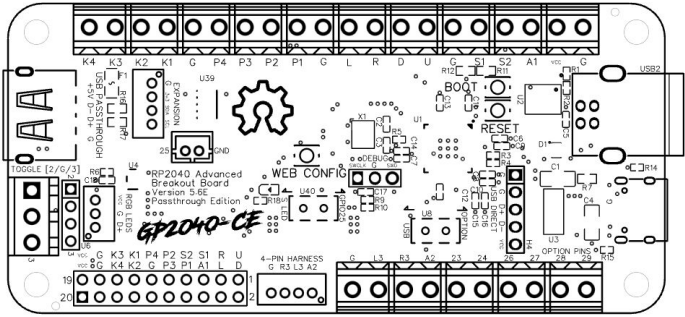


# GPIO Pinout

SMD SWITCH U40

 SMD SWITCH U8



LED GPIO25

 

USB OPTION

GPIO4

GPIO3

GPIO2

GPIO1

GPIO0

+5 +5  
G G  
05 06  
07 08  
G 09  
10 11  
12 13  
14 15  
16 17  
18 19

GPIO20 -  
GPIO21 -  
GPIO22 -

GPIO21 -  
GPIO20 -  
GPIO22 -  
GPIO23 -  
GPIO24 -  
GPIO26 -  
GPIO27 -  
GPIO28 -  
GPIO29 -

- GPIO5  
- GPIO6  
- GPIO7  
- GPIO8  
- GPIO25  
- GPIO9  
- GPIO10  
- GPIO11  
- GPIO12  
  
- GPIO16  
- GPIO17  
- GPIO18  
- GPIO19  
  
- GPIO15  
- GPIO13  
- GPIO14  
- GPIO20

