


# BLE Mini

## RedBearLab.com

### External Antenna

1. Remove the R2 (0-Ohm) resistor, it originally connects to the chip antenna

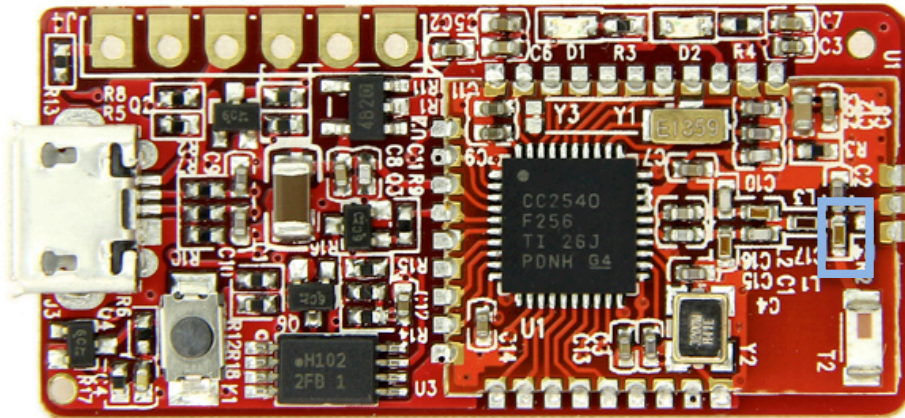

2. Put the resistor to R4 for the external RF pin, then solder your external antenna to RF and GND

