


Documentation

Bell movement

Use the last spline point to move the tube and the bell.


1. Select the spline.
2. Select the last spline point (the white square).
3. Move the point to move the bell.

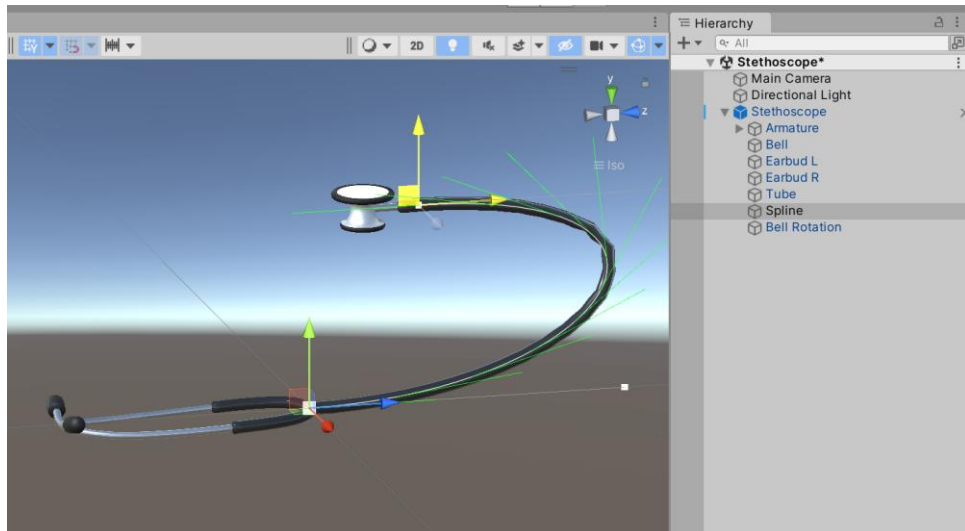

The last spline point will move the bell.

Bell rotation

Use the “Bell Rotation” transform to rotate the bell.

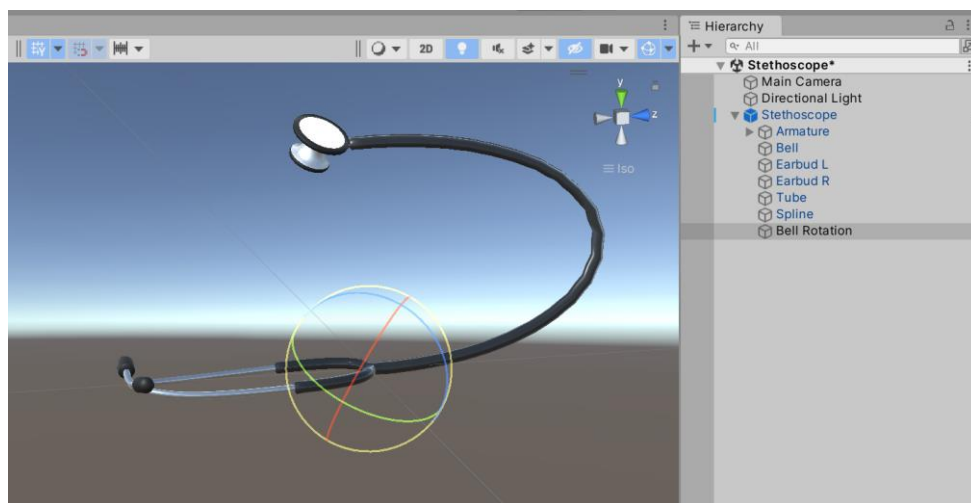

“Bell Rotation” should be used to rotate the bell.