



NOTES

- Use cross-connection when connecting UART pins. That means, RX from one side goes to the TX of the other.
- If the ESP12 is externally powered, no need to connect the VDD pin. Connecting the GND is enough.



Rev. 01, 01-11-2025

Design: Vishnu Mohanan

This work is licensed under a Creative Commons
Attribution 4.0 International License