

Enter Programming Mode : Switch



COUPON_CONTROL : Disable coupon filtering



DATABAR_EXPANDED_ENABLE : Enable



Exit Programming Mode : Switch



Enter Programming Mode : Switch



Composite Programing Label:



Exit Programming Mode : Switch

