







**ROKENBOK®**  
 TOY COMPANY

# RC MONORAIL with TRACK & CROSSING

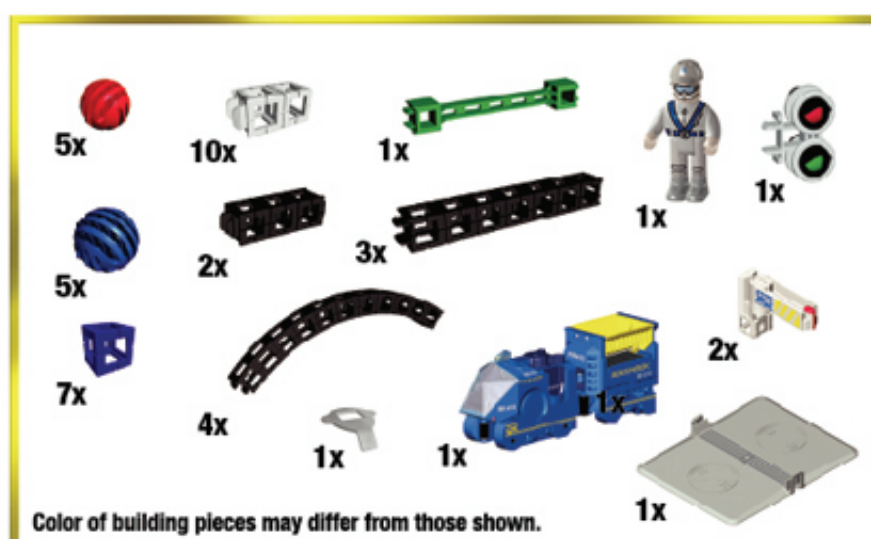


**WARNING:**  
 CHOKING HAZARD.  
 Toy contains small parts and small  
 balls. Not for children under 3 years.

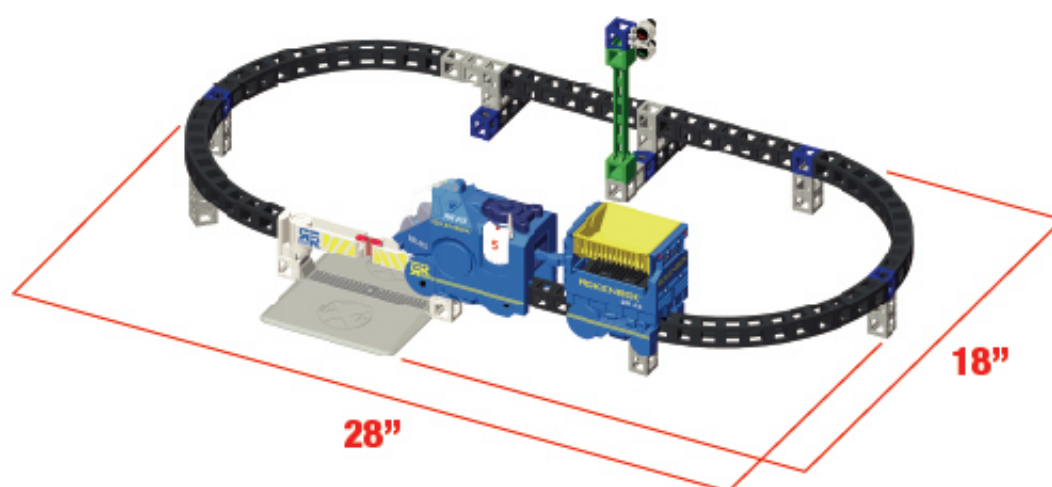

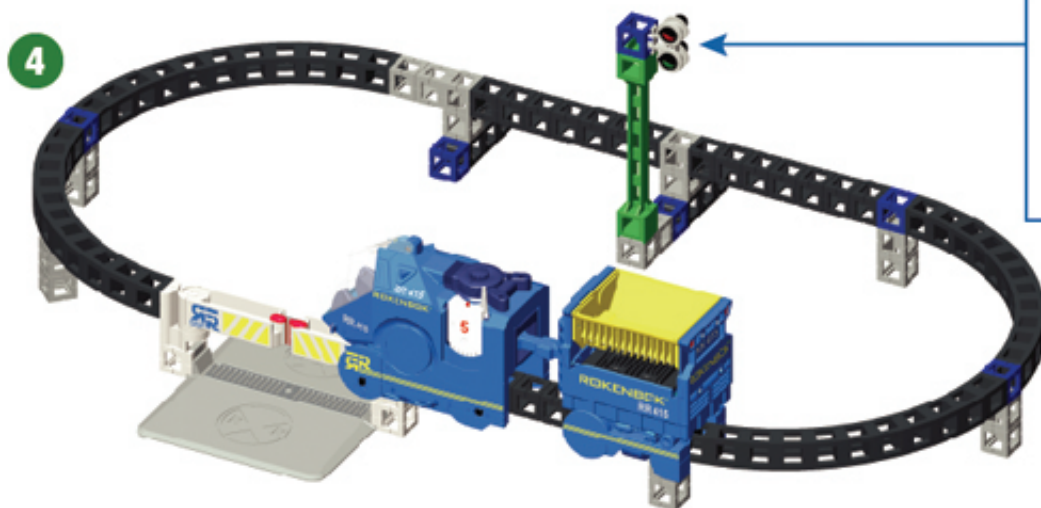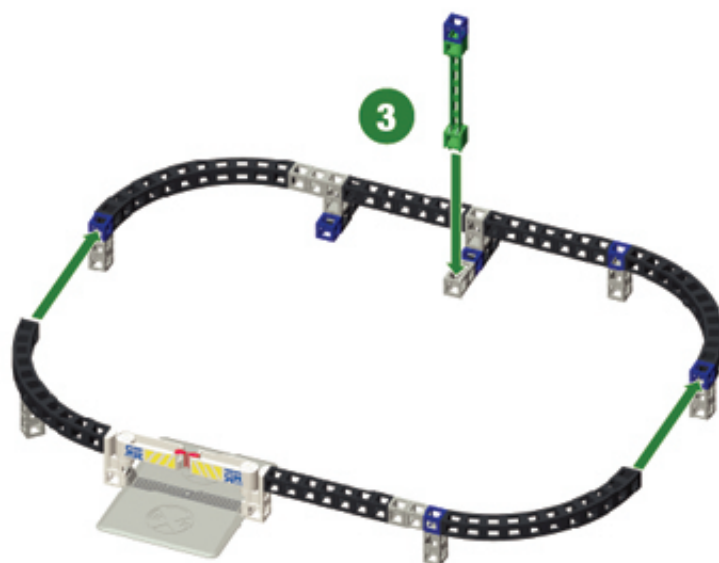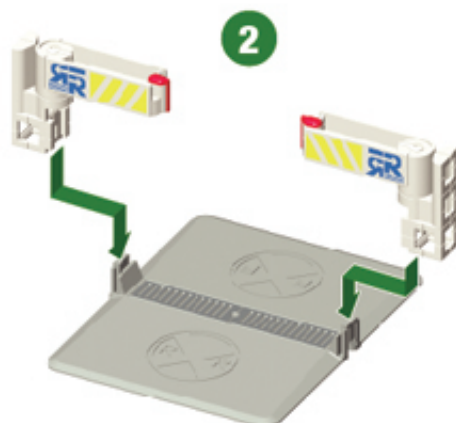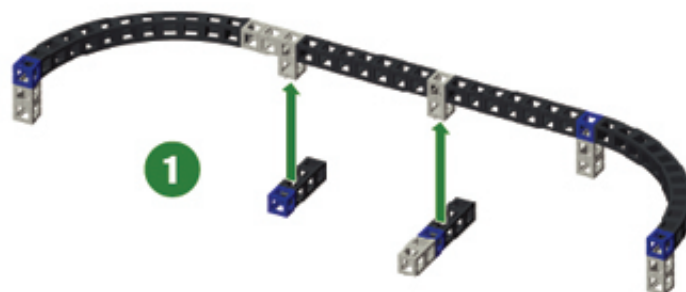




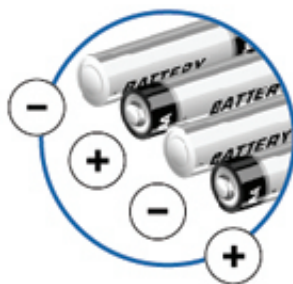


- Rokenbok recommends premium alkaline batteries for use in your RC vehicle.
- Batteries are to be inserted with correct polarity as shown.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or nickel cadmium batteries.


*Rokenbok Radio Control Center and Control Pad required, not included.*



*Three Control Pad ports for additional players.*

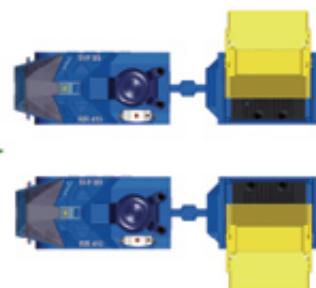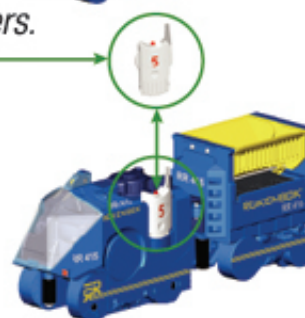

*Push A/B to Dump Hopper Left or Right*

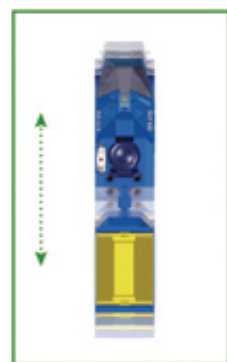

*Previous Vehicle Selection*

*Push to Slow*

*A/B*



### **3-MINUTE CRUISE CONTROL FEATURE**

#### **To engage:**

1. While driving forward or reverse with the compass wheel, press the X button located on the right side of the control pad.
2. Release the X button and compass wheel at the same time. Your Monorail will travel in that same direction for approximately three minutes.

#### **To disengage:**

1. Press any button on the Control Pad to stop the Monorail from moving, otherwise the Monorail will stop moving after three minutes.

