




TYPICAL CONFIGURATION

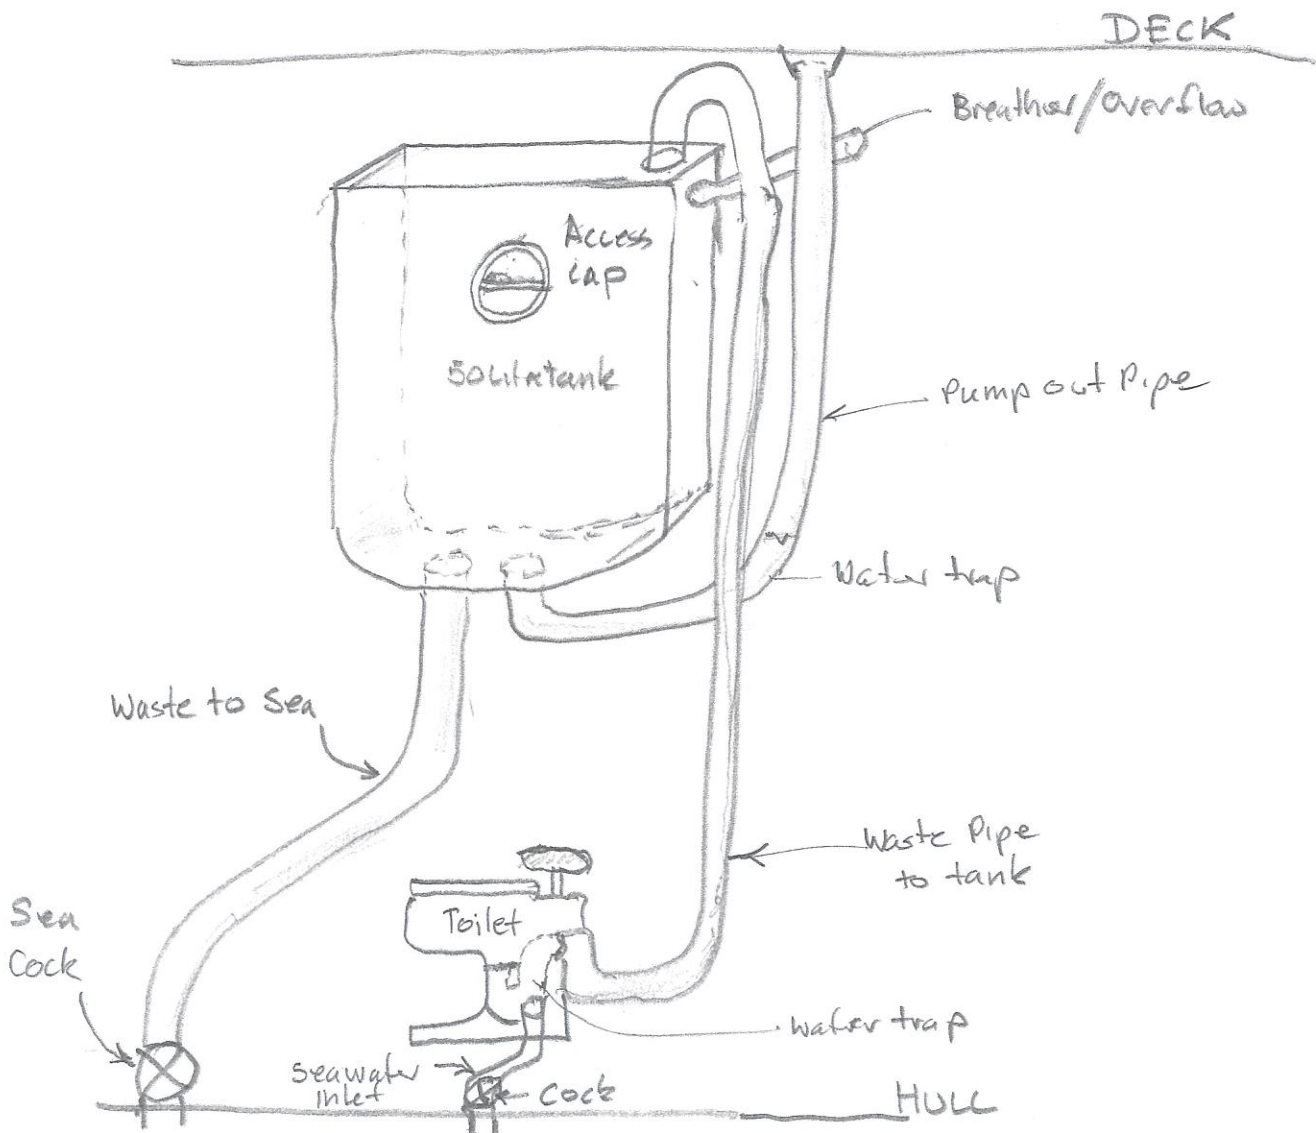

NORMAL BLACK WATER STORAGE

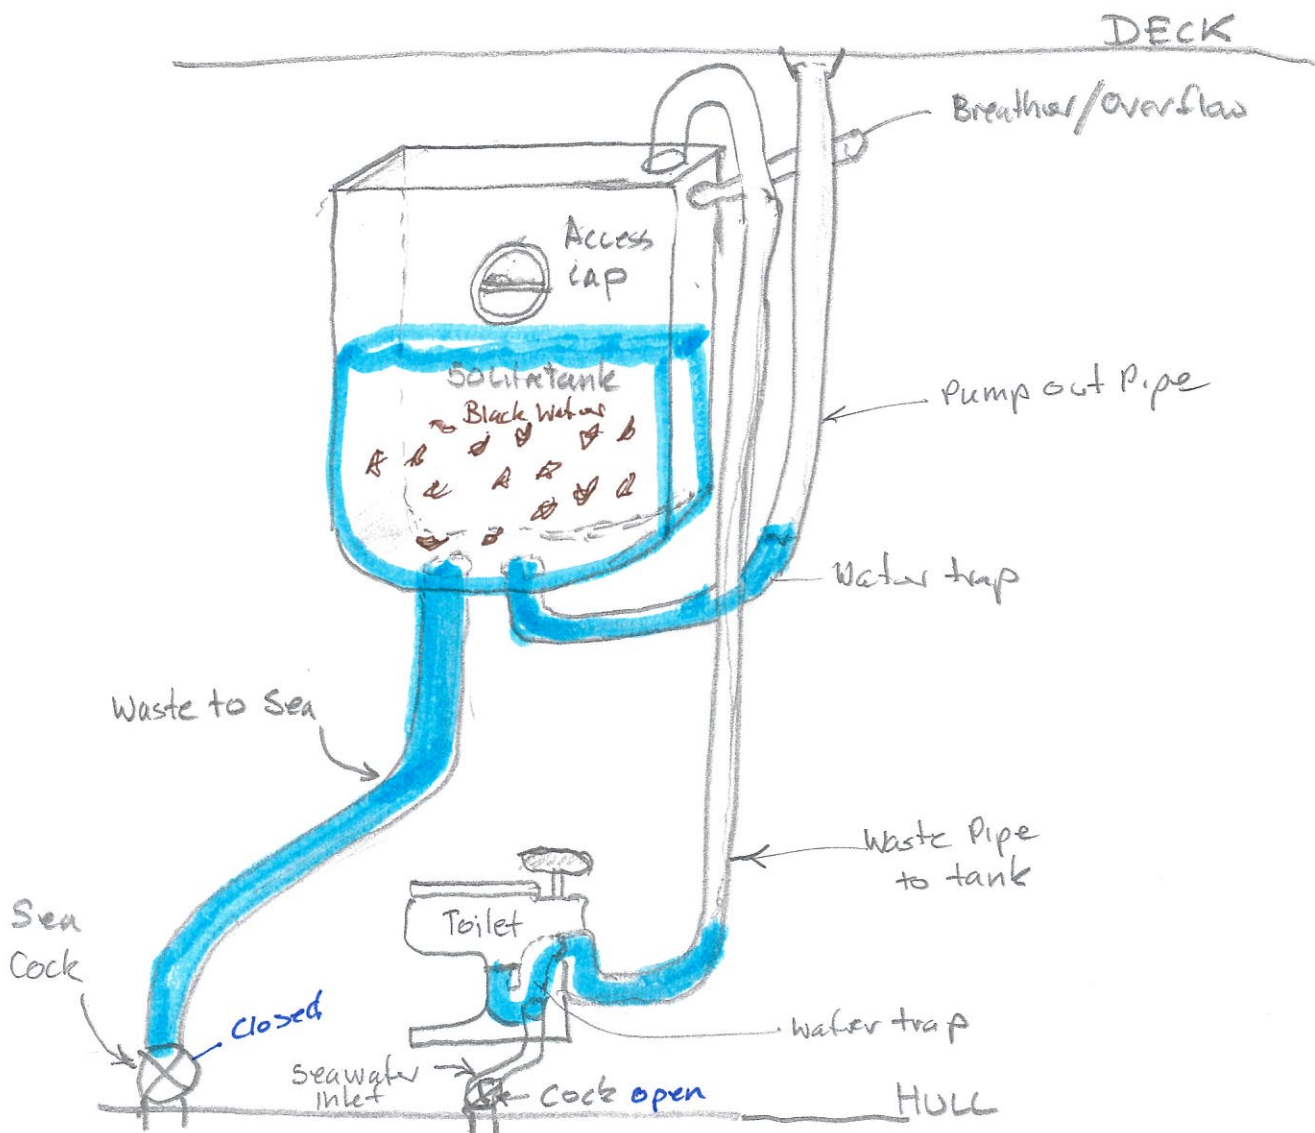


NORMAL DECK PUMP OPERATION

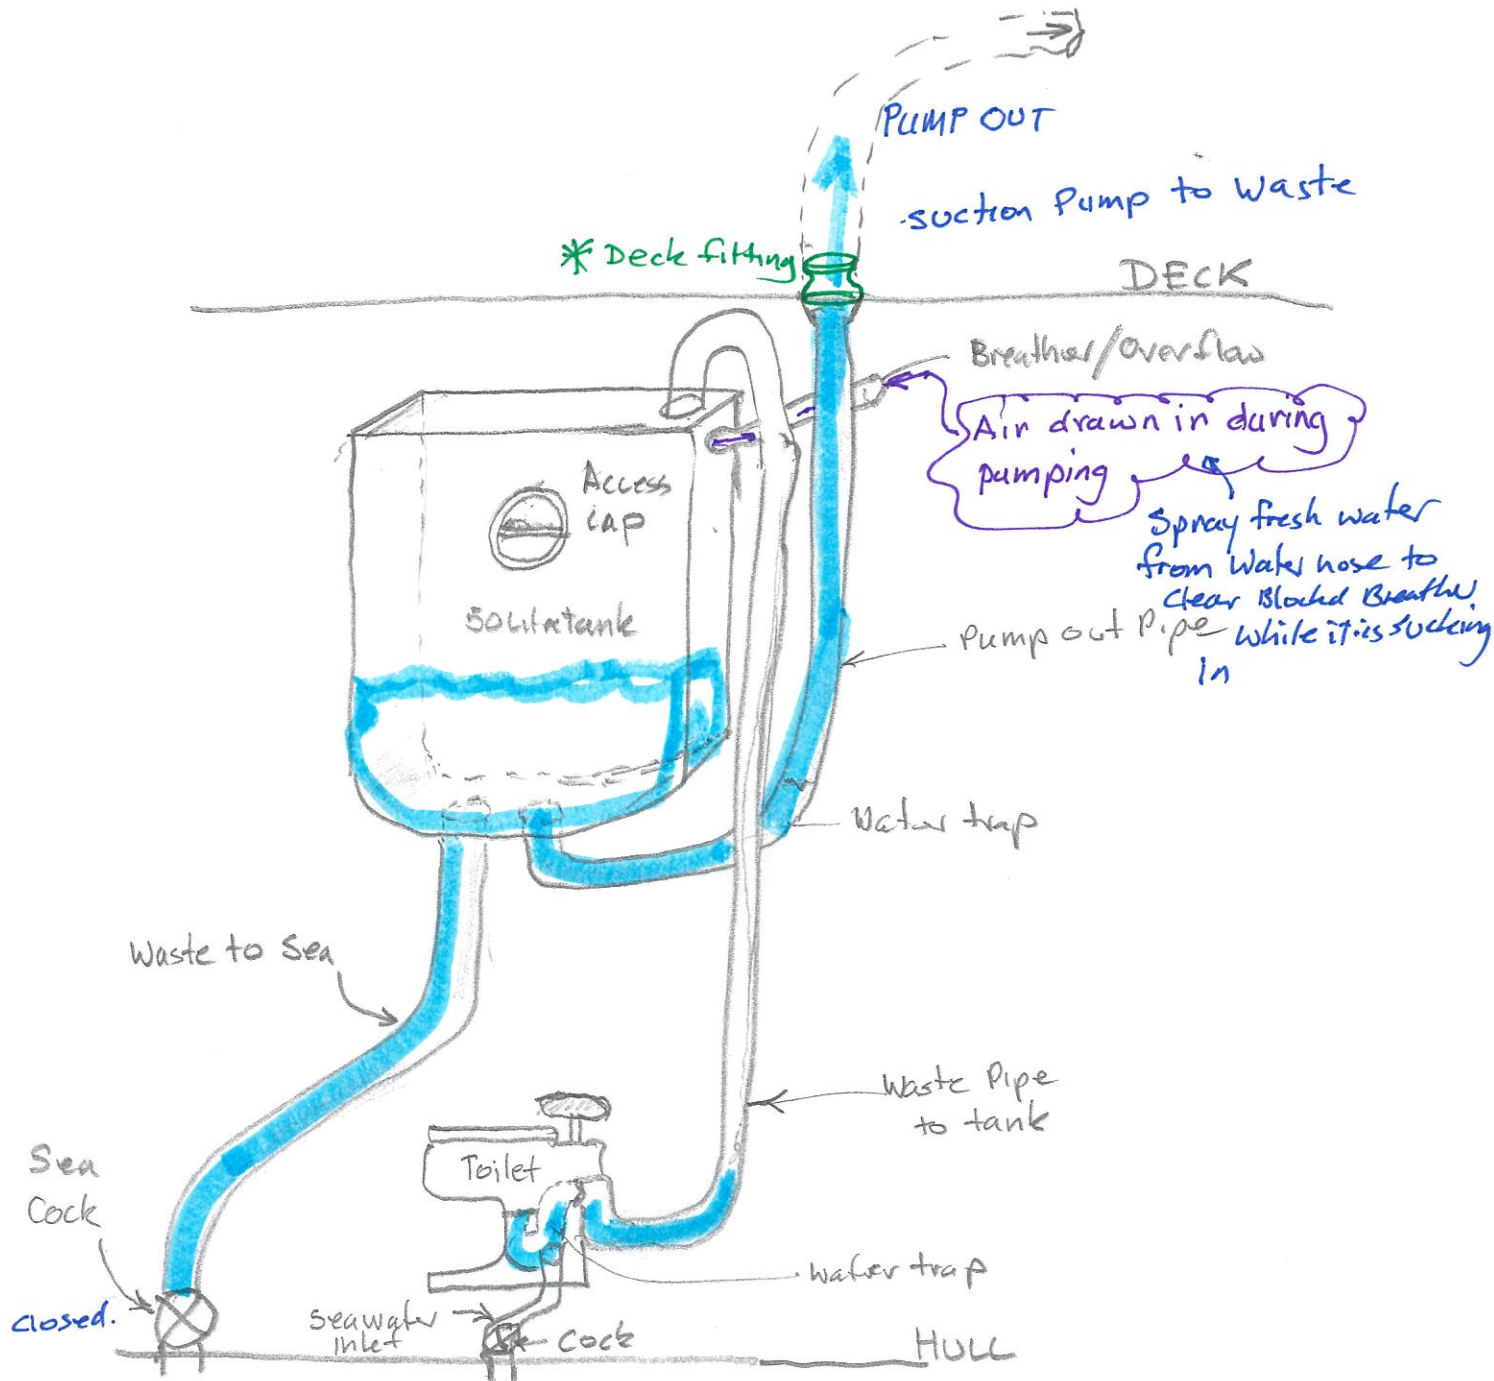


* Deck Fitting screwed to deck outlet to couple/connect pump out fitting stowed under End Head Handbasin.


RETAINED BLACK WATER WHEN DRAINED

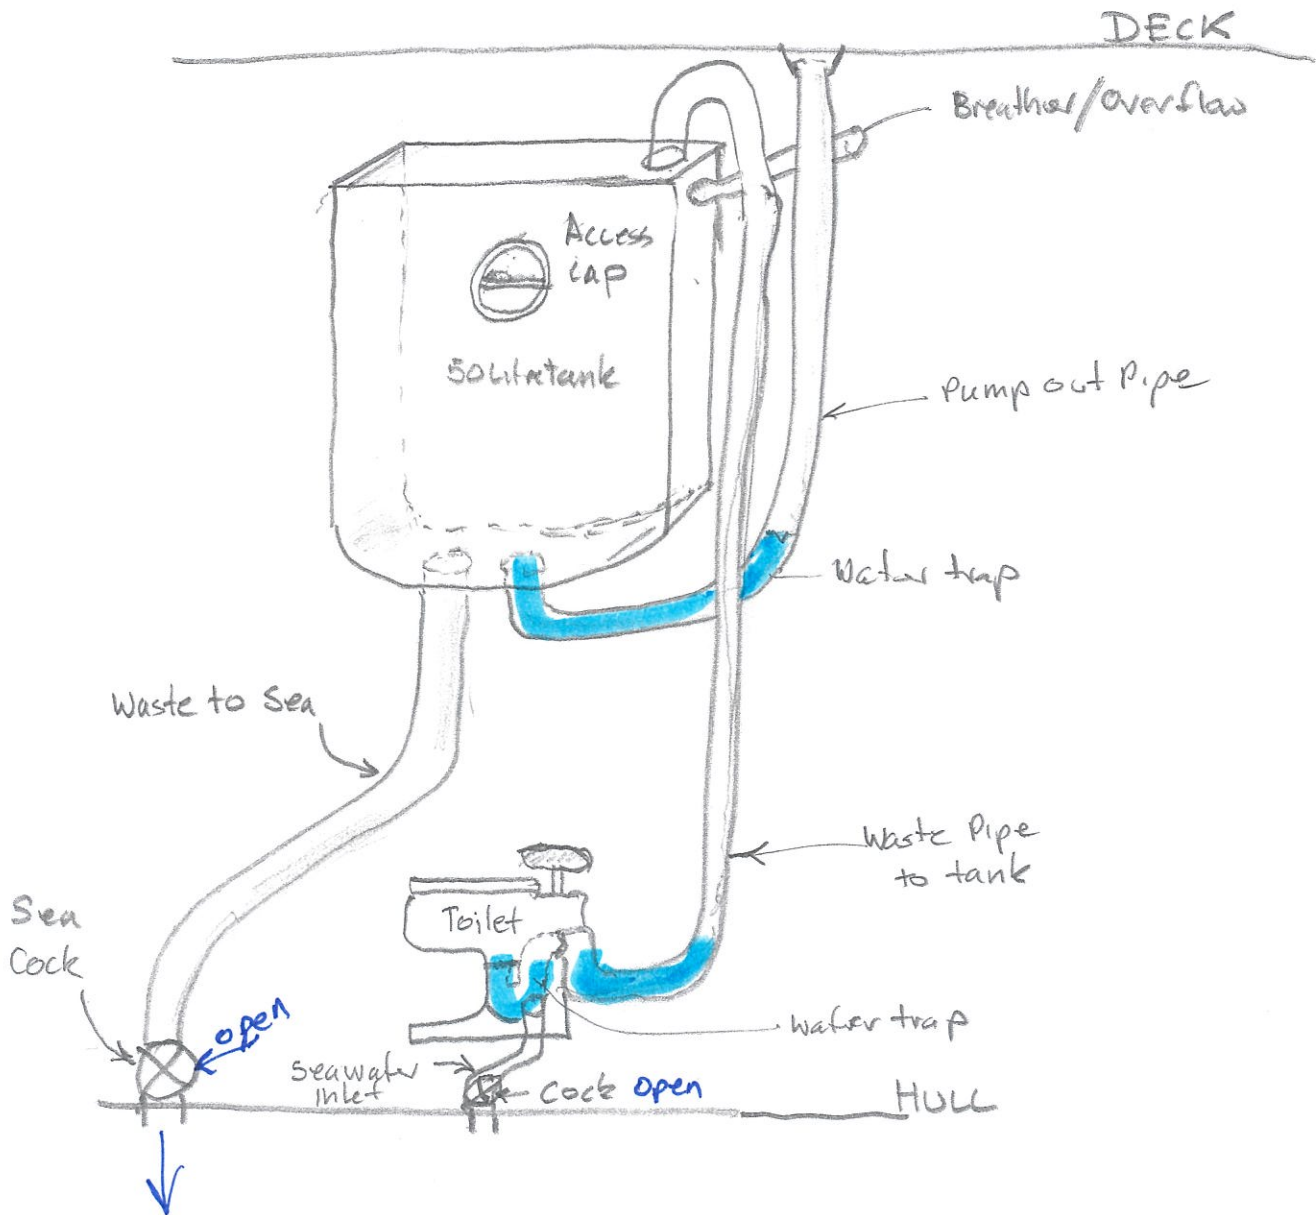

Full Blockage

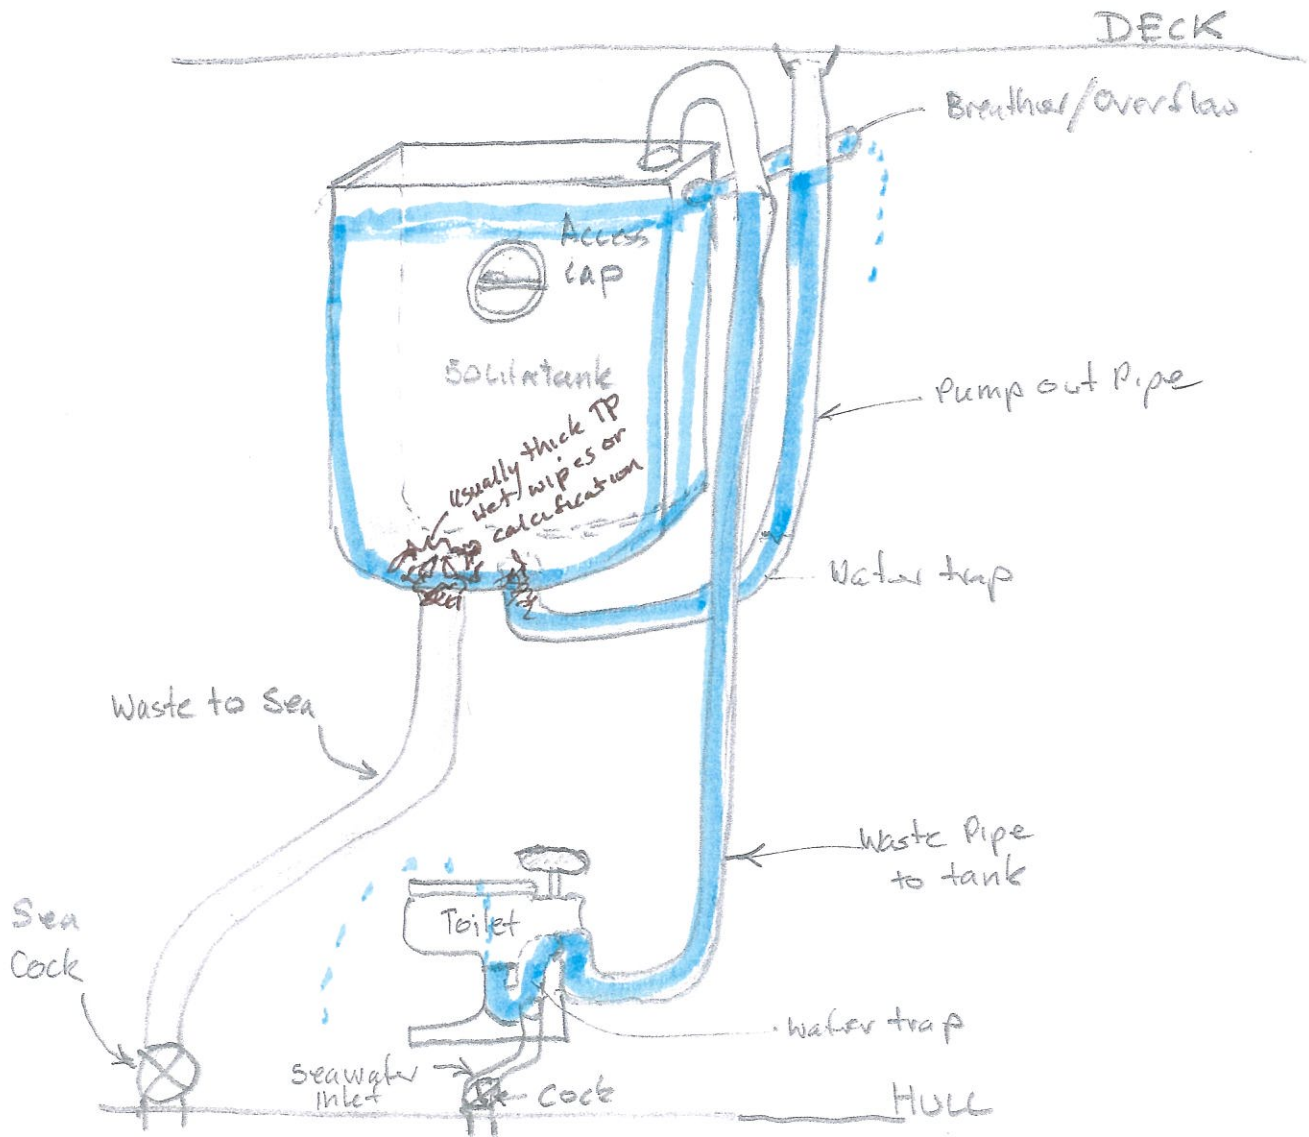

6

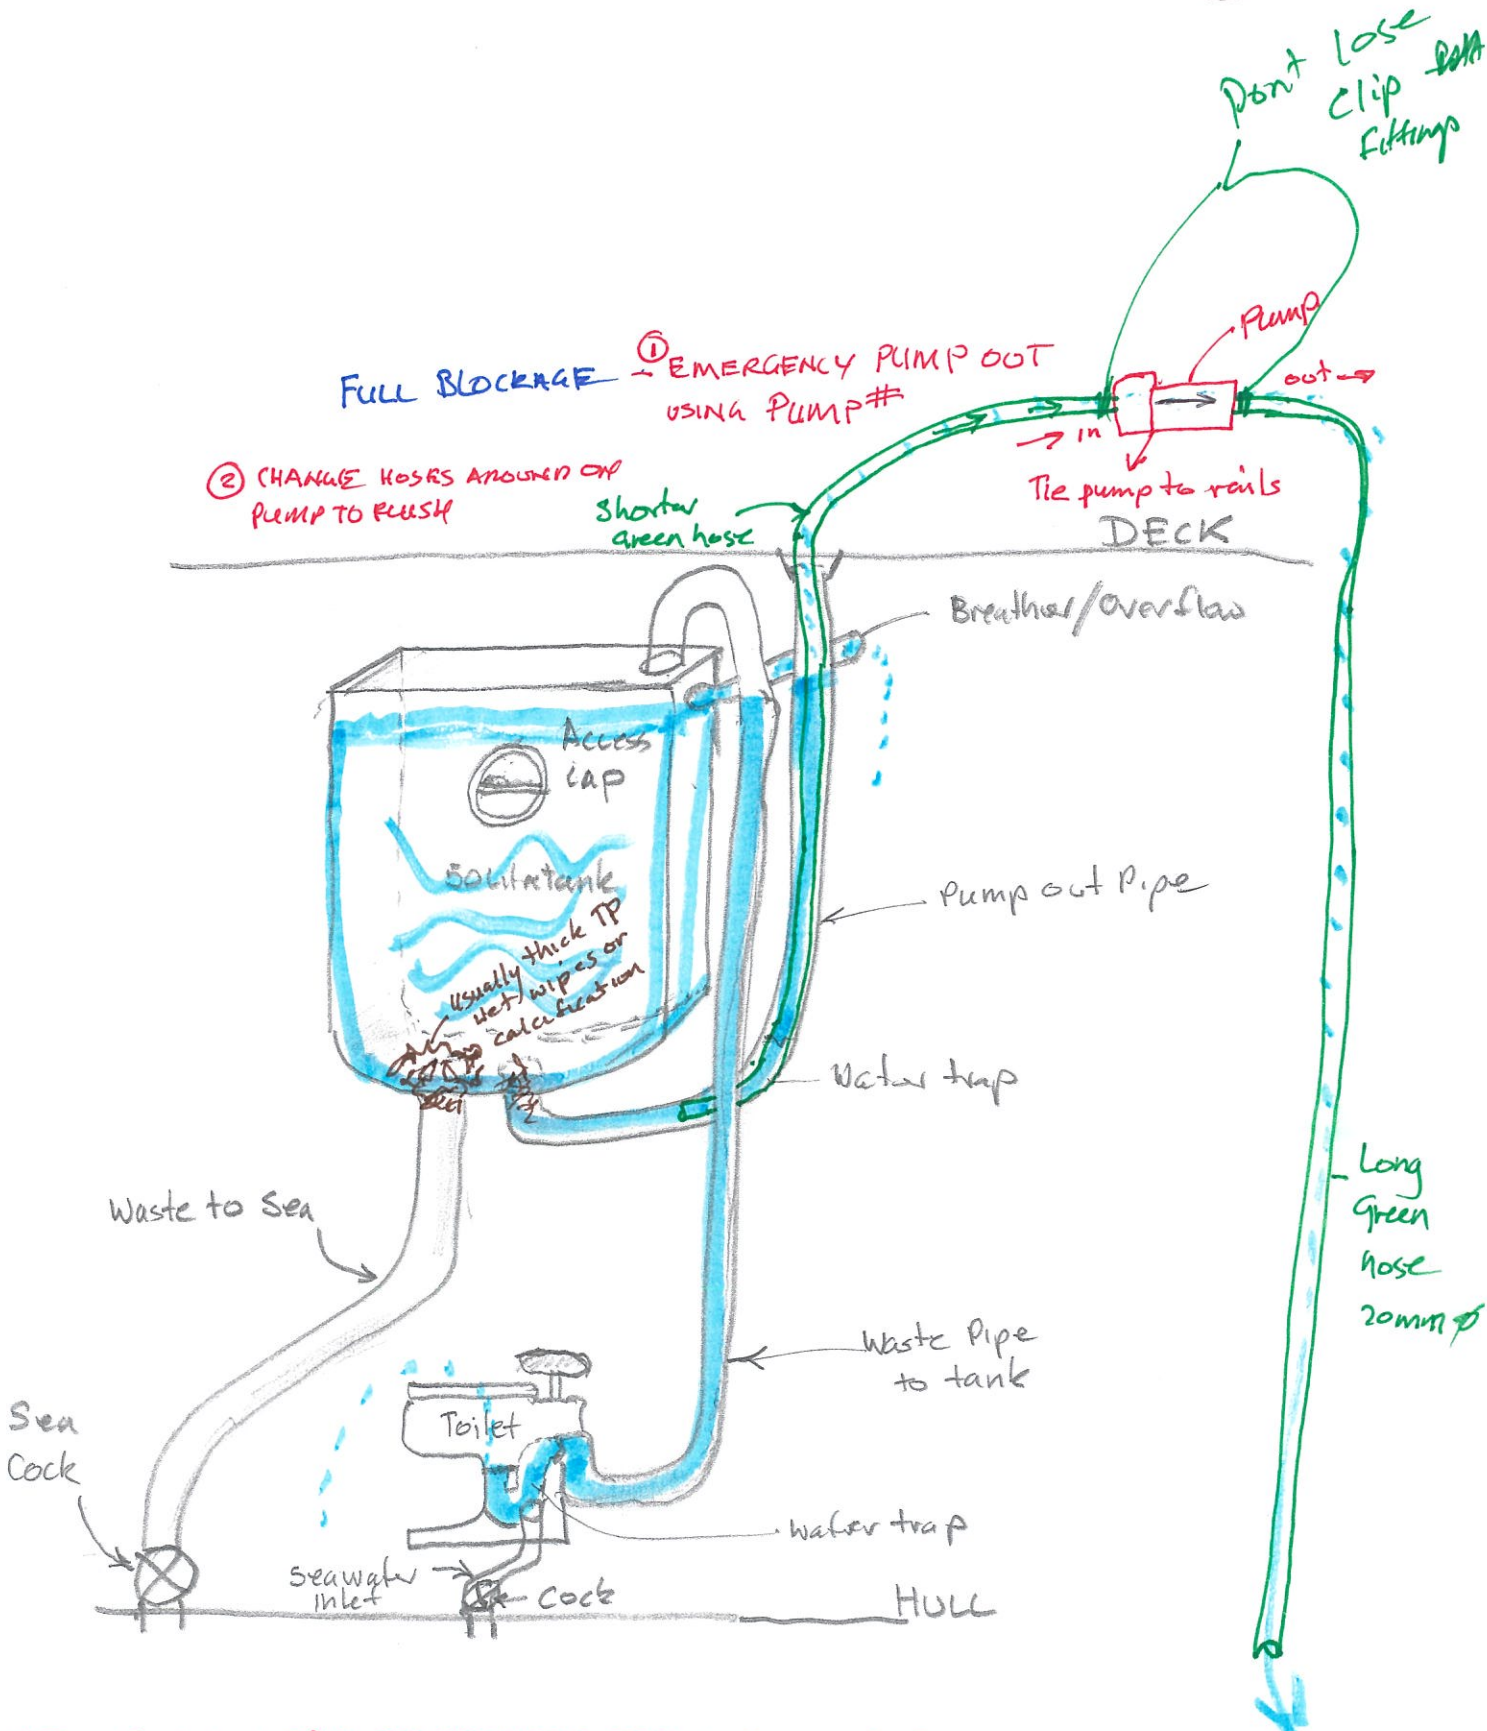

PUMP (MILWAUKEE) IS STOWED UNDER SEAT IN FWD STBD BUNK ROOM
 PUMP MUST BE RINSED FOR 30 SECONDS+ WITH FRESH WATER (INCLUDING HOSES)
 LEAVE IT AS YOU FOUND IT. (BATTERY CHARGED)

TO BACKWASH USING PUMP OUT

- ① Turn pump out on
- ② Open sea outlet cock.
- ③ Using fingers block Breather outlet
- ④ Sea water will be drawn in to flush outlet pipes and tank

- ⑤ Put fresh water into Deck outlet to flush

⑤A

- ⑤B Pour fresh water into Toilet with closed * Sea inlet ** outlet left open Waste to Sea

- ⑤C Pump fresh water to tank

