

**GP2040-CE**



**GP2040-CE.INFO**

## **SHORTCUTS**

Web-config:

Hold **[S2]** while plugging in the controller and then go to **192.168.7.1** on your computer browser.

Input Modes:

Hold **[P1]** while plugging in for PS3/DINPUT

Hold **[P2]** while plugging in for PS4/5

Hold **[K1]** while plugging in for Nintendo Switch

Hold **[K2]** while plugging in for XINPUT

Hold **[K3]** while plugging in for HID-Keyboard

D-Pad Modes via Slider:

**LEFT** = Emulate left analog stick

**MIDDLE** = D-Pad

**RIGHT** = Emulate right analog stick

SOCD Modes via Slider:

**LEFT** = Up Priority mode

 
**MIDDLE** = Neutral mode

**RIGHT** = Last Input Priority (Last Win)


Find more at **[gp2040-ce.info/#/gp2040-shortcuts](https://gp2040-ce.info/#/gp2040-shortcuts)**

## Main Button Inputs

GP2040	XInput	Switch	PS3/4/5	DInput	Arcade	Keyboard
B1	A	B	Cross	2	K1	Left Shift
B2	B	A	Circle	3	K2	Z
B3	X	Y	Square	1	P1	Left Control
B4	Y	X	Triangle	4	P2	Left Alt
L1	LB	L	L1	5	P4	C
R1	RB	R	R1	6	P3	Spacebar
L2	LT	ZL	L2	7	K4	V
R2	RT	ZR	R2	8	K3	X
S1	Back	Minus	Select	9	Coin	5
S2	Start	Plus	Start	10	Start	1
L3	LS	LS	L3	11	LS	Equal
R3	RS	RS	R3	12	RS	Minus
A1	Guide	Home	-	13	-	9
A2	-	Capture	-	14	-	F2



///Open\_Core0 WASD v2.0E-P1  
Designed by: TheTrain

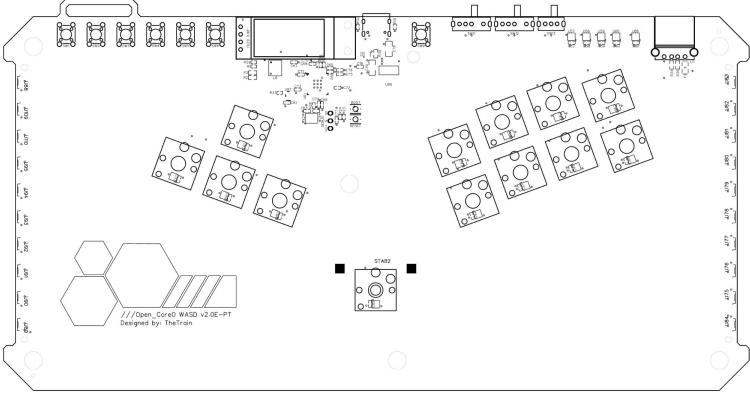

**TURBO**