

GP2040-CE



GP2040-CE.INFO

SHORTCUTS

Web-config:

Hold **[S2]** while plugging in the controller and then go to **192.168.7.1** on your computer browser.

Input Modes:

Hold **[P1]** while plugging in for PS3/DINPUT

Hold **[P2]** while plugging in for PS4/5

Hold **[K1]** while plugging in for Nintendo Switch

Hold **[K2]** while plugging in for XINPUT

Hold **[K3]** while plugging in for HID-Keyboard

D-Pad Modes via Slider:

LEFT = Emulate left analog stick

MIDDLE = D-Pad

RIGHT = Emulate right analog stick

SOCD Modes via Slider:

LEFT = Up Priority mode

 
MIDDLE = Neutral mode

RIGHT = Last Input Priority (Last Win)

Find more at **gp2040-ce.info/#/gp2040-shortcuts**

Main Button Inputs

GP2040	XInput	Switch	PS3/4/5	DInput	Arcade	Keyboard
B1	A	B	Cross	2	K1	Left Shift
B2	B	A	Circle	3	K2	Z
B3	X	Y	Square	1	P1	Left Control
B4	Y	X	Triangle	4	P2	Left Alt
L1	LB	L	L1	5	P4	C
R1	RB	R	R1	6	P3	Spacebar
L2	LT	ZL	L2	7	K4	V
R2	RT	ZR	R2	8	K3	X
S1	Back	Minus	Select	9	Coin	5
S2	Start	Plus	Start	10	Start	1
L3	LS	LS	L3	11	LS	Equal
R3	RS	RS	R3	12	RS	Minus
A1	Guide	Home	-	13	-	9
A2	-	Capture	-	14	-	F2



///Open_Core v2.0E-PT
Designed by: TheTrin

