



GP2040-CE

Quick Reference Card

See
other
side!



Shortcuts

Change input mode:

Hold one of the following while plugging in the controller:

- '**B1**' for Nintendo Switch
- '**B2**' for XInput
- '**B3**' for DirectInput/PS3
- '**B4**' for PS4
- '**L2**' for Keyboard

If required, the home button shortcut is
'**S1**'+'**S2**'+'**UP**'

Change D-Pad mode:

Press one of the following button combinations while controller is in use:

- '**S1**'+'**S2**'+'**DOWN**' for D-Pad
- '**S1**'+'**S2**'+'**LEFT**' to emulate left analog stick
- '**S1**'+'**S2**'+'**RIGHT**' to emulate right analog stick

Change SOCD mode:

Press one of the following button combinations while controller is in use:

- '**S2**'+'**A1**'+'**UP**' for Up priority mode
- '**S2**'+'**A1**'+'**DOWN**' for neutral mode
- '**S2**'+'**A1**'+'**LEFT**' for last input priority mode

Access Webconfig Mode:

1. Hold '**S2**' while plugging in the controller to a PC
2. Navigate to **<http://192.168.7.1>** via your favourite browser to access the built-in web configuration

Additional information available
at **<http://gp2040-ce.info/>**



Button Input Mappings

GP2040-CE	XInput	Switch	PS4	PS3	DirectInput	Arcade
B1	A	B	Cross	Cross	2	K1
B2	B	A	Circle	Circle	3	K2
B3	X	Y	Square	Square	1	P1
B4	Y	X	Triangle	Triangle	4	P2
L1	LB	L	L1	L1	5	P4
R1	RB	R	R1	R1	6	P3
L2	LT	ZL	L2	L2	7	K4
R2	RT	ZR	R2	R2	8	K3
S1	Back	Minus	Share	Select	9	Coin
S2	Start	Plus	Options	Start	10	Start
L3	LS	LS	L3	L3	11	LS
R3	RS	RS	R3	R3	12	RS
A1	Guide	Home	PS	PS	13	Home
A2	-	Capture	Touchpad	-	14	-

LED Hotkeys

'S1'+S2'+B3' for Next Animation

'S1'+S2'+B1' for Previous Animation

'S1'+S2'+B4' for Brightness Up

'S1'+S2'+B2' for Brightness Down

'S1'+S2'+R1' for LED Parameter Up

'S1'+S2'+R2' for LED Parameter Down

'S1'+S2'+L1' for Pressed Parameter Up

'S1'+S2'+L2' for Pressed Parameter Down