



MCCI Corporation
3520 Krums Corners Road
Ithaca, New York 14850 USA
Phone +1-607-277-1029
Fax +1-607-277-6844
www.mcci.com

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297
Rev. A
Date: 2013/05/23

Copyright © 2013
All rights reserved

PROPRIETARY NOTICE AND DISCLAIMER

Unless noted otherwise, this document and the information herein disclosed are proprietary to MCCI Corporation, 3520 Krums Corners Road, Ithaca, New York 14850 ("MCCI"). Any person or entity to whom this document is furnished or having possession thereof, by acceptance, assumes custody thereof and agrees that the document is given in confidence and will not be copied or reproduced in whole or in part, nor used or revealed to any person in any manner except to meet the purposes for which it was delivered. Additional rights and obligations regarding this document and its contents may be defined by a separate written agreement with MCCI, and if so, such separate written agreement shall be controlling.

The information in this document is subject to change without notice, and should not be construed as a commitment by MCCI. Although MCCI will make every effort to inform users of substantive errors, MCCI disclaims all liability for any loss or damage resulting from the use of this manual or any software described herein, including without limitation contingent, special, or incidental liability.

MCCI, TrueCard, TrueTask, MCCI Catena, and MCCI USB DataPump are registered trademarks of MCCI Corporation.

MCCI Instant RS-232, MCCI Wombat and InstallRight Pro are trademarks of MCCI Corporation.

All other trademarks and registered trademarks are owned by the respective holders of the trademarks or registered trademarks.

Copyright © 2013 by MCCI Corporation

Document Release History

Rev. A

2013/05/23

Initial Publication

TABLE OF CONTENTS

1	Introduction.....	1
1.1	References.....	1
1.2	Goals.....	1
2	Overall Architecture	1
3	Initialization.....	3
3.1	Start-Up (Configuring the DataPump to provide the VSC protocol V2).....	3
3.2	Using the Vendor Specific Class Protocol API.....	4
4	Error Codes	7
5	InCall APIs	8
5.1	USBPUMP_PROTO_VSC2_OPEN_STREAM_FN.....	8
5.2	USBPUMP_PROTO_VSC2_CLOSE_STREAM_FN.....	9
5.3	USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN	10
	USBPUMP_PROTO_VSC2_SUBMIT_REQUEST_FN.....	10
6	OutCall APIs	11
6.1	USBPUMP_PROTO_VSC2_EVENT_FN	12
6.2	USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN	13
6.3	USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN	14
7	Sequence Diagrams	14

LIST OF TABLES

Table 1.	Error codes returned by VSC protocol V2	7
----------	---	---

LIST OF FIGURES

Figure 1.	Objects and APIs.....	2
Figure 2.	Sequence Diagram for open VSC protocol instance	15

MCCI USB DataPump VSC V2 Protocol User's Guide
Engineering Report 950001297 Rev. A

Figure 3. Sequence Diagram for VSC control request.....	16
Figure 4. Sequence Diagram for VSC event notification	17
Figure 5. Sequence Diagram for VSC data transfer.....	18

1 Introduction

This document describes architecture of the MCCI VSC (Vendor Specific Class) V2 Protocol for the MCCI USB DataPump® and specifies APIs to access it.

1.1 References

[DPREF]	<i>MCCI USB DataPump User's Guide</i> , MCCI Engineering Report 950000066
[USBCORE]	<i>Universal Serial Bus Specification</i> , version 2.0/3.0 (also referred to as the <i>USB Specification</i>). This specification is available on the World Wide Web site http://www.usb.org .
[USBRC]	<i>USBRC User's Guide</i> , MCCI Engineering Report 950000061

1.2 Goals

This design has the following goals:

1. Must be simple, easy-to-understand and suitable for use by MCCI-supplied clients, by platform-supplied clients, or by OEM-supplied clients.
2. The Vendor Specific Class API is structured as a pure service, and must be defined in terms of a functional interface, as opposed to explicit messages.
3. The API must support zero-copy transfers (at least for the isoch data transfer paths). Command and response will be zero copy to the maximum extent convenient (without overly complicating the code)
4. As is normal, outward calls from the service to a client (in this case, from Vendor Specific Class Protocol to the clients using it) must be done as outcalls using function pointers.
5. Must support high-speed and super-speed operation, according to the conventions of the high-speed and super-speed DataPump.


2 Overall Architecture

The Vendor Specific Class Protocol V2 is a general-purpose easy-to-use design suitable for high-speed and super-speed operation. The configuration and functionality that a support USB vendor specific interface can have are different from device to device, and variations are

supported here. The MCCI Vendor Specific Class Protocol V2 is able to support all kinds of USB devices.

Each instance of Vendor Specific Class Protocol V2 API needs to have a certain amount of memory for tracking requests, delivering callbacks, etc. Therefore, we have a DataPump object that represents the API to the Vendor Specific Class Protocol V2 implementation and to clients. For the purposes of discussion, we call this object `USBPUMP_PROTO_VSC2`, and we use `pProtoVsc` as a generic pointer of this type.

Figure 1. Objects and APIs

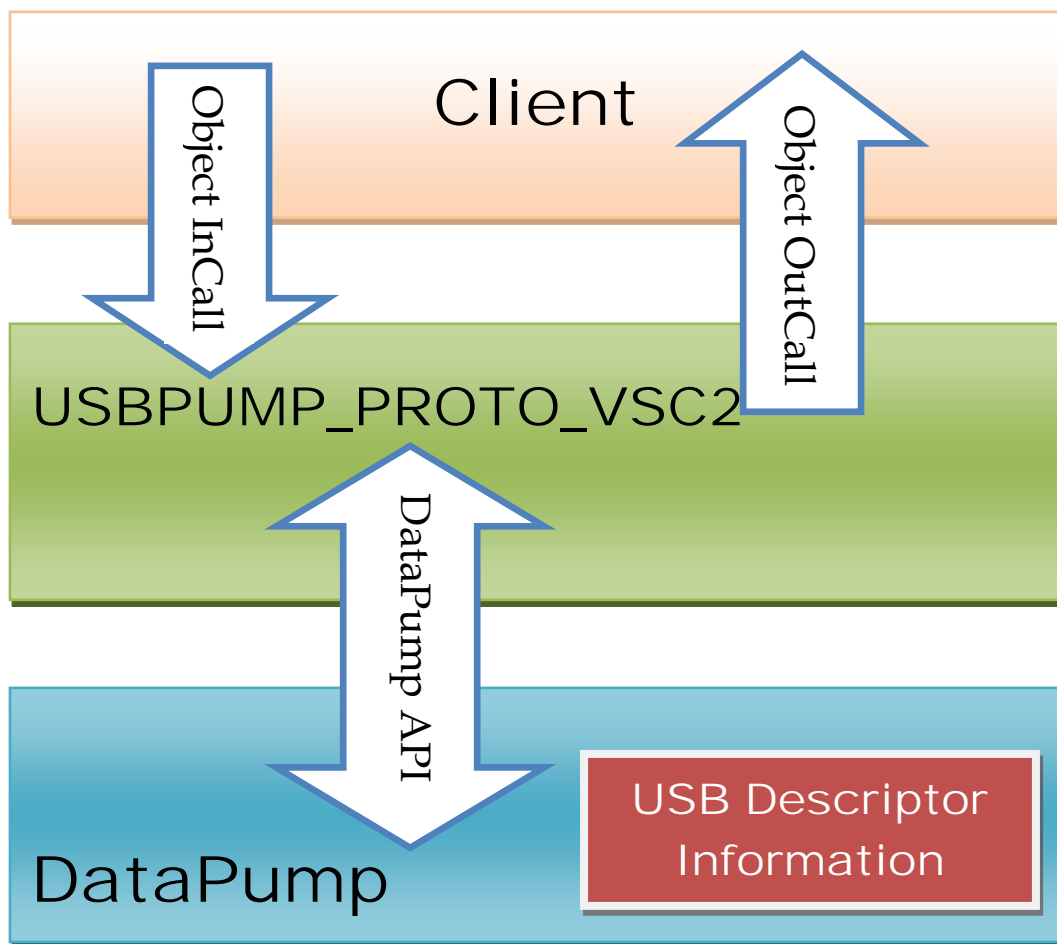

3 Initialization

3.1 Start-Up (Configuring the DataPump to provide the VSC protocol V2)

The DataPump binds protocols to USB interfaces at startup using the “application initialization vector”. This vector specifies interface class, subclass and protocol, and gives a pointer to the entry point that will create a protocol instance. The DataPump startup code looks at the descriptors and creates instances based on matches. Generally speaking, a USBPUMP_PROTO_VSC2 instance is provisioned by placing the appropriate entry in the application initialization vector. The code snippet below is part of the initialization vector for the MCCI VSC test application. It creates USBPUMP_PROTO_VSC2 instance if it finds the matched USB interface descriptor (vendor specific code 0xFF) from the USB configuration descriptors exported by the device.

```
/*
|| This table provides the initialization information for the protocols
|| that we might load for this device.
*/
static CONST USBPUMP_PROTOCOL_INIT_NODE sk_InitNodes[] =
{
    USBPUMP_PROTOCOL_INIT_NODE_INIT_V2(
        /* dev class, subclass, proto */ -1, -1, -1,
        /* ifc class */ 0xFF,
        /* subclass */ 0,
        /* proto */ 0,
        /* cfg, ifc, altset */ -1, -1, -1,
        /* speed */ -1,
        /* uProbeFlags */ 0,
        /* probe */ UsbPumpProtoVsc2_Probe,
        /* create */ UsbPumpProtoVsc2_Create,
        /* pQualifyAddInterface */ NULL,
        /* pAddInterface */ NULL,
        /* optional info */ &sk_ProtoVsc_Config
    );
};
```

UsbPumpProtoVsc2_Probe is a probe function which checks if the matched USB interface is applicable to USBPUMP_PROTO_VSC2 implementation. If the probe fails, the DataPump will not call UsbPumpProtoVsc2_Create to create a USBPUMP_PROTO_VSC2 instance.

sk_ProtoVsc_Config in the above code snippet is a VSC protocol V2 configuration structure which is used while initializing USBPUMP_PROTO_VSC2 instance. Below is the sample configuration for VSC test application.

```
/* Object name for USBPUMP_PROTO_VSC2 */
CONST TEXT gk_ProtoVsc_ObjectName[] = USBPUMP_PROTO_VSC2_NAME("myObject");

/* Configuration of USBPUMP_PROTO_VSC2 */
static CONST USBPUMP_PROTO_VSC2_CONFIG sk_ProtoVsc_Config =
    USBPUMP_PROTO_VSC2_CONFIG_INIT_V1(
        /* SizeControlBuffer */ 512,
        /* pObjName */ gk_ProtoVsc_ObjectName,
        /* DebugFlags */ 0
    );
```

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

`SizeControlBuffer` specifies the buffer size that will be allocated by the VSC protocol V2. This buffer will be used to send / receive control transfer data.

`pObjectName` specifies name of the VSC protocol V2 instance object. It should not be NULL. Client can use `USBPUMP_PROTO_VSC2_NAME` macro to generate object name.

`DebugFlags` specifies the VSC protocol V2 object debug flags. If `DebugFlags` is zero, it will inherit debug flag of parent object which is UDEVICE object.

3.2 Using the Vendor Specific Class Protocol API

The platform specific API will be needed to find the Vendor Specific Protocol instance object. It can be done using the standard DataPump object APIs. It will look for objects named `USBPUMP_PROTO_VSC2_NAME("myObject")` (or you can use `gk_ProtoVsc_ObjectName`).

```
MY_VSC_CONTEXT *
VscDemo_Create(
    UPLATFORM *      pPlatform
)
{
    USBPUMP_OBJECT_ROOT * CONST pRootObject =
        UsbPumpObject_GetRoot(&pPlatform->upf_Header);
    USBPUMP_OBJECT_HEADER *      pObjectHeader;
    MY_VSC_CONTEXT *              pSelf;
    RECSIZE                       SizeOpenMemory;
    VOID *                        pOpenMemory;

    /*
    || Find VSC protocol V2 instance object.
    */
    pObjectHeader = UsbPumpObject_EnumerateMatchingNames(
        &pRootObject->Header,
        NULL,
        gk_ProtoVsc_ObjectName
    );

    If (pObjectHeader == NULL)
    {
        /* No VSC protocol instance found. Nothing to do. */
        TTUSB_OBJPRINTF((
            &pPlatform->upf_Header,
            UDMASK_ERRORS,
            "? VscDemo_Create:"
            " can't find VSC protocol instance!\n"
        ));
        return NULL;
    }

    /*
    || Allocate my VSC context
    */
}
```


MCCI USB DataPump VSC V2 Protocol User's Guide
Engineering Report 950001297 Rev. A

```
*/
pSelf = UsbPumpPlatform_MallocZero(pPlatform, sizeof(*pSelf));
if (pSelf == NULL)
{
    TTUSB_OBJPRINTF((
        pObjectHeader,
        UDMASK_ERRORS,
        "?VscDemo_Create:"
        " pSelf allocation fail\n"
    ));
    return NULL;
}

SizeOpenMemory = UsbPumpObject_SizeOpenSessionRequestMemory(
    pObjectHeader
);
pOpenMemory = UsbPumpPlatform_Malloc(pPlatform, SizeOpenMemory);
if (pOpenMemory == NULL)
{
    TTUSB_OBJPRINTF((
        pObjectHeader,
        UDMASK_ERRORS,
        "?VscDemo_Create:"
        " pOpenMemory allocation fail\n"
    ));

    UsbPumpPlatform_Free(
        pPlatform,
        pSelf,
        sizeof(*pSelf)
    );
    return NULL;
}

pSelf->pVscObject = pObjectHeader;
pSelf->pPlatform = pPlatform;

TTUSB_OBJPRINTF((
    pObjectHeader,
    UDMASK_FLOW,
    " VscDemo_Create:"
    " pSelf(%p) binding with pObjectHeader(%p)\n",
    pSelf,
    pObjectHeader
));

UsbPumpObject_OpenSession(
    pObjectHeader,
    pOpenMemory,
    SizeOpenMemory,
    VscDemoI_OpenSession_Callback,
    pSelf, /* pCallBackContext */
    &gk_UsbPumpProtoVsc2_Guid,
    NULL, /* pClientObject -- OPTIONAL */

```

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

```
        &pSelf->VscInCall.GenericCast,
        sizeof(pSelf->VscInCall),
        pSelf, /* pClientHandle */
        &sk_VscDemo_OutCall.GenericCast,
        sizeof(sk_VscDemo_OutCall)
    );

    return pSelf;
}

VOID
VscDemoI_OpenSession_Callback(
    VOID *          pClientContext,
    USBPUMP_SESSION_HANDLE SessionHandle,
    UINT32          Status,
    VOID *          pOpenRequestMemory,
    RECSIZE         sizeOpenRequestMemory
)
{
    MY_VSC_CONTEXT * CONST pSelf = pClientContext;

    TTUSB_OBJPRINTF((
        pSelf->pVscObject,
        UDMASK_ENTRY,
        "+VscDemoI_OpenSession_Callback: Status=%d\n",
        Status
    ));

    if (pOpenRequestMemory)
    {
        UsbPumpPlatform_Free(
            pSelf->pPlatform,
            pOpenRequestMemory,
            sizeOpenRequestMemory
        );
    }

    if (USBPUMP_PROTO_AUDIO_STATUS_FAILED(Status))
    {
        TTUSB_OBJPRINTF((
            pSelf->pVscObject,
            UDMASK_ERRORS,
            "?VscDemoI_OpenSession_Callback:"
            " failed to open a VSC session (%d)\n",
            Status
        ));
        return;
    }

    /* Save SessionHandle */
    pSelf->SessionHandle = SessionHandle;

    /* Do more work here... For example, Open Streams */
}
```

The client finds Vendor Specific Class protocol V2 instance objects using the DataPump object API `UsbPumpObject_EnumerateMatchingNames()`. If it finds a VSC protocol V2 instance object, the client should call `UsbPumpObject_OpenSession()` API to open a session of the `USBPUMP_PROTO_VSC2` instance. With the open, the client receives VSC InCall functions and sets OutCall functions to be used for processing asynchronous host operations. The data pointer `pSelf` is used for the context of each of the OutCall functions.

The client needs to save the returned `SessionHandle` in the `VscDemoI_OpenSession_Callback`. This `SessionHandle` will be used when calling InCall functions.

4 Error Codes

The Vendor Specific Class protocol V2 defines the following error codes.

Table 1. Error codes returned by VSC protocol V2

Name	Code	Meaning
<code>USBPUMP_PROTO_VSC2_STATUS_OK</code>	<code>0x0</code>	No error occurred, success
<code>USBPUMP_PROTO_VSC2_STATUS_INVALID_PARAMETER</code>	<code>0x1</code>	If parameter passed is invalid
<code>USBPUMP_PROTO_VSC2_STATUS_BUFFER_TOO_SMALL</code>	<code>0x3</code>	If <code>sizeInCallApiBuffer</code> is too small
<code>USBPUMP_PROTO_VSC2_STATUS_INVALID_SESSION_HANDLE</code>	<code>0x6</code>	If the session handle is invalid
<code>USBPUMP_PROTO_VSC2_STATUS_INVALID_STREAM_HANDLE</code>	<code>0x100</code>	If an invalid stream handle is passed
<code>USBPUMP_PROTO_VSC2_STATUS_ALREADY_OPENED</code>	<code>0x101</code>	If a session is already opened by another client
<code>USBPUMP_PROTO_VSC2_STATUS_NO_STREAM_TO_OPEN</code>	<code>0x102</code>	If there is no stream to open
<code>USBPUMP_PROTO_VSC2_STATUS_INVALID_REQUEST</code>	<code>0x103</code>	If a control reply request is invalid
<code>USBPUMP_PROTO_VSC2_STATUS_NOT_CONFIGURED</code>	<code>0x104</code>	If an I/O request failed because interface is not configured state

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

5 InCall APIs

This section describes the Vendor Specific Class protocol InCall APIs. The client should get InCall functions using `UsbPumpObject_OpenSession()` API. Below is the VSC protocol InCall structure definition.

```
typedef struct __TMS_USBPUMP_PROTO_VSC2_INCALL_CONTENTS
{
    USBPUMP_API_INCALL_HEADER;

    /* VSC protocol in-calls */
    USBPUMP_PROTO_VSC2_OPEN_STREAM_FN *    pOpenStreamFn;
    USBPUMP_PROTO_VSC2_CLOSE_STREAM_FN *    pCloseStreamFn;
    USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN *    pControlReplyFn;
    USBPUMP_PROTO_VSC2_SUBMIT_REQUEST_FN *    pSubmitRequestFn;

    USBPUMP_API_INCALL_TRAILER;
} USBPUMP_PROTO_VSC2_INCALL_CONTENTS;

typedef union __TMS_USBPUMP_PROTO_VSC2_INCALL
{
    USBPUMP_PROTO_VSC2_INCALL_CONTENTS      Vsc;
    USBPUMP_API_INCALL_CONTENTS__UNION;
} USBPUMP_PROTO_VSC2_INCALL;
```

5.1 USBPUMP_PROTO_VSC2_OPEN_STREAM_FN

This API opens data stream associated with a single pipe. The client should call this API in the DataPump context after open session complete. This API allows callers to discover the pipes that are from a specified UINTERFACE. `BindingFlags`, `EpAddrMask`, and `PipeOrdinal` are used to select a subset of the pipes, based on caller's preferences.

```
typedef USBPUMP_PROTO_VSC2_STATUS
(*USBPUMP_PROTO_VSC2_OPEN_STREAM_FN)(
    USBPUMP_SESSION_HANDLE          SessionHandle,
    UINT                            BindingFlags,      // IN
    UINT                            EpAddrMask,         // IN
    UINT                            PipeOrdinal,        // IN
    USBPUMP_PROTO_VSC2_STREAM_HANDLE * pStreamHandle    // OUT
);
```

`BindingFlags` specifies the type (or types) of pipes that are acceptable. The available types are:

```
UPIPE_SETTING_MASK_ISO_OUT
UPIPE_SETTING_MASK_ISO_IN
UPIPE_SETTING_MASK_BULK_OUT
UPIPE_SETTING_MASK_BULK_IN
UPIPE_SETTING_MASK_INT_OUT
UPIPE_SETTING_MASK_INT_IN
```

specifying the obvious pipe types. These bit values may be OR'ed together. The API also allows:

```
UIPIPE_SETTING_MASK_CONTROL_OUT  
UIPIPE_SETTING_MASK_CONTROL_IN
```

but these are not fully supported because it is default pipe. However, CONTROL_IN means the to-host half of a control endpoint; CONTROL_OUT means the from-host half.

Because flags may be or'ed together, it's possible to accept multiple kinds of pipes with a single binding. The following abbreviations are defined:

```
UIPIPE_SETTING_MASK_ANY      matches any possible pipe.  
UIPIPE_SETTING_MASK_DATA     matches any data pipe (iso, bulk, int) x (in, out)  
UIPIPE_SETTING_MASK_DATA_IN  matches for any IN data pipe (iso, bulk, int) x in  
UIPIPE_SETTING_MASK_DATA_OUT matches any OUT data pipe (iso, bulk, int) x out  
UIPIPE_SETTING_MASK_BULKINT_IN matches any bulk or int IN pipe (bulk, int) x in  
UIPIPE_SETTING_MASK_BULKINT_OUT stand for bulk or int OUT pipe (bulk, int) x out
```

After considering the endpoint binding flags, the endpoint address is checked. If `EpAddrMask` is zero, then any endpoint can match. Otherwise, `EpAddrMask` is a bit mask, where bit[0] corresponds to endpoint address 0, bit[1] corresponds to endpoint address 1, and so forth; endpoints are matched by setting the bit corresponding to the **desired** endpoint(s).

`PipeOrdinal` is used to select sequential matching pipes. This is a zero-based index.

This API returns `USBPUMP_PROTO_VSC2_STATUS_OK` if stream opened successfully. Possible error codes are

- `USBPUMP_PROTO_VSC2_STATUS_INVALID_SESSION_HANDLE`
- `USBPUMP_PROTO_VSC2_STATUS_INVALID_PARAMETER`
- `USBPUMP_PROTO_VSC2_STATUS_NO_STREAM_TO_OPEN`

5.2 USBPUMP_PROTO_VSC2_CLOSE_STREAM_FN

This API closes the opened data stream. The client should call this API in the DataPump context.

```
typedef USBPUMP_PROTO_VSC2_STATUS  
( *USBPUMP_PROTO_VSC2_CLOSE_STREAM_FN )(  
    USBPUMP_SESSION_HANDLE      SessionHandle,  
    USBPUMP_PROTO_VSC2_STREAM_HANDLE StreamHandle  
);
```

This API returns `USBPUMP_PROTO_VSC2_STATUS_OK` if stream closed successfully. Possible error codes are

- `USBPUMP_PROTO_VSC2_STATUS_INVALID_SESSION_HANDLE`
- `USBPUMP_PROTO_VSC2_STATUS_INVALID_STREAM_HANDLE`

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

5.3 USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN

This API handles the reply of a vendor specific class control request to the VSC protocol V2 driver. This API will be used to send control request data or status to the host.

```
typedef USBPUMP_PROTO_VSC2_STATUS
(*USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN)(
    USBPUMP_SESSION_HANDLE    SessionHandle,
    VOID *                    pReplyBuffer,
    UINT16                    nReplyBuffer
);
```

To send control request status OK (or to send a zero length packet / ZLP), the client should set pReplyBuffer to not NULL and set nReplyBuffer to zero. To send STALL, the client should set pReplyBuffer to NULL and nReplyBuffer to zero. The caller should ensure that pReplyBuffer is the same data buffer as the USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN() callback.

This API returns USBPUMP_PROTO_VSC2_STATUS_OK if sent the reply of control request successfully. Possible error codes are

- USBPUMP_PROTO_VSC2_STATUS_INVALID_SESSION_HANDLE
- USBPUMP_PROTO_VSC2_STATUS_INVALID_REQUEST

USBPUMP_PROTO_VSC2_SUBMIT_REQUEST_FN

This API submits data transfer request to the VSC protocol V2 driver. This API may be called from the arbitration context.

The client should provide pRequest->Qe.uqe_donefn. This API always calls pRequest->Qe.uqe_donefn function when either the request complete or an error happens. If this API returns USBPUMP_PROTO_VSC2_STATUS_OK, then the client should wait pRequest->Qe.uqe_donefn to be called. If this API returns not USBPUMP_PROTO_VSC2_STATUS_OK, pRequest->Qe.uqe_donefn will not be called.

In general, if there is no input parameter error, pRequest->Qe.uqe_donefn will be called from the DataPump context.

```
typedef USBPUMP_PROTO_VSC2_STATUS
(*USBPUMP_PROTO_VSC2_SUBMIT_REQUEST_FN)(
    USBPUMP_SESSION_HANDLE    SessionHandle,
    USBPUMP_PROTO_VSC2_REQUEST * pRequest
);
```

This API returns USBPUMP_PROTO_VSC2_STATUS_OK if submitted the I/O request successfully. Possible error codes are

- USBPUMP_PROTO_VSC2_STATUS_INVALID_SESSION_HANDLE
- USBPUMP_PROTO_VSC2_STATUS_INVALID_STREAM_HANDLE

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

- USBPUMP_PROTO_VSC2_STATUS_INVALID_PARAMETER
- USBPUMP_PROTO_VSC2_STATUS_NOT_CONFIGURED

USBPUMP_PROTO_VSC2_REQUEST is a wrapper structre of UBUFQE_GENERIC. The client needs to allocate this request and submit the request to the VSC protocol V2 instance.

```
typedef struct __TMS_USBPUMP_PROTO_VSC2_REQUEST
{
    USBPUMP_PROTO_VSC2_STREAM_HANDLE hStream;
    UBUFQE_GENERIC                    Qe;
    /* VSC protocol uses below variables */
    USBPUMP_PROTO_VSC2 *              pSelf;
    UCALLBACKCOMPLETION               Callback;
} USBPUMP_PROTO_VSC2_REQUEST;
```

The `UsbPumpProtoVscRequest_PrepareLegacy()` macro helps to initialize the legacy mode UBUFQE of the `USBPUMP_PROTO_VSC2_REQUEST` structure.

```
UsbPumpProtoVscRequest_PrepareLegacy(
    pRequest,
    hStream,
    pBuffer,
    hBuffer,
    nBuffer,
    TransferFlags,
    pDoneFn,
    pDoneCtx
);
```

The `UsbPumpProtoVscRequest_PrepareIsochIn/Out()` macros help to initialize the isochronous transfer mode UBUFQE of the `USBPUMP_PROTO_VSC2_REQUEST` structure.

```
UsbPumpProtoVscRequest_PrepareIsochIn(
    pRequest,
    hStream,
    pBuffer,
    hBuffer,
    nBuffer,
    TransferFlags,
    pIsochDescr,
    hIsochDescr,
    nIsochDescr,
    IsochStartFrame,
    pDoneFn,
    pDoneCtx
);
```

6 OutCall APIs

This section describes the Vendor Specific Class protocol V2 OutCall APIs. These OutCall functions should be provided to the `USBPUMP_PROTO_VSC2` instance through the

MCCI USB DataPump VSC V2 Protocol User's Guide

Engineering Report 950001297 Rev. A

UsbPumpObject_OpenSession() API. Below is the VSC protocol V2 OutCall structure definition and initialization macro.

```
typedef struct __TMS_USBPUMP_PROTO_VSC2_OUTCALL_CONTENTS
{
    USBPUMP_API_OUTCALL_HEADER;

    USBPUMP_PROTO_VSC2_EVENT_FN *      pEventFn;
    USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN * pSetupValidateFn;
    USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN * pSetupProcessFn;

    USBPUMP_API_OUTCALL_TRAILER;
} USBPUMP_PROTO_VSC2_OUTCALL_CONTENTS;

typedef union __TMS_USBPUMP_PROTO_VSC2_OUTCALL
{
    __TMS_USBPUMP_PROTO_VSC2_OUTCALL_CONTENTS Vsc;
    __TMS_USBPUMP_API_OUTCALL_CONTENTS__UNION;
} USBPUMP_PROTO_VSC2_OUTCALL;

/* compile-time initializer */
USBPUMP_PROTO_VSC2_OUTCALL_INIT_V1(
    USBPUMP_PROTO_VSC2_EVENT_FN *pEventFn,
    USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN *pSetupValidateFn,
    USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN *pSetupProcessFn
);

/* run-time initializer */
USBPUMP_PROTO_VSC2_OUTCALL_SETUP_V1(
    USBPUMP_PROTO_VSC2_OUTCALL *pOutCall,
    USBPUMP_PROTO_VSC2_EVENT_FN *pEventFn,
    USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN *pSetupValidateFn,
    USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN *pSetupProcessFn
);
```

All these OutCall functions will be called from the DataPump context. The client must post event to the original task if it is required.

6.1 USBPUMP_PROTO_VSC2_EVENT_FN

This API will be called by the VSC protocol V2 driver to deliver a VSC protocol event to the registered client.

```
typedef VOID
(*USBPUMP_PROTO_VSC2_EVENT_FN)(
    VOID *      ClientHandle,
    USBPUMP_PROTO_VSC2_EVENT Event,
    CONST VOID *      pEventInfo
);
```


MCCI USB DataPump VSC V2 Protocol User's Guide Engineering Report 950001297 Rev. A

ClientHandle is the client's context pointer that was provided by the client through the UsbPumpObject_OpenSession() API. The USBPUMP_PROTO_VSC2_EVENT codes are defined as below:

USBPUMP_PROTO_VSC2_EVENT_INTERFACE_UP	VSC interface is configured
USBPUMP_PROTO_VSC2_EVENT_INTERFACE_DOWN	VSC interface is not configured
USBPUMP_PROTO_VSC2_EVENT_SUSPEND	USB bus is suspended
USBPUMP_PROTO_VSC2_EVENT_RESUME	USB bus is resumed
USBPUMP_PROTO_VSC2_EVENT_RESET	USB bus reset
USBPUMP_PROTO_VSC2_EVENT_ATTACH	USB cable attached
USBPUMP_PROTO_VSC2_EVENT_DETACH	USB cable detached

The pEventInfo contains extra event information. If there is no extra event information, the VSC protocol will pass NULL. The following structure are used for extra event information for the specific event.

```
typedef struct __TMS_USBPUMP_PROTO_VSC2_EVENT_INTERFACE_UP_INFO
{
    UINT          CurrentAltSetting;
} USBPUMP_PROTO_VSC2_EVENT_INTERFACE_UP_INFO;
```

```
typedef struct __TMS_USBPUMP_PROTO_VSC2_EVENT_SUSPEND_INFO
{
    BOOL          fRemoteWakeEnabled;
} USBPUMP_PROTO_VSC2_EVENT_SUSPEND_INFO;
```

6.2 USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN

This API validates a Vendor Specific Class control request. It will be called by the VSC protocol V2 driver when it receive vendor specific request from host. The client providing this function should validate the vendor specific control request. If the client can accept this control request, the client should return USBPUMP_PROTO_VSC2_SETUP_STATUS_ACCEPTED. If this control request is unknown (the client can't accept this control request), the client should return USBPUMP_PROTO_VSC2_SETUP_STATUS_NOT_CLAIMED. If the client recognizes this control request but wants to reject this control request for some reason, the client should return USBPUMP_PROTO_VSC2_SETUP_STATUS_REJECTED.

If the client accepts this vendor specific control request, then the client will subsequently receive a USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN() callback to process the accepted control request.

If the client returns USBPUMP_PROTO_VSC2_SETUP_STATUS_REJECTED, the VSC protocol will send STALL.

If the client returns USBPUMP_PROTO_VSC2_SETUP_STATUS_NOT_CLAIMED, the protocol will do nothing for this vendor specific command and DataPump core will handle this command.

```
typedef USBPUMP_PROTO_VSC2_SETUP_STATUS
(*USBPUMP_PROTO_VSC2_SETUP_VALIDATE_FN)(
    VOID *          ClientHandle,
    USETUP *        pSetup
```

```
);
```

Defined USBPUMP_PROTO_VSC2_SETUP_STATUS code are

```
USBPUMP_PROTO_VSC2_SETUP_STATUS_ACCEPTED  
USBPUMP_PROTO_VSC2_SETUP_STATUS_REJECTED  
USBPUMP_PROTO_VSC2_SETUP_STATUS_NOT_CLAIMED
```

6.3 USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN

This API processes Vendor Specific Class control request. It will be called by the VSC protocol V2 driver to let client process vendor specific control request.

If the direction of the vendor request is from host to device, the VSC protocol receives the data from the host, passing the received data in `pBuffer`, with the count of valid data indicated by `nBuffer`. The client should send its reply using `USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN()`.

If the direction of the vendor request is from device to host, the VSC protocol provides a data buffer `pBuffer` of size `nBuffer`. The client processes the control request and copies the resulting data to the `pBuffer`, setting `nBuffer` to the actual count of valid response data bytes. Then the client sends the reply using `USBPUMP_PROTO_VSC2_CONTROL_REPLY_FN()`.

If this process function returns `FALSE`, the VSC protocol driver will send STALL for this setup packet. If it returns `TRUE`, this indicates the client has handled this setup packet.

```
typedef BOOL  
(*USBPUMP_PROTO_VSC2_SETUP_PROCESS_FN)(  
    VOID *          ClientHandle,  
    USETUP *        pSetup,  
    VOID *          pBuffer,  
    UINT16          nBuffer  
);
```

7 Sequence Diagrams

The sequence diagrams depicting the operation of these APIs are shown in Figure 2 through Figure 5. In these diagrams the details of USB bus level have been omitted. Since USB mixes layer 2 & layer 3 at the hardware level, it is difficult to draw the sequence diagrams that are simultaneously comprehensible and fully accurate. However, these diagrams still provide adequate details of the API operations.

The names of the function in the diagram are mere suggestions and are not specified by this document. The client is the agent that issues calls based on activities elsewhere in the system. At client level, the code resides within the DataPump task, but it can still receive messages from anywhere in the system. The message receive mechanisms are not specified in this document and are likely to vary from platform to platform.

Figure 2. Sequence Diagram for open VSC protocol instance

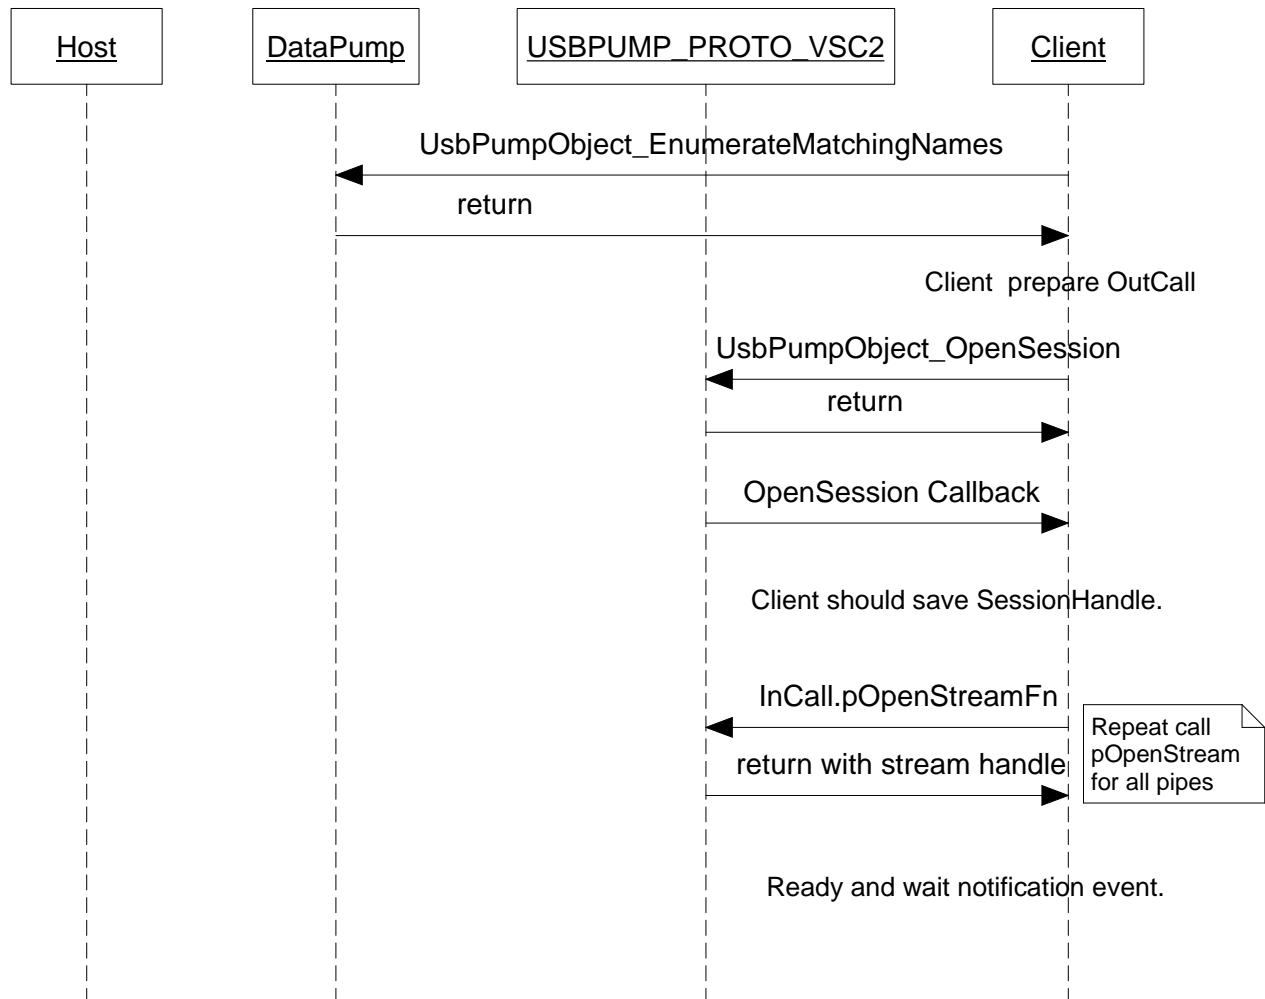


Figure 3. Sequence Diagram for VSC control request

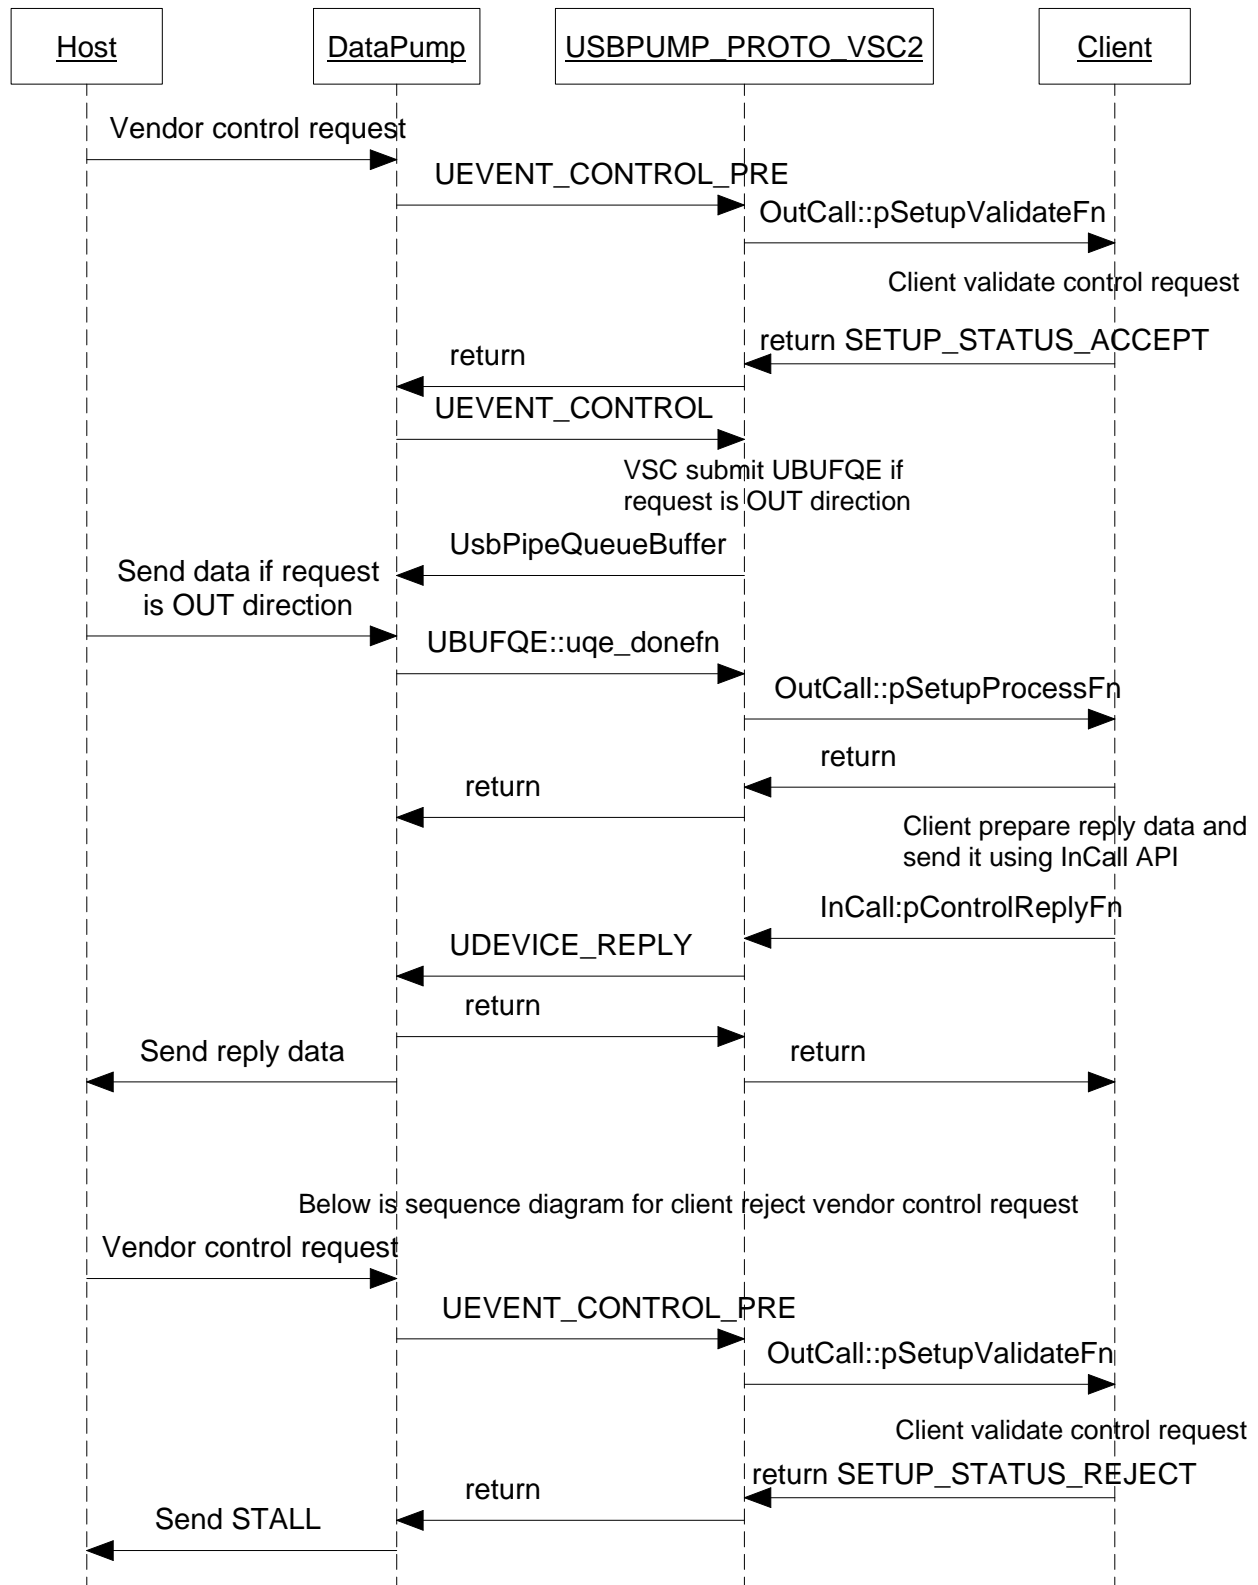


Figure 4. Sequence Diagram for VSC event notification

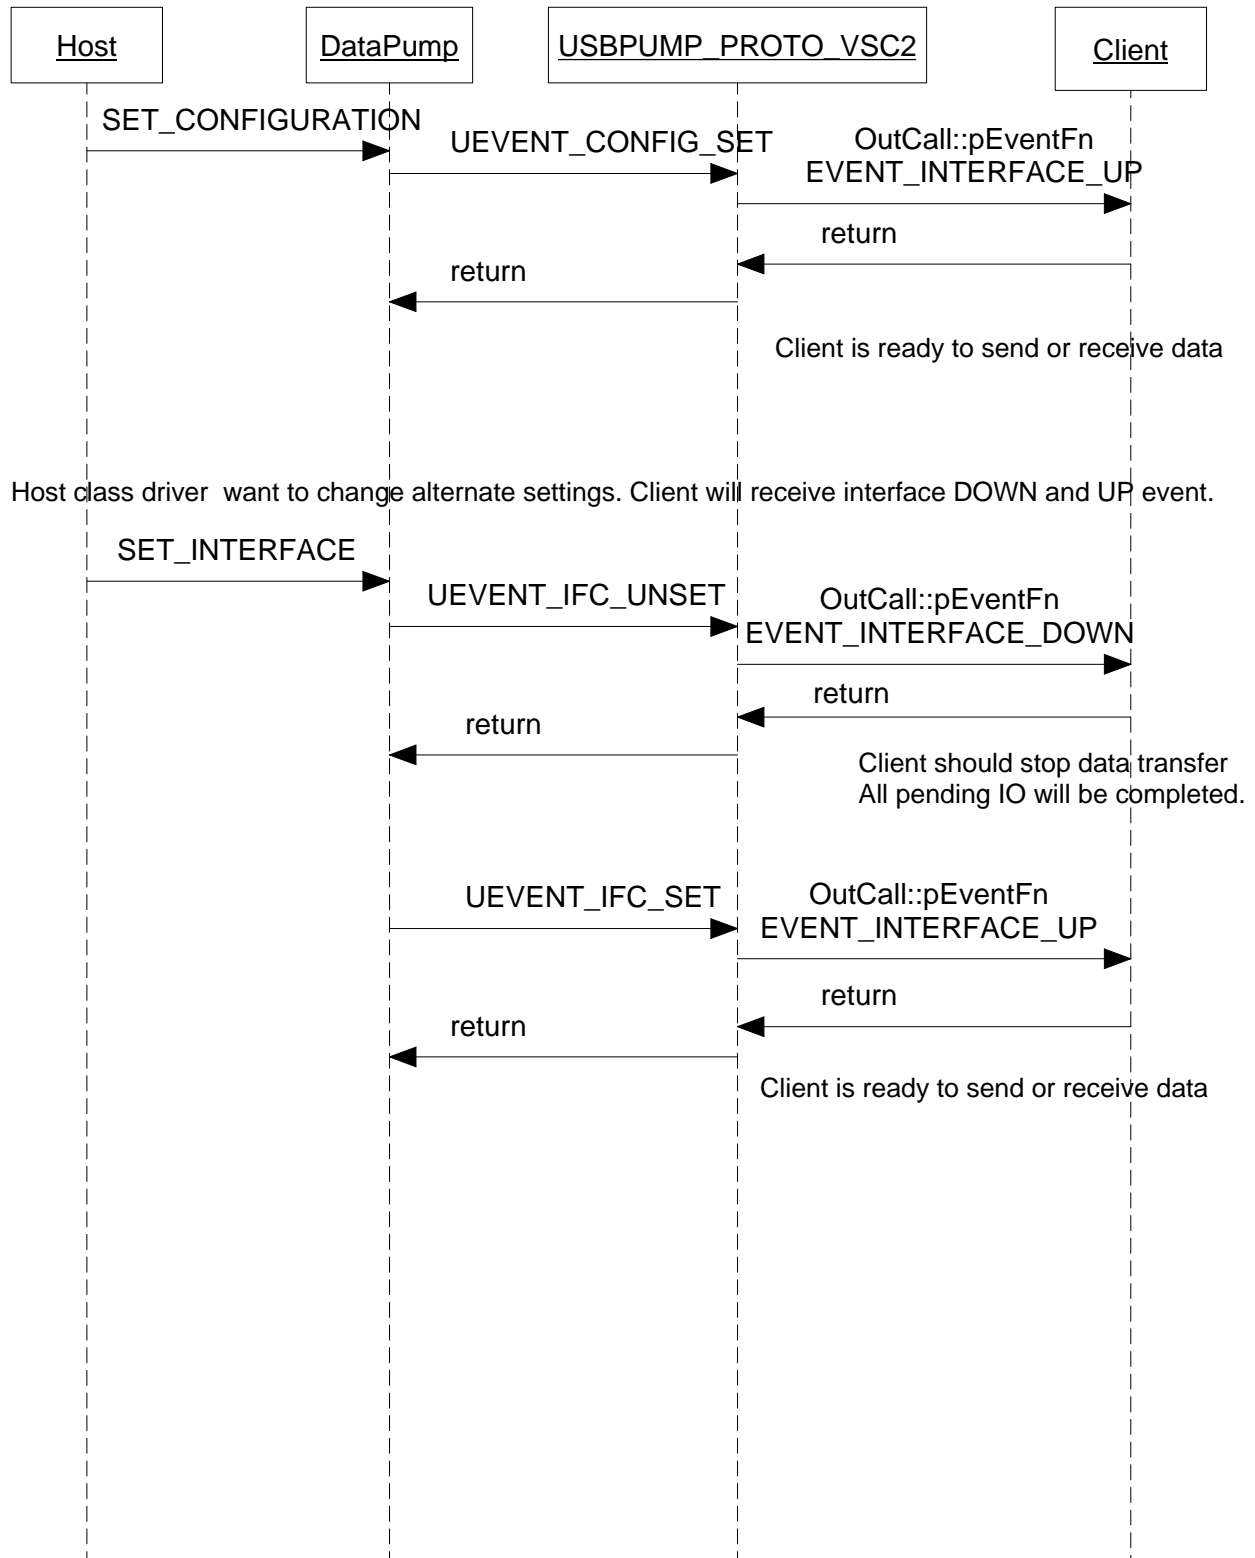


Figure 5. Sequence Diagram for VSC data transfer

