 


MilesTag CORE Laser Tag System


Wiring Reference for the CORE Bundle Starter Kit

This guide covers basic wiring of the components included in the MilesTag CORE Starter Kit (CORE Bundle). The kit includes the following components (subject to change):


1 each: (CORE-MOD)	MilesTag CORE module, assembled and tested mainboard
1 each: (LCD-MOD)	LCD Display, pre-wired
1 each: (SEN-GUN)	Gun Sensor, pre-wired
1 each: (SPEAKER)	8-ohm mylar speaker, pre-wired
2 each: (TSAL6100)	LED, infrared, high-power
2 each: (MUZ-LED-Y)	LED, super-bright, yellow
1 each: (SW-PB-RED)	Momentary button, Red
1 each: (SW-PB-BLK)	Momentary button, Black
1 each: (SW-TRIGGER)	Microswitch, momentary
1 each: (SW-KEY-SPST)	Key-lock power switch
1 each: (BATT-6AA)	Battery holder, 6 x AA
1 each: (CAB-CORE-PWR)	Power cable
1 each: (CAB-CORE-LCD)	LCD Ribbon Cable
2 each: (CAB-6C)	Button / Aux cables, single-ended
1 each: (CAB-4C)	LED cable, single-ended
1 each: (CAB-2C)	Audio Input, single-ended

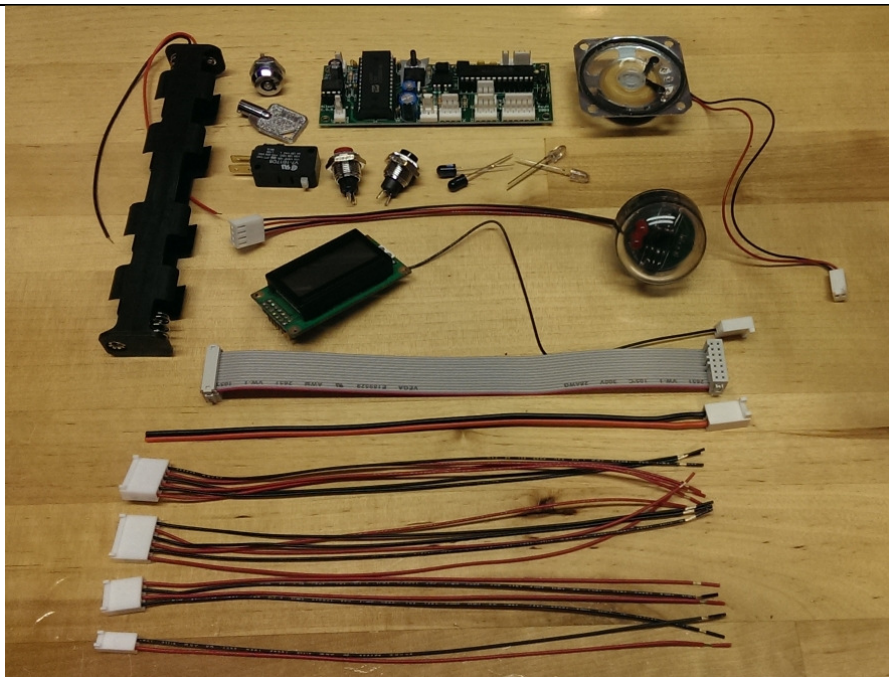

 
CORE Bundle Starter Kit

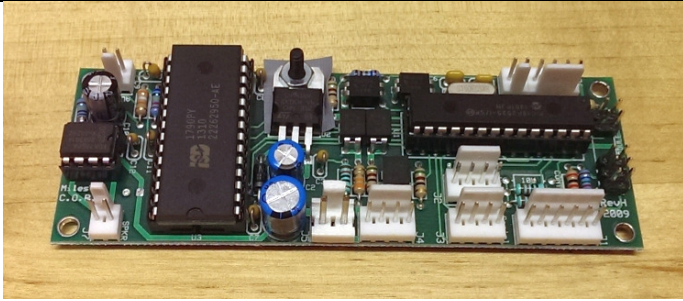

CORE-MOD

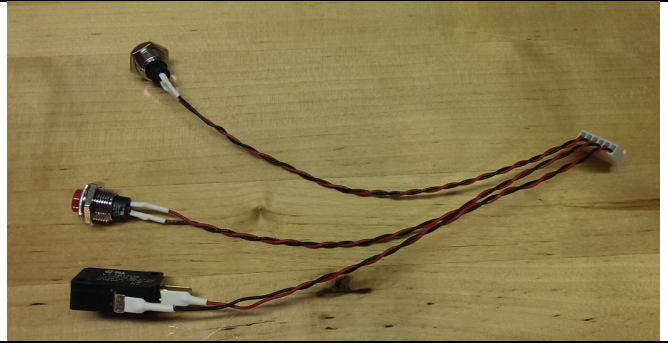 

 Install switches before soldering connections.

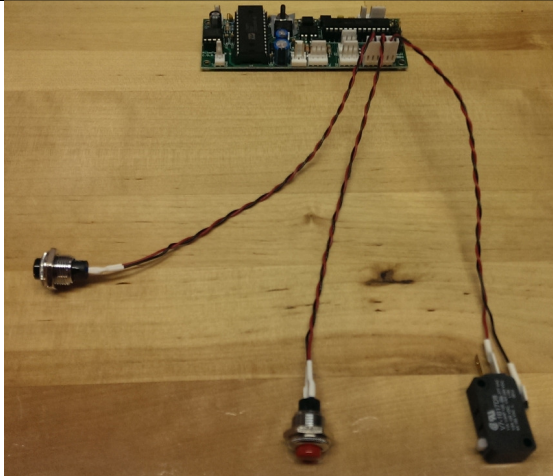


Mode

Reload


Trigger



 
Solder and heatshrink.

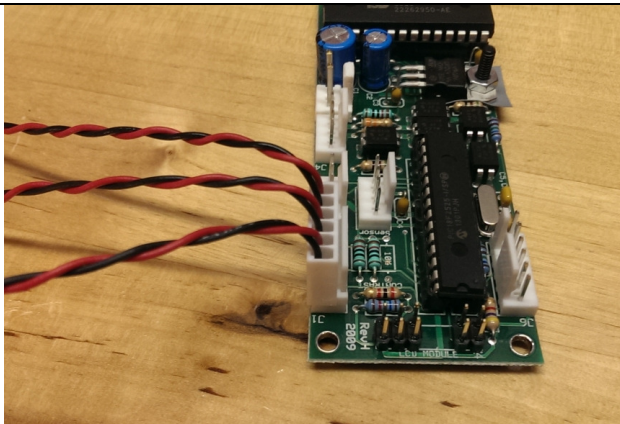





Near to Far: Trigger, Reload, Mode

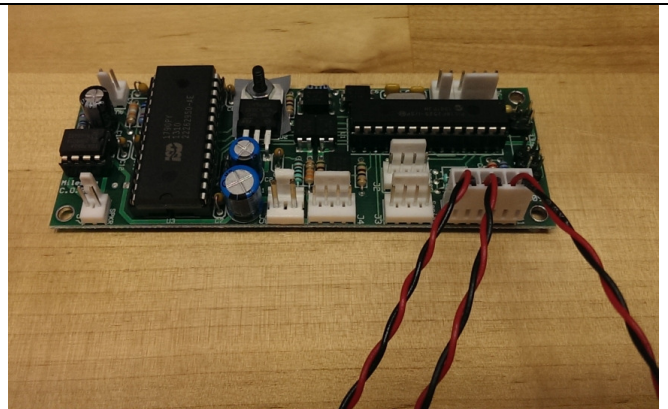 


Left to Right: Mode, Reload, Trigger

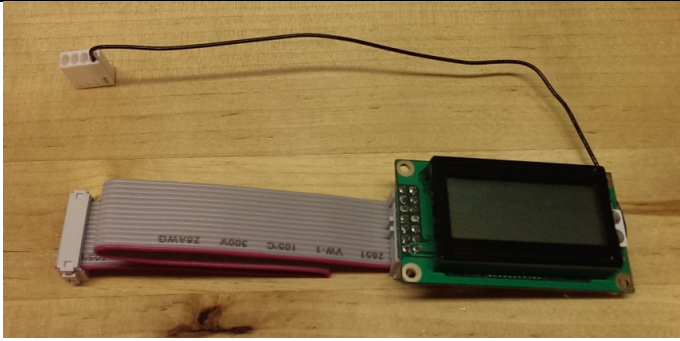 

    
Red stripe on LCD ribbon cable denotes "Pin 1".

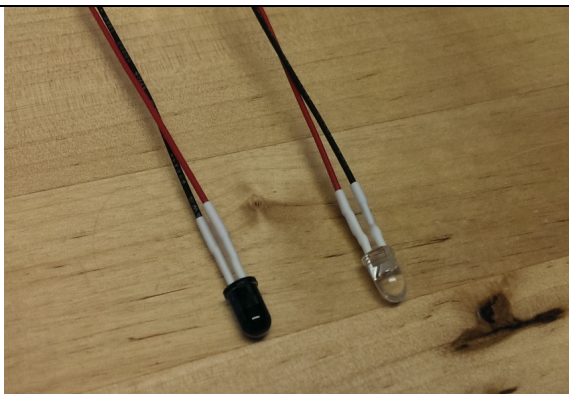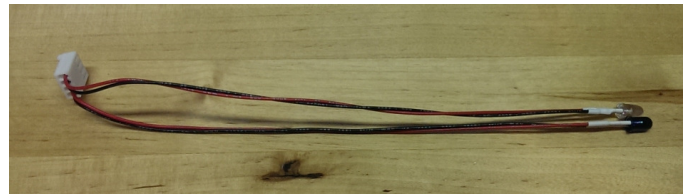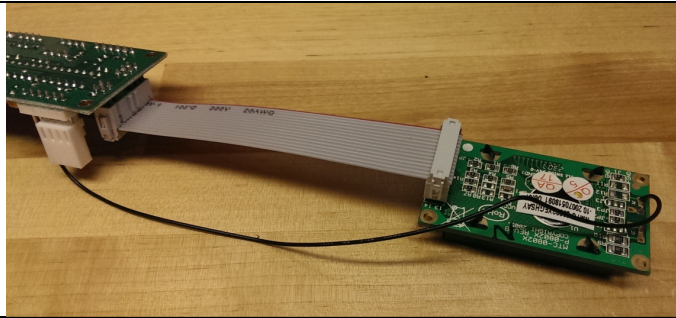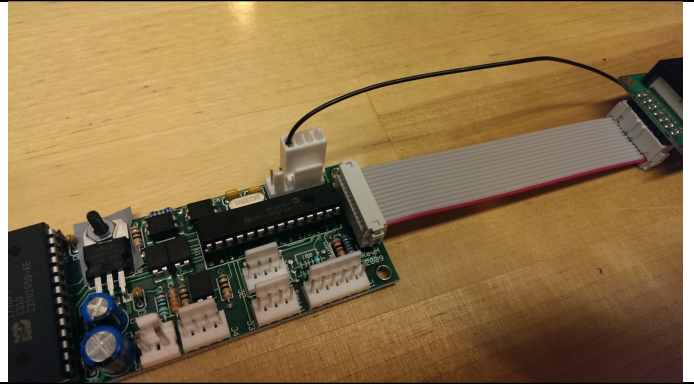



 
The longer lead on each LED is the + connection.

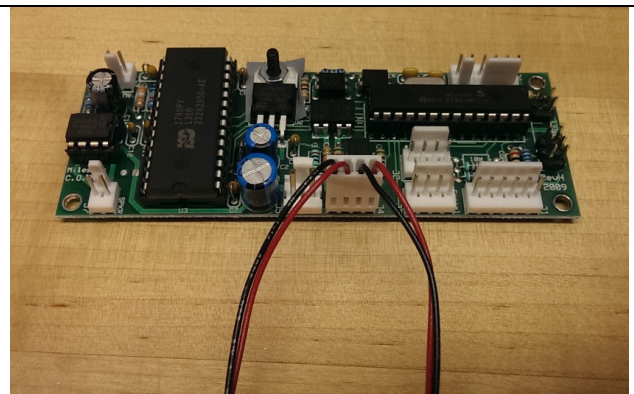


IR LED MUZZLE LED

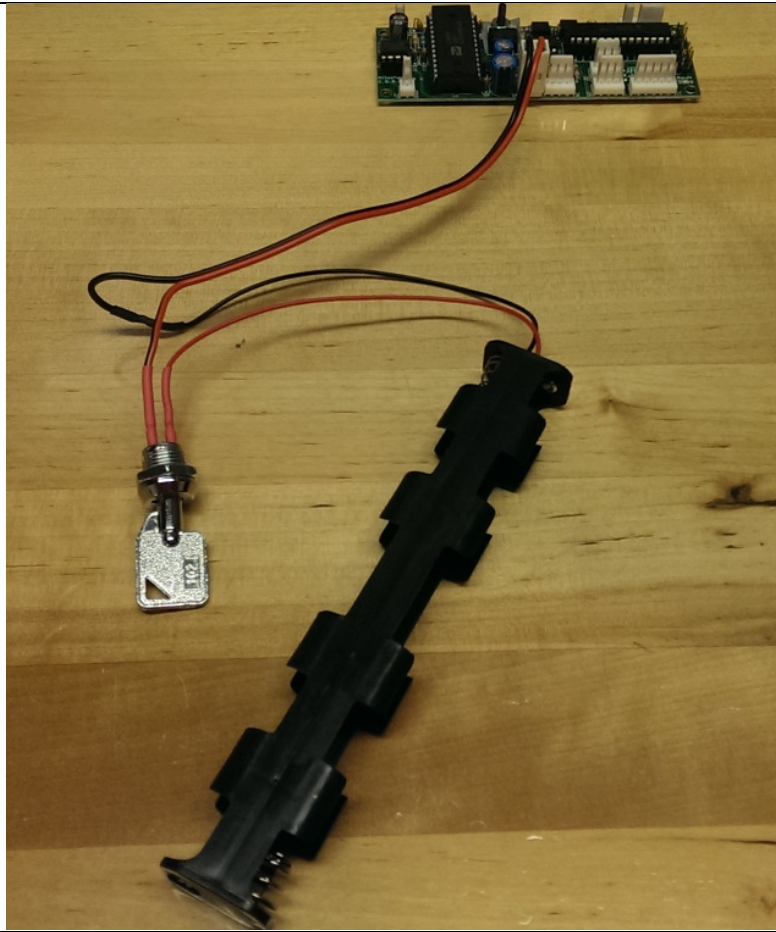 


   Assembled Power Harness with Keylock Switch.

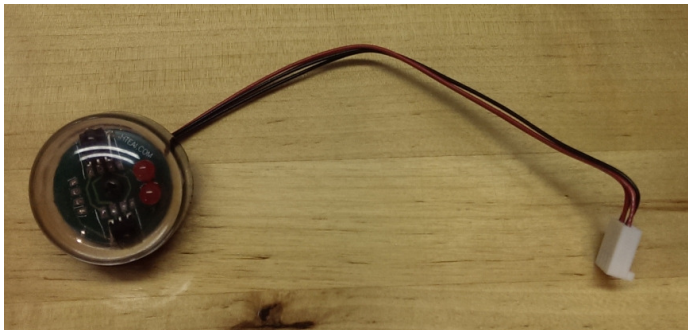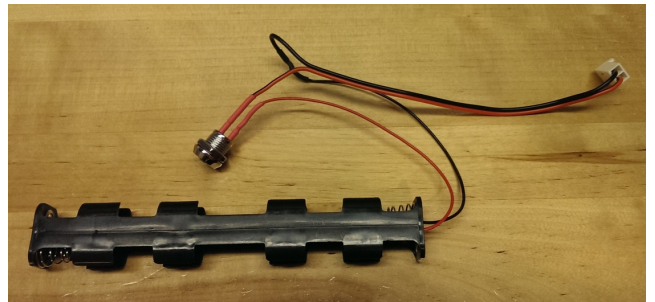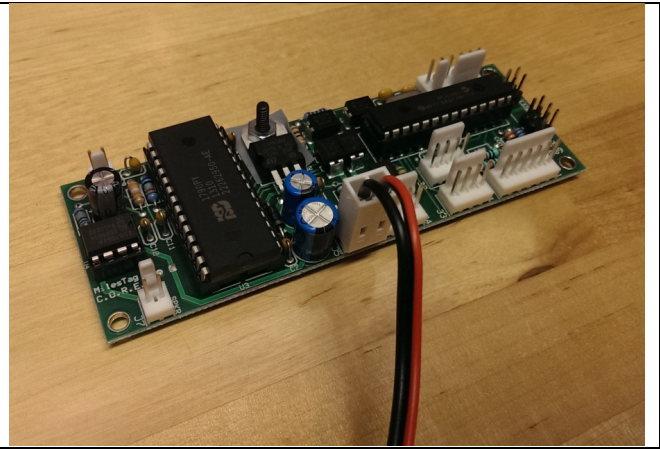


Gun Sensor

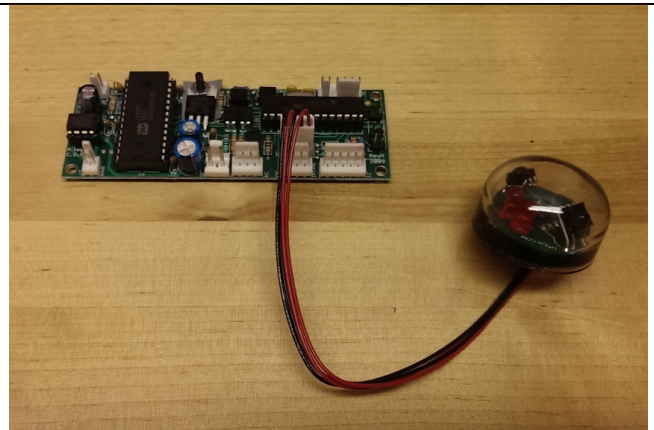 

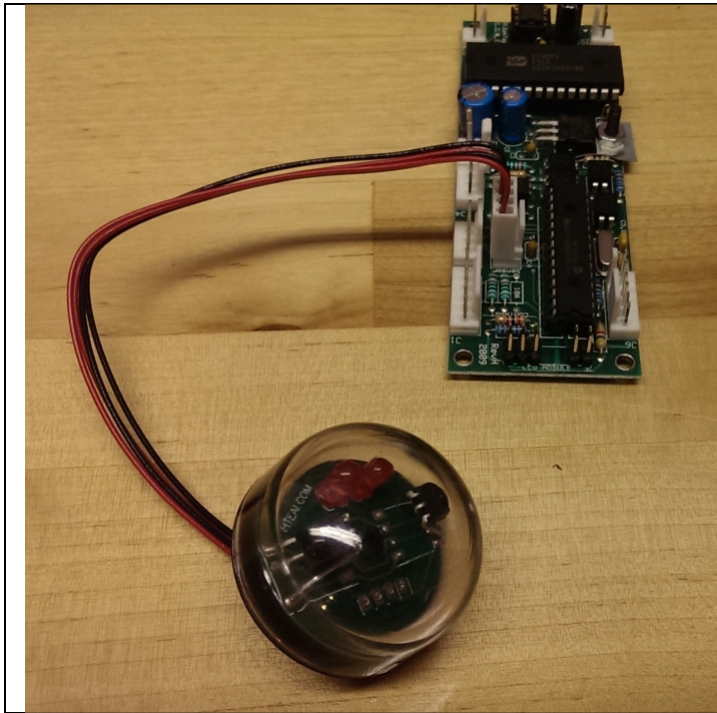 

Use this connector ONLY.

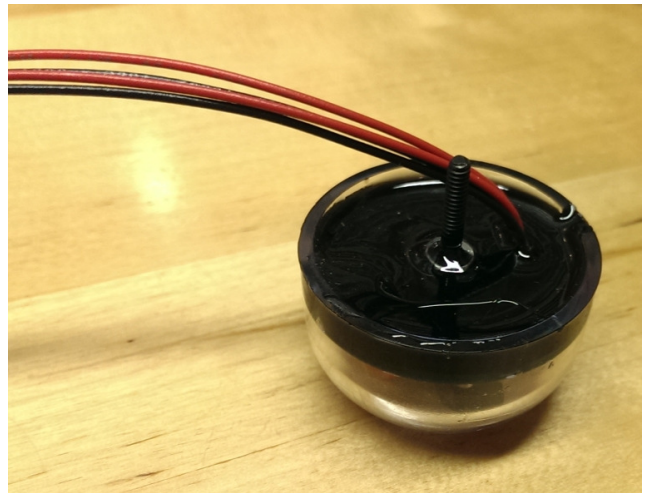 

4-40 Threaded Post

