

CelesDial Set clock

Adjust date and time

```
is_set_clock = true;

116 void setup() {
117     static uint8_t last_second = 0;
118     uint8_t display_hour = 0;
119     bool power_on = true;
120     bool button_state = false;
121     bool is_set_clock = true; //If you
122     bool led_on_off = false;
```

```
140 //Set date and time here
141 if (is_set_clock) {
142     Ds1302::DateTime dt = {
143         .year=25,
144         .month = 6,
145         .day = 15,
146         .hour = 11,
147         .minute = 16,
148         .second = 0,
149         .dow = 4, //1=Mon, 7=Sun
150     };
151     rtc.setDateTime(&dt);
152 }
```

Upload to Arduino



Run it around 1 mins to
check if correct
date/time

is_set_clock = false;

```
116 void setup() {
117     static uint8_t last_second = 0;
118     uint8_t display_hour = 0;
119     bool power_on = true;
120     bool button_state = false;
121     bool is_set_clock = false; //If you
122     bool led_on_off = false;
```

Upload to Arduino



Finish