



RTC Battery

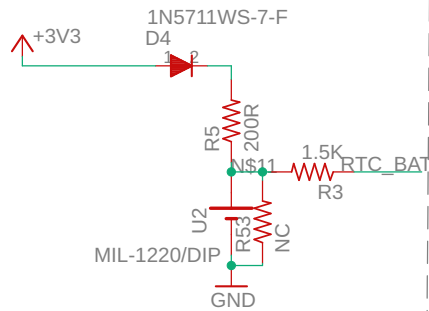


RTC_BAT short to GND when there is no button battery.

CAN Bus

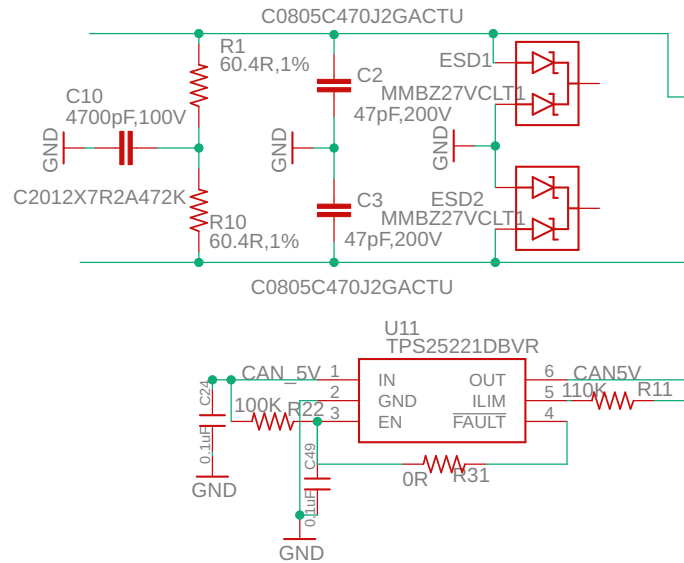

JTAG

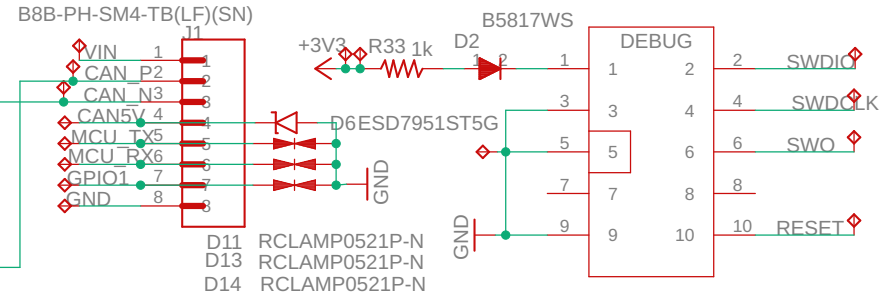

LED

STAT=0, LED up, indicates charge in progress;
STAT=1, LED go off, indicates charge complete or charge disabled;
Any fault condition occurs, LED blinks at 1Hz.



CAN interface & RGB


TITLE: AT SoM Carrier Board V0.3r2

Document Number:







REV:

Date: 9/30/20 5:36 AM

Sheet: 1/4

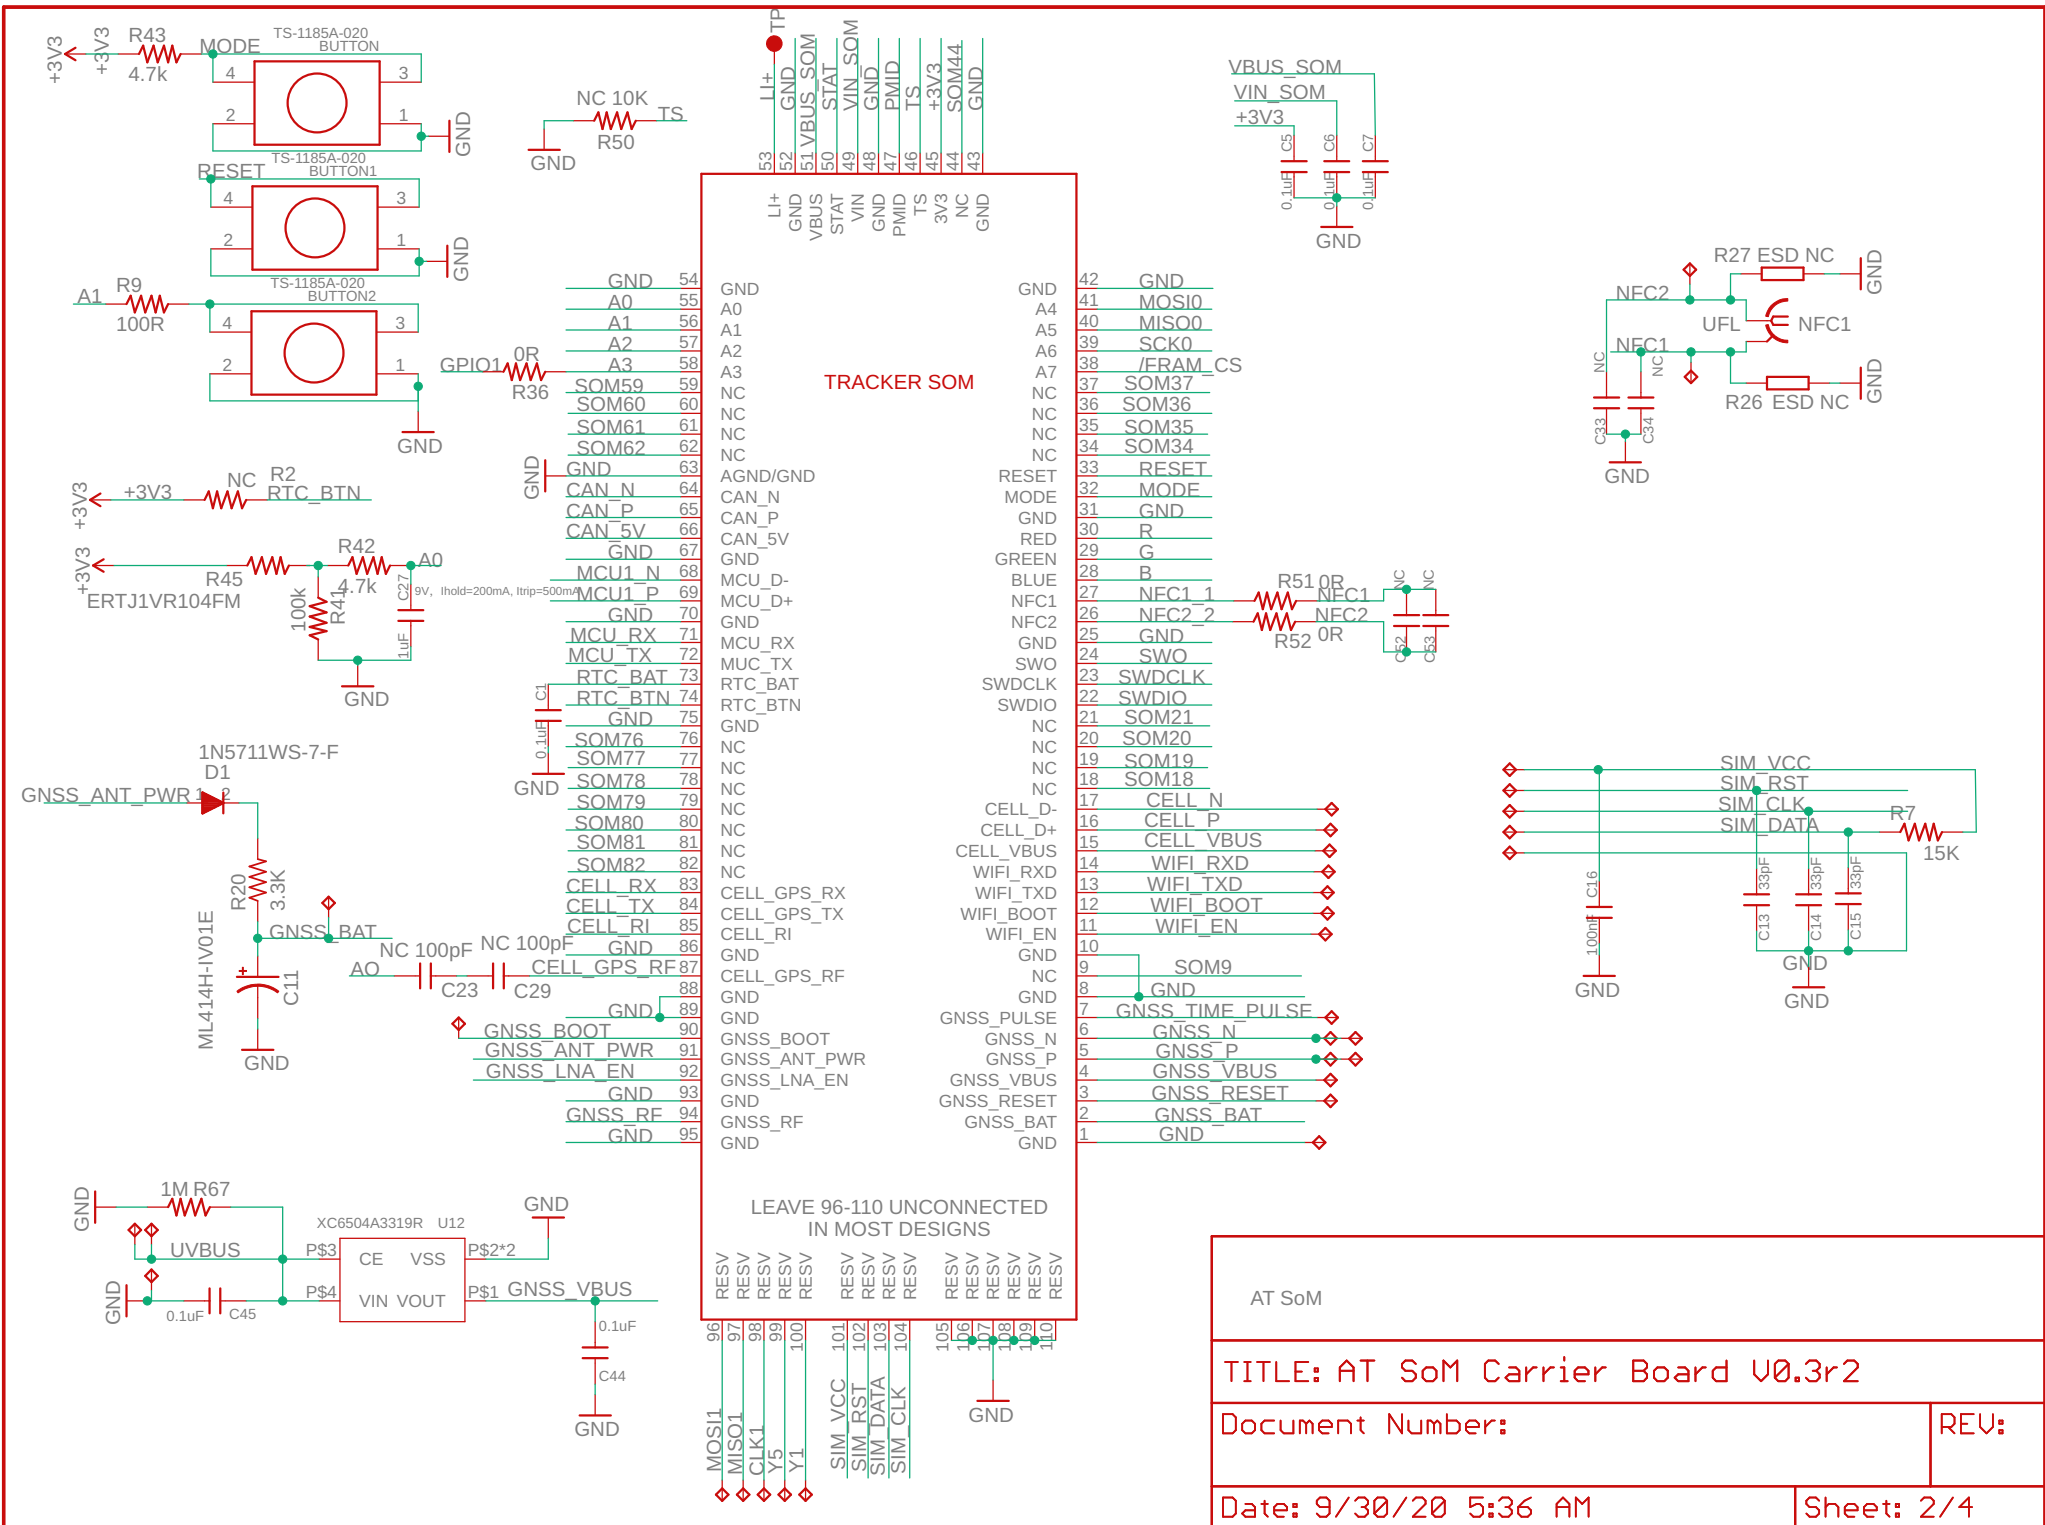

MCU USB-C

 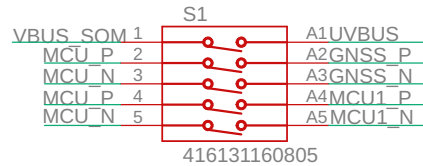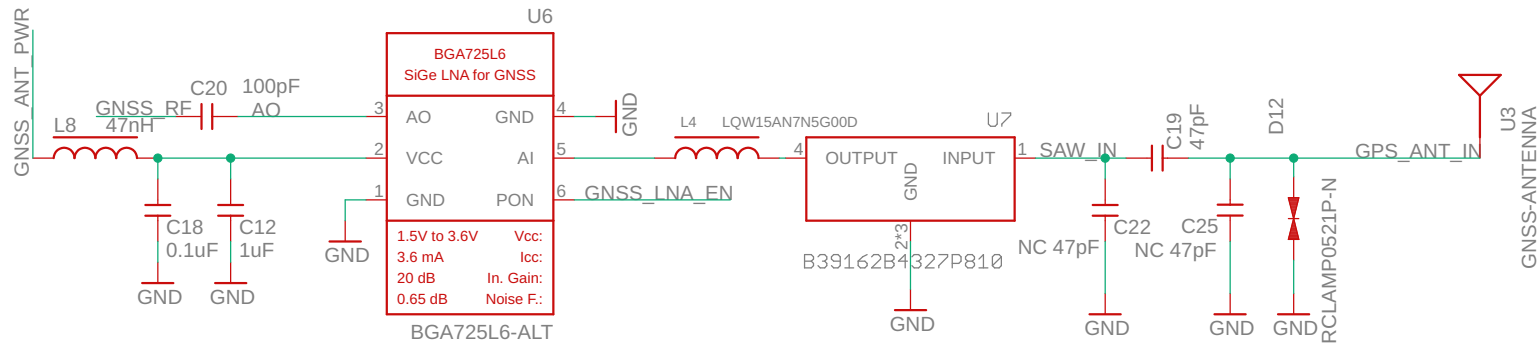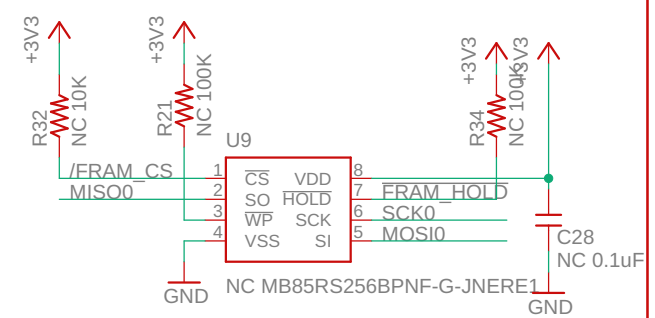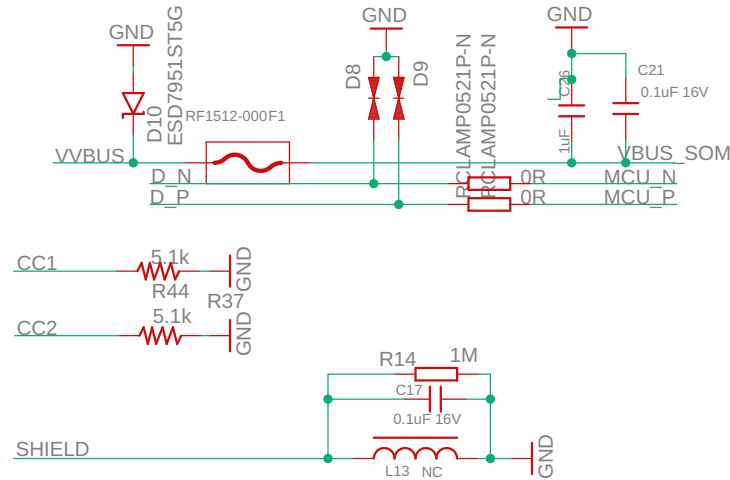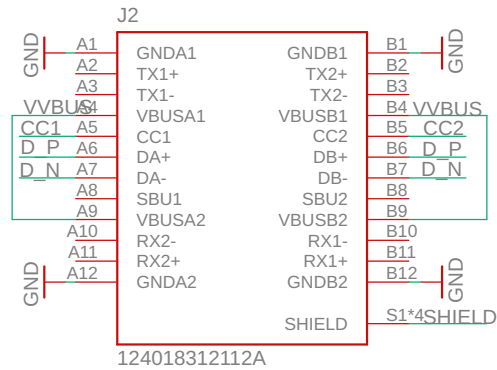

USB&FRAM&LNA

TITLE: AT SoM Carrier Board V0.3r2

Document Number:

REV:

Date: 9/30/20 5:36 AM

Sheet: 3/4

