

Time Circuits Display Keypad Cheat Sheet



Destination time programming	
mmddyyyyhhMM↵	Set date/time
mmddyyyy↵	Set date
hhMM↵	Set time

Special key sequences	
11↵	Show current alarm time/weekday
11hhMM↵	Set alarm to hh:MM
44↵	Timer : Show remaining time
44MM↵	Timer : Set timer to MM minutes
77↵	Reminder : Display reminder
777↵	Reminder : Display time until reminder
770↵	Reminder : Delete reminder
77mmdd↵	Reminder : Program reminder
77mmddhhMM↵	Reminder : Program reminder
111↵	Toggle Room Condition mode
112↵	Toggle World Clock mode
113↵	Toggle both WC and RC mode
222↵	Music Player : Shuffle off
555↵	Music Player : Shuffle on
88↵	Music Player : Display curr. played
888↵	Music Player : Go to song 0
888xxx↵	Music Player : Go to song xxx
000↵	Disable beep sound
001↵	Enable beep sound
002↵	Enable beep sound (30 seconds)
003↵	Enable beep sound (60 seconds)
64738↵	Restart the clock

Time Circuits Display Keypad Cheat Sheet



Holding keys for 2 seconds		
1 Toggle Alarm on/off	2 Music Player : Previous song	3 Play "key3.mp3"
4 Toggle Night mode	5 Music Player : Play/Stop	6 Play "key6.mp3"
7 Re-enable WiFi	8 Music Player : Next song	9 Return from Time Travel
	0 Time Travel	