

# Time Circuits Display Keypad Cheat Sheet



Destination time programming	
mmddyyyyhhMM↵	Set date/time
mmddyyyy↵	Set date
hhMM↵	Set time

Special key sequences	
11↵	Show current <b>alarm</b> time/weekday
11hhMM↵	Set <b>alarm</b> to hh:MM
44↵	<b>Timer</b> : Show remaining time
44MM↵	<b>Timer</b> : Set timer to MM minutes
77↵	<b>Reminder</b> : Display reminder
777↵	<b>Reminder</b> : Display time until reminder
770↵	<b>Reminder</b> : Delete reminder
77mmdd↵	<b>Reminder</b> : Program reminder
77mmddhhMM↵	<b>Reminder</b> : Program reminder
111↵	Toggle <b>Room Condition mode</b>
112↵	Toggle <b>World Clock mode</b>
113↵	Toggle both WC and RC mode
222↵	<b>Music Player</b> : Shuffle off
555↵	<b>Music Player</b> : Shuffle on
88↵	<b>Music Player</b> : Display curr. played
888↵	<b>Music Player</b> : Go to song 0
888xxx↵	<b>Music Player</b> : Go to song xxx
000↵	Disable <b>beep</b> sound
001↵	Enable <b>beep</b> sound
002↵	Enable <b>beep</b> sound (30 seconds)
003↵	Enable <b>beep</b> sound (60 seconds)
64738↵	Restart the clock

# Time Circuits Display Keypad Cheat Sheet



Holding keys for 2 seconds		
<b>1</b> Toggle <b>Alarm</b> on/off	<b>2</b> <b>Music Player :</b> Previous song	<b>3</b> Play "key3.mp3"
<b>4</b> Toggle <b>Night mode</b> on/off	<b>5</b> <b>Music Player :</b> Play/Stop	<b>6</b> Play "key6.mp3"
<b>7</b> <b>Re-enable WiFi</b>	<b>8</b> <b>Music Player :</b> Next song	<b>9</b> Return from Time Travel
	<b>0</b> <b>Time Travel</b>	