

**social
media**

for use with
PlayStation®
PS1 • PS2 • PS3

Be sure to follow us for the latest
news and product releases.



retrofighters

retrofightersco

retro.fighters


retrofighters

Tag **#retrofighters** for a chance
to be featured on our social media!

RETRO®
FIGHTERS

defender
wireless gamepad

Quick Start
Instruction Manual

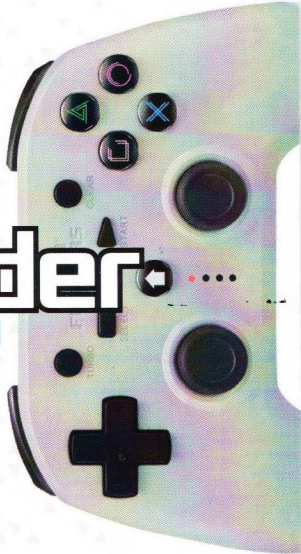

FAQs

How do I pair my controller?

Please refer to the "How to Pair" section of this instruction manual.

Are the buttons analog?

Yes, the buttons are analog so you'll have no problem pulling off your favorite moves!

On PS1 the 2nd analog stick acts as buttons too?

Yes! In non-analog mode, the 2nd analog stick is mapped out as: Square, Triangle, X and Circle. Square is left, Triangle is up, X is down and Circle is right.

What systems are compatible?

PS1/PS2/PS3/PS Classic/PC/Switch.

I can't connect my controller to PS Classic, none of the buttons work?

*Please read the PS Classic section on how to setup properly.

FAQs

How do I charge?

To charge, use the provided USB-C cable with a USB compatible charging block (not included). Once charging the LED light on the controller will continuously blink indicating it is currently charging. Once the controller is fully charged it will stop blinking. This process takes approximately 2.5 hours on low / empty battery.

How long is the battery life?

Approximately 10 hours before you need to recharge.

Is this compatible with the multi-tap?

Yes, you can use multiple Defenders at the same time without any interference.

What is the "Punch" button on top of the controller?

This is an auto button, it activates the button with turbo functionality without having to hold the button down.

customer service

We strive to make our fellow gamers happy. If you experience any issues with this product please contact us directly. We are here to help and we will make it right! You can send us an email at: support@retrofighters.com

setup (PS Classic)

1. Insert USB dongle
2. 2nd light (from top) will light up
3. Hold "Home" button for a couple seconds
4. 1st and 2nd light (from top) will light up
5. Hold down home button again until the bottom light is lit.

*Please note that on PS Classic there is D-pad function only, no analog sticks.

special thanks


@Gewal • @VGCollectaholic • Ahans76 • Big Bruno • Brendan McCoy
Brian Girardin-Thepill • Caleb Root(Skull Kid) • Casey Fitzgerald • Cesar A Zurita
Charles Lai (Comtar) • Craig Shaffer • David Baisley • David Schokker
Derick M Brown • Destiny Fomo • DJ Gamer • Donavahn Speers • Erik Rothe • Flu
Glejs • Jacob Hinrichsen • Jacob Kelly • Jason S. • Jason Verkaart • Jason Winkel
Jay Newton • Jeff • Jun Militante • kuLLe • Marc Farnsworth • Michael L.
Negativeions • Nick W. • Robert Moran • Robert M. • Ryan Black • Ryan Lopez
Skriblez • sleepydood • Steve Taube • Thomas J. Kennedy • Tim Wendel ('tw3nz0r')
Trevor J. • Wesfranks • William Byrd • William H.

analog setup (PS1/PS2)

The Retro Fighters Wireless Defender will automatically detect an analog game and activate by indicating the 1st and 2nd light as on. Some games on PS1 will require you to manually turn on analog mode by pressing the "Home" button and then going into the game settings and activating analog mode. However, most games will automatically switch back and forth between both modes. Please note that the gamepad will not work if you switch on "Analog" mode on a "Non-Analog" game. Please refer to the page LED Indicator page for more details on what each light means.

LED indicators

- | | |
|----------------------------------|--------------------------------|
| • Non-Analog Mode (PS), Player 1 | • |
| • | • Player 3 |
| • | • |
| • Analog Mode (PS) | • |
| • | • |
| • | • PS Classic Edition, Player 4 |
| • | |
| • Player 2 | |
| • | |

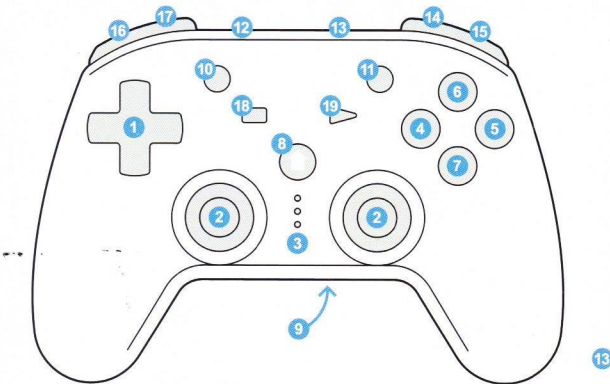

- | | | |
|-------------------|-------------------------|-----------------------|
| 1 D-Pad | 8 Home Button | 15 R2 Trigger |
| 2 Analog Sticks | 9 Pairing Button (back) | 16 L1 Shoulder Button |
| 3 LED Indicator | 10 Turbo | 17 L2 Trigger |
| 4 Square Button | 11 Clear | 18 Select |
| 5 Circle Button | 12 Punch Auto Button | 19 Start |
| 6 Triangle Button | 13 Screenshot Button | |
| 7 X Button | 14 R1 Shoulder Button | |

how to pair

1. Insert the dongle into the controller port you want to use.
2. Press the "Home" button and 4 LEDs flash.
3. Press the back pairing button to automatically pair the controller.

Macro Functions

Below are listed features and how to use them on the Defender®

Using "O" button as an example:

Function:	TURBO SET	TURBO CLEAR	AUTO SET	AUTO CLEAR
PS Dongle	O + TURBO	O + CLEAR	O + PUNCH	O + CLEAR
USB Dongle	O + TURBO	O + CLEAR	O + PUNCH	O + PUNCH

Turn off gamepad: Press "Select" + DOWN on Left Joystick (L3).

Xinput to Dinput mode

Gamepad defaults to Xinput mode. To enter Dinput mode press and hold Home button for about 3 seconds, LED1 and LED2 will light up showing Dinput (analog mode), press and hold Home button again for Dinput (digital mode).