



- | | | |
|-------------------|-----------------------|-----------------------|
| 1 D-Pad | 8 Home Button | 15 R2 Trigger |
| 2 Analog Sticks | 9 Off Button (back) | 16 L1 Shoulder Button |
| 3 LED Indicator | 10 Turbo | 17 L2 Trigger |
| 4 Square Button | 11 Clear | 18 Select |
| 5 Circle Button | 12 Punch Auto Button | 19 Start |
| 6 Triangle Button | 13 Screenshot Button | |
| 7 X Button | 14 R1 Shoulder Button | |

how to pair

First time connecting to PS3, please use the included USB-C cable (or USB-C cable that you own) and plug it into the system to sync the gamepad to the system. To connect in future just press home button.

Macro Functions

Below are listed features and how to use them on the Defender®

Using "O" button as an example:

Function:	TURBO SET	TURBO CLEAR	AUTO SET	AUTO CLEAR
PS Dongle	O + TURBO	O + CLEAR	O + PUNCH	O + PUNCH

Xinput to Dinput mode

Swap Xinput to Dinput mode: Connect gamepad to PC via USB-C cable, hold HOME button for 3 seconds.

FAQs

How do I pair my controller?

Please refer to the "How to Pair" section of this instruction manual.

Are the buttons analog?

Yes, the buttons are analog so you'll have no problem pulling off your favorite moves!

What systems are compatible?

PS3/PS4/PC.

Does this have Six Axis functionality?

Yes!

FAQs

How do I charge?

To charge, use the provided USB-C cable with a USB compatible charging block (not included). Once charging the LED light on the controller will continuously blink indicating it is currently charging. Once the controller is fully charged it will stop blinking. This process takes approximately 2.5 hours on low / empty battery.

How long is the battery life?

Approximately 10 hours before you need to recharge.

What is the "Punch" button on top of the controller?

This is an auto button, it activates the button with turbo functionality without having to hold the button down.

What is the "Screenshot" button for?

It is used for updating firmware. Use only if needed.

customer service

We strive to make our fellow gamers happy. If you experience any issues with this product please contact us directly. We are here to help and we will make it right! You can send us an email at: support@retrofighters.com

social media

for use with
PlayStation®
PS3 • PS4 • PC

Be sure to follow us for the latest
news and product releases.



Tag **#retrofighters** for a chance
to be featured on our social media!

RETRO®
FIGHTERS

defender
wireless gamepad

Quick Start
Instruction Manual

