

- Before using, check that there is plenty of space around you.
- When using the controller, grip it firmly to make sure it cannot slip out of your hand.
- If using a controller that is connected to the PS3 system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object. Also, take care to avoid pulling the cable out of the PS3 system while using the controller.

#### Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.

- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

#### Package list:



Gamepad



USB charging cable



User Manual

#### Customer Service:

Due to the official game platform software upgrades or source code changes and other not resist factors caused some of the games cannot be played or connected with our Gamepad, please kindly visit our website: <http://www.sakoglobal.com>, or contact us by email [cs@sakoglobal.com](mailto:cs@sakoglobal.com) for help.

**MORE COUPON?  
FREE SAMPLE?**  
Contact us

[cs@sakoglobal.com](mailto:cs@sakoglobal.com)

For PS3/PS2/  
PC (Windows)

Wireless Bluetooth GamePad

## Wireless Controller for PS3


### Instruction Manual



## Applicable & Feature function

1. Thank you for purchasing SK P305 Wireless PS3 Controller.
2. This gamepad works with PS3/ PS2, PC and Smart TV.
3. SK wireless PS3 controller has built in two electric motors and 6-axis features make each hit, crash and explosion is more exciting and realistic. It offers exciting experience and interacts with your games.

## Introduction of buttons

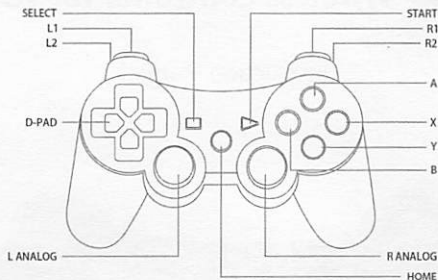

## How to Sync with PS3?

1. The first time you use the controller, or when you want to use the controller on another PS3 system, you must perform device registration/ pairing. Turn on the PS3 console system and connect the controller to the system. Use the USB cable to complete device registration.
2. After first time connected, press HOME button, it will automatically connect to the PS3 console.
3. If above methods fail, put a pin into the mini hole on the back of the controller and press the button to reset the gamepad.

## Electrical Parameters:

Input power rating:	DC 5V, 500mA
Battery type:	Built-in rechargeable Lithium-Ion battery
Voltage:	DC 3.7 V
Battery capacity:	450mAh
Operating temperature:	5° C - 35° C (41° F - 95° F)
Weight:	Approx. 180 g (6.3oz)

Design and specifications are subject to change without notice.

## How to turn on/off?

The PS3 controller will start when you press HOME button or connect with computer by USB cable. It will turn off after 5 minutes disconnected or no operating.

If it cannot turn off after a period time, please plug the USB cable with computer then pull it out, thus it will be power off. You can restart the controller by press the RESET hole on the back of the gamepad with a pin for 5 seconds.

## How to Charge the PS3 Controller?

Charge the PS3 controller with the USB cable.


When charging, the red light on the controller will be flashing; when fully charged, the red light turns off.

## Battery life and duration

- The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.
- Charge in an environment where the temperature range is between 10°C-30°C(50°F-86°F). Charging may not be as effective when performed in other environments.
- When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once 3 months to help maintain battery functionality.

## Use and handing precautions

- Avoid prolonged use of this product. Take a break at about 30 minutes intervals.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- This product is intended for use with the hands only.
- The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.

Note that some software titles enable the vibration function by default. To disable the vibration function, select  (Settings) → [Devices] → [Controllers] from the function screen, and then remove the checkmark from [Enable Vibration].

- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product or subject it to strong physical shock.
- When using the motion sensor function, be cautious of the following points. If the controller hits a person or object, this may cause accidental injury or damage.