


1. Turn the rear brake adjusting nut (3). Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4).
2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

Brake Shoe Wear

The rear brake is equipped with an external brake wear indicator that let you check brake wear without disassembly. Application of the brake control (pedal) causes the arrow on the brake arm to move toward a reference mark on the brake panel.

RIGHT
REAR

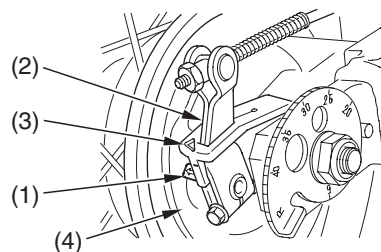

(1) arrow
(2) brake arm

(3) reference mark
(4) brake panel

(cont'd)