 
 
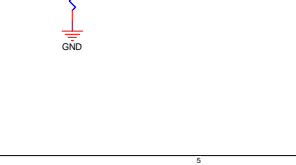 
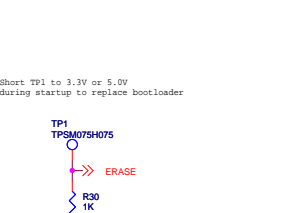 
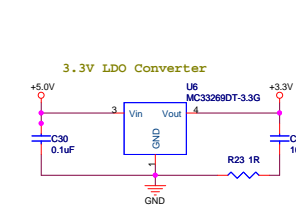 
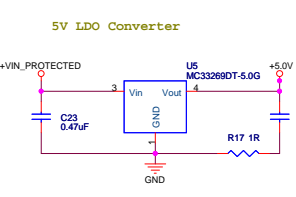 
 
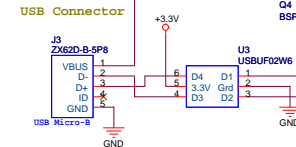 
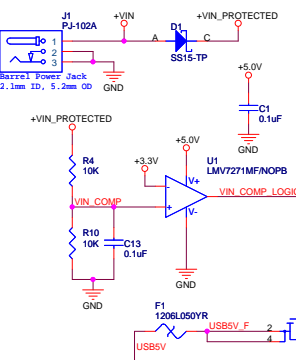 
 









**Power Connector**  
+7.5V to +12V DC Input (9V Preferred)  
If +VIN exists, all rails driven by +VIN  
If +VIN not present, all rails driven by USB Power



**Push Button**






       **Selection Circuitry for Switch 1 Control of /RESET**

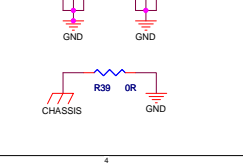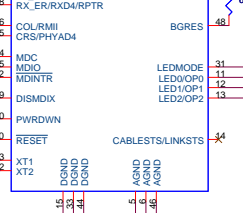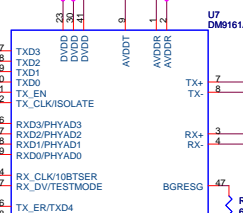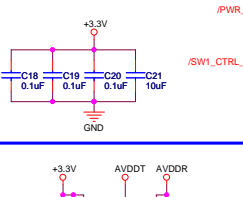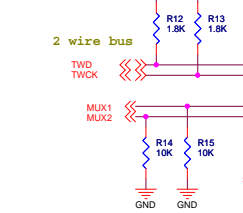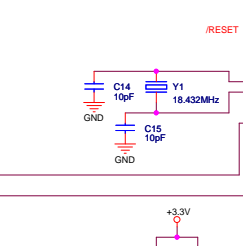
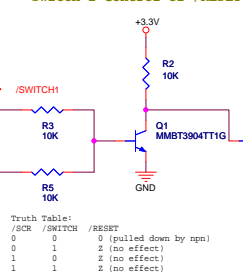


**Truth Table**

   
| /RST | /SW1_CTRL_OF_RESET |
|------|--------------------|
| 0    | 0                  |
| 1    | 1                  |
| 1    | 1                  |





**2 wire bus**

  






**512KB Flash**

 





**128KB Ram**

  



**LED**

     



**Digital Connector 1**

    




**Digital Connector 2**

  





**Analog Input Connector**

  



**Power Connector**

   



**ICSP Connector**

    

**Micro SD Card Slot**

  

**Ethernet**

  

Short TP1 to 3.3V or 5.0V during startup to replace bootloader