

CICS command help from console (v.3.20)

echo	changes echo state
chan [<name>]	sets or shows channel
freq [nnn.nn]	sets or shows current frequency in KHz
scan [on off <network>]	scans or returns scan state
ver	returns current version of the CICS
sb [USB LSB AM]	sets or returns sideband
sideband	same as sb command
mode [<name>]	set or show tcvr mode
lbt [measure]	get default LBT mode or start LBT
lock [on off abort]	locks unlocks tranceiver
ptt on off [data voice talk]	switch transmit/receive
callactivity [on off now]	show call Listen, Lock and Link states
set gp pause lock	sets Q line modes of the GP port
selfid [<self>, ...]	changes selfid list of the CICS interface
lqa [full]	show current lqa data (with score if full)
lqa output [on off full]	show or alter lqa output state
rtulu <src> <dst> [<num>]	shows telcall resulting from call
alesearch	tests if there are any ALE networks
mute [off voice selcall]	reflects mode of speaker mute
statustime [<seconds>]	sets or returns status timeout
link	show if CICS has an call in/out link
hangup	closes connection link

CICS call commands:

selcall	<dest>	initiates selective call
telcall	<dest> <num>	initiates tel-call
pagecall	<dest> <msg>	sends msg and waits for ack
gpsbeacon	<dest>	request for the gps position
gpsposition	<dest>	sends gps position
stuncall	<dest> <pin>	decommissions remote tcvr

CICS command help from console (v.3.20)

statuscall <dest> <msg>	status request call
statusack <dest> <msg>	acknowledgement of the status request
selbeacon <dest>	selcall beacon call
alebeacon <dest>	ALE beacon call
beacon <dest>	beacon call
alecall <dest>[<msg>]	establish ALE communications link
aletelcall <dest> <num>	establish ALE tel-call link
call <dest>[<msg>]	initiates voice call. Optional msg with ALE
amd <msg>	send AMD message on existing ALE link
sound [on off now] <dest> = <dest address>[@<network>] <self> = <self address>[@<network>] <msg> = <message sent> First argument after <dest> not an option	enable, disable or initiate sounding

CICS call options: (any order after <dest>)

thischan	Limits ALE call to current channel
+/-lbt	Force/skip listen before transmit
+/-lqa	Force/skip link quality exchange on ALE
from <self>	Specify selfid and optional network
tis [<self>]	Like "from" but only use with ALE
twas [<self>]	Like "tis". Forces link to close
s	mute the Speaker during call