



## 06SENSE\_PULSE for Speed-pulse Alarm 17Mar2020

### Installing / connecting

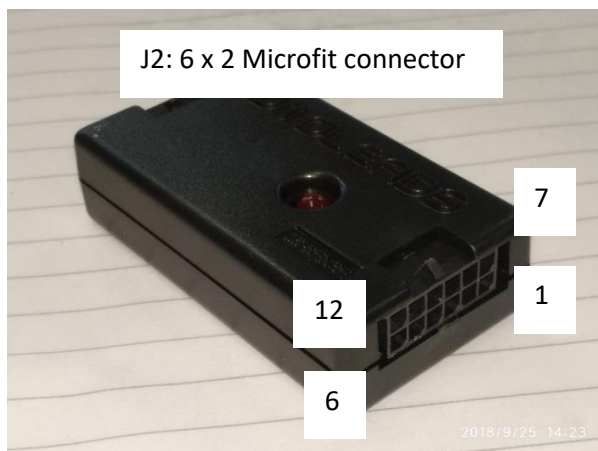

J2-P1	bypass to J1-P1
J2-P2	blank
J2-P3	GND
J2-P4	GND
J2-P5	blank
J2-P6	blank
J2-P7	+12V
J2-P8	+12V
J2-P9	GND
J2-P10	GND
J2-P11	GP0/ANO/CIN+/ICSPDAT
J2-P12	Push button input

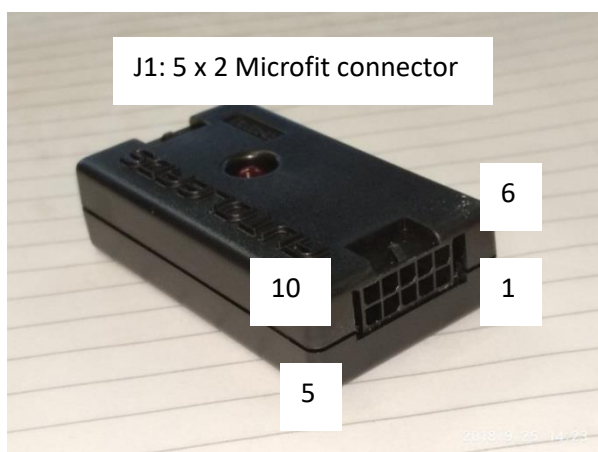

J1-P1	bypass to J2-P1
J1-P2	Input pulse
J1-P3	GND
J1-P4	+5V
J1-P5	GP3/MCLR/Vpp
J1-P6	+12V
J1-P7	+12V
J1-P8	Output switched +12V
J1-P9	Output switched +12V
J1-P10	GND

Blue: available for further use  
 Brown: Input push button  
 Green: Power supply to this module, +12V 3A  
 Orange: output, switched +12V max. 3A

