


PT Activity 7.5.2: Challenge Wireless WRT300N

Topology Diagram

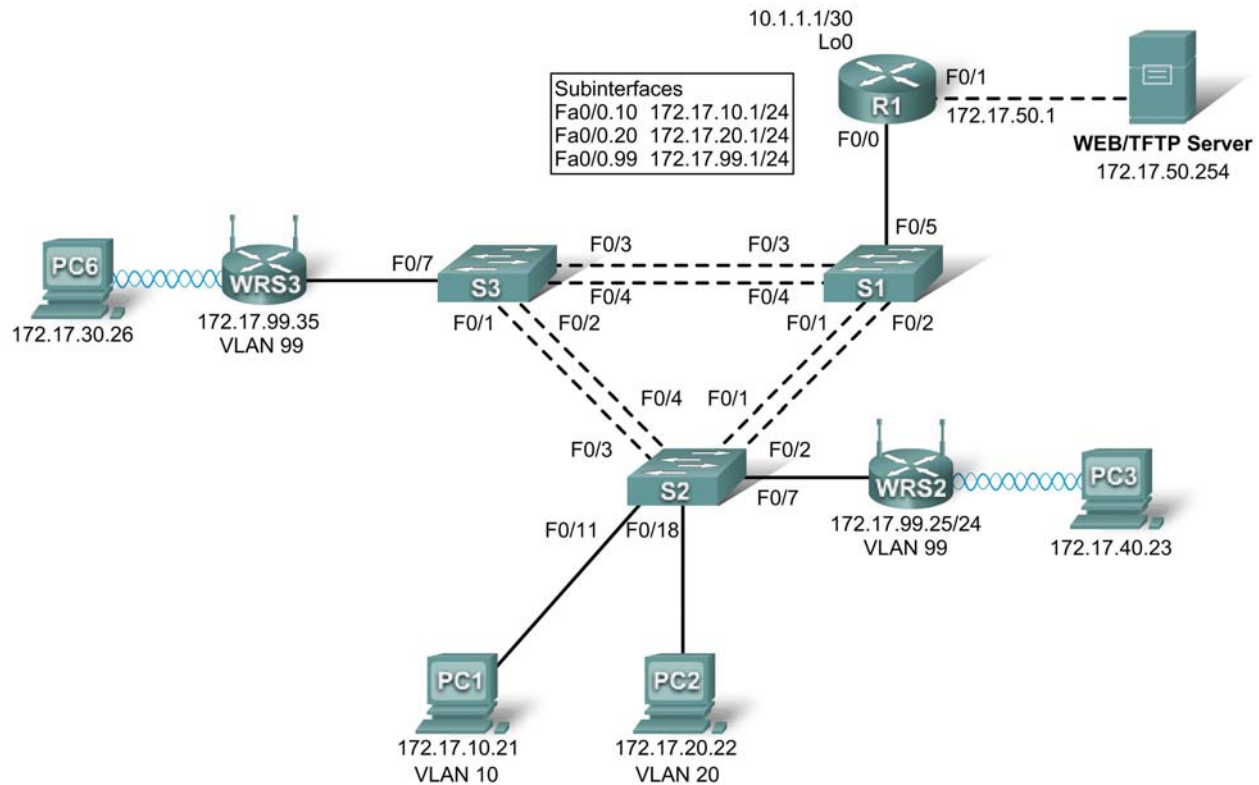

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway
R1	Fa0/1	172.17.50.1	255.255.255.0	N/A
	Fa0/0.10	172.17.10.1	255.255.255.0	N/A
	Fa0/0.20	172.17.20.1	255.255.255.0	N/A
	Fa0/0.99	172.17.99.1	255.255.255.0	N/A
	Lo0	10.1.1.1	255.255.255.252	N/A
WRS2	WAN	172.17.99.25	255.255.255.0	172.17.99.1
	LAN/Wireless	172.17.40.1	255.255.255.0	N/A
WRS3	WAN	172.17.99.35	255.255.255.0	172.17.99.1
	LAN/Wireless	172.17.30.1	255.255.255.0	N/A
PC1	NIC	172.17.10.21	255.255.255.0	172.17.10.1
PC2	NIC	172.17.20.22	255.255.255.0	172.17.20.1

VLAN Table

VLAN ID	VLAN Name	Network
VLAN 10	Faculty/Staff	172.17.10.0 /24
VLAN 20	Students	172.17.20.0 /24
VLAN 99	Wireless(Guest)	172.17.99.0 /24

Learning Objectives

- Perform basic router configurations
- Perform switch configurations
- Connect to the Linksys WRT300N router
- Access the WRT300N
- Configure IP settings for the Linksys WRT300N
- Configure DHCP settings
- Basic wireless settings
- Enable wireless security
- Managing and securing the web utility of the router
- Configure WRS2
- Creating and verifying full connectivity
- Configuring port security

Introduction

In this activity, you will configure a Linksys WRT300N, port security on a Cisco switch, and static routes on multiple devices. Make note of the procedures involved in connecting to a wireless network because some changes involve disconnecting clients, which may then have to reconnect after making changes to the configuration.

Task 1: Perform Basic Router Configurations

Step 1. Perform basic router configurations.

Configure R1 according to the following guidelines:

- Router hostname
- Disable DNS lookup
- Configure EXEC mode password of **class**
- Configure a password of **cisco** for console connections
- Configure a password of **cisco** for vty connections

Step 2. Configure router interfaces.

Configure Loopback0, FastEthernet 0/0, 0/1, and any subinterfaces listed in the addressing table. Before configuring the IP addresses on the the subinterfaces, encapsulation must be set to 802.1Q. The VLAN ID is identified by the subinterface number.

Verify the interfaces are up and their IP Addresses are correeect with the **show ip interfaces brief** command.

Task 2: Perform Switch Configurations

Step 1. Perform basic switch configurations.

Configure all three switches according to the following:

- Configure hostnames
- Disable DNS lookup
- Configure EXEC mode password of **class**
- Configure a password of **cisco** for console connections
- Configure a password of **cisco** for vty connections

Step 2. Set VTP mode and create VLANs.

For all switches set the VTP mode to **transparent** and create the VLANs according to the table at the beginning of this activity.

Verify the creation of the VLANs with the **show vlan brief** command.

Step 3. Configure switch port interfaces on S1, S2, and S3.

Configure the interfaces on the S1, S2, and S3 switches according to the following:

- Fa0/7 on S2 and S3 are in VLAN 99
- Fa0/5 on S1 is an 802.1Q trunk
- Fa0/11 on S2 is in VLAN 10
- Fa0/18 on S2 is in VLAN 20
- Remaining connected ports are trunk interfaces
- Allow all VLANs across trunking interfaces

Step 4. Verify VLANs and trunking.

Use the **show interfaces trunk** command on S1 and the **show vlan brief** command on S2 to verify that the switches are trunking correctly and the proper VLANs exist.

Step 5. Configure the Ethernet interfaces of PC1 and PC2.

Configure the Ethernet interfaces of PC1 and PC2 with the IP addresses and default gateways according to the addressing table at the beginning of the activity.

Step 6. Test the PC configuration.

Access the Command Prompt on each PC and ping its default gateway. The pings should be successful, if not, troubleshoot.

Task 3: Connect to the Linksys WRT300N Router

Step 1. Connect to a wireless router.

From PC6 access the Desktop then PC Wireless. From here select the Connect tab and connect to the Default network.

Step 2. Verify connectivity settings.

While still at the desktop of the PC, close the Linksys GUI window and then verify the connectivity settings by accessing the Command Prompt and typing the **ipconfig** command.

PC>**ipconfig**

```
IP Address.....: 192.168.1.101
Subnet Mask.....: 255.255.255.0
Default Gateway.....: 192.168.1.1
```

PC>

Task 4: Access the WRT300N

Step 1. Access WRS3 through the web browser.

On PC6, close the command prompt and then click the Web Browser. Enter the URL 192.168.1.1, the default gateway of the PC.

Step 2. Enter authentication information.

You will be prompted for a username and password. The default username and password are both **admin**. Once you have entered the login information, you should be viewing the default page of the Linksys WRT300N web utility.

Task 5: Configure IP Settings for the Linksys WRT300N

The best way to understand the following settings is to think of the WRT300N as being similar to a Cisco IOS-based router with two separate interfaces. One of the interfaces, the one configured under Internet Setup, acts as the connection to the switches and the interior of the network. The other interface, configured under Network Setup, acts as the interface connecting to the wireless clients, PC6 and PC3.

Step 1. Set the Internet connection type to static IP.

You should be at the Setup page of the Linksys router. Under Internet Setup is the Internet Connection Type option. Select Static IP.

Step 2. Set the IP address settings for Internet Setup.

- Set the Internet IP address to **172.17.99.35**
- Set the subnet mask to **255.255.255.0**
- Set the default gateway to the Fa0/1 VLAN 99 IP address of R1, **172.17.99.1**

Step 3. Configure the Network Setup IP address to 172.17.30.1 /24

Step 4. Save the settings.

Click **Save Settings**. You are prompted with a "Settings are successful" window. Click Continue. Since the default gateway has changed, PC6 will not be able to access the web utility until its IP address and gateway are updated.

Step 5. Renew IP configuration on PC6.

Close the Web Browser and return to the Desktop of PC6. Again, access the Command Prompt. Type the **ipconfig /renew** command to update PC6's IP address and default gateway.

Note: In Packet Tracer, there must be a space between **ipconfig** and **/renew**.

```
PC>ipconfig /renew
```

```
IP Address.....: 172.17.30.101
Subnet Mask.....: 255.255.255.0
Default Gateway.....: 172.17.30.1
```

```
DNS Server.....: 0.0.0.0
```

```
PC>
```

Task 6: Configure DHCP Settings

Now access the wireless router through the web browser again, but this time at the 172.17.30.1 URL.

Under DHCP Server Settings, set the start address to 25 and the maximum number of users to 25.

These settings give any PC that connects to this router wirelessly requesting an IP address through DHCP, an address between 172.17.30.25-49. Only 25 clients at a time are able to get an IP address.

Click **Save Settings** in order for the changes to take place.

Task 7: Basic Wireless Settings

Step 1. Configure the SSID.

Access the Wireless page and change the Network Name SSID from **Default** to **WRS3**.

Step 2. Save settings.

Step 3. Reconnect to the wireless network.

Since the SSID has changed, PC6 is currently unable to access the WRS3 network. On the Desktop return to PC Wireless and select the Connect Tab. Connect to the WRS3 network.

Step 4. Verify the settings.

Now that you have reconnected to the network, you have the new DHCP settings that you configured in Task 6. Verify this at the command prompt with the **ipconfig** command.

```
PC>ipconfig
```

```
IP Address.....: 172.17.30.26
Subnet Mask.....: 255.255.255.0
Default Gateway...: 172.17.30.1
DNS Server.....: 0.0.0.0
```

```
PC>
```

Note: Packet Tracer may need help in updating the IP configuration. If the IP Address is not 172.17.30.26 or the default gateway is wrong, try the **ipconfig /renew** command. If that does not work, return to the Desktop and select IP Configuration. From here switch to Static and back to DHCP. Your settings should match those above.

Task 8: Enable Wireless Security

Step 1. Reconnect to the router setup page (<http://172.17.30.1>).

Step 2. Navigate to the Wireless page and then select the Wireless Security tab.

Step 3. Under Security Mode, select WEP.

Step 4. Enter a WEP key.

A network is only as secure as its weakest point, and a wireless router is a very convenient place to start

if someone wants to damage your network. By requiring a WEP key to connect to the router, you are adding a level of security.

Unfortunately, there are tools that can crack WEP key encryption. A more robust form of wireless security is WPA and WPA-2, which are currently not supported by Packet Tracer.

Add the WEP key **1234567890**.

Step 5. Save your settings.

You will become disconnected from the network again after saving your settings.

Step 6. Configure PC6 to use WEP authentication.

- Return to the Desktop and click PC Wireless.
- Click on the **Connect** tab.
- From the list of available wireless networks, select **WRS3** and connect.
- A screen will be brought up asking for the WEP. Under WEP Key 1, type the WEP, **1234567890**.
- Click Link Information to verify connectivity to the access point.

Task 9: Managing and Securing the Web Utility of the Router

Step 1. Configure web access password.

Return to the web utility page of the router (<http://172.17.30.1>) and navigate to the Administration section. Change the router password to **cisco**. Notice how HTTP Web Utility Access is already selected by default. Leave it that way.

Step 2. Save settings.

Task 10: Configure WRS2

Step 1. Connect to WRS2 from PC3.

See Task 3 if you need help.

Step 2. Connect to the Web Utility through the Web Browser.

Access WRS2 through the default gateway, 192.168.2.1.

Step 3. Complete Internet and Network Setup.

- Assign a Static IP to the Internet interface. Use the addressing from the table at the beginning of the activity.
- Configure the Router IP with the LAN addressing from the table at the beginning of the activity.
- For DHCP Server settings, begin assigning IP Addresses at 172.17.40.22, for up to 25 users.
- Save settings.

Step 4. Renew IP Configuration for PC3.

The **ipconfig /renew** command does not properly renew the IP address from the new DHCP range. Go to IP Configuration on the Desktop and switch to Static then back to DHCP. Verify the new addressing with the **ipconfig** command.

PC>**ipconfig**

IP Address.....: 172.17.40.23

```
Subnet Mask.....: 255.255.255.0  
Default Gateway.....: 172.17.40.1
```

PC>

Step 5. Change SSID to WRS2.

Return to the Web Utility and change the SSID to WRS2 under the Wireless page. Be sure to click Save Settings.

Reconnect PC3 to WRS2. See Task 7, Step 3 for help.

Step 6. Configure WEP on WRS2 from Web Utility.

Set the WEP Key to **1234567890** and configure PC3 to use the WEP. See Task 8 for help.

Step 7. Configure web access password to cisco.

See Task 9 for help.

Task 11: Creating and Verifying Full Connectivity

Step 1. Give R1 static routes to the 172.17.30.0 and 172.17.40.0 networks.

These routes will allow R1 to ping the inside Wireless/LAN IP address on the wireless routers.

```
!  
ip route 172.17.30.0 255.255.255.0 172.17.99.35  
ip route 172.17.40.0 255.255.255.0 172.17.99.25  
!
```

Step 2. Verify connectivity.

Verify that R1 has routes to PC3 and PC6 with the **show ip route** command and R1 can ping the inside Wireless/LAN IP address of each wireless router.

Due to a PT bug, PC3 and PC6 will not be able to ping one another.

Task 12: Configuring Port Security

Step 1. Configure PC1 and PC2 port security.

Enable port security and enable dynamic sticky MAC addresses.

Step 2. Generate traffic across the ports by pinging PC2 from PC1.

Step 3. Verify port security.