


EN : Tutorial on opening root permissions

Introduction: Enabling root permissions is the first step to enter the background configuration of the machine.

1. Upgrade the firmware to V1.1.0.27 or a later version. The machine will automatically restart once the upgrade is successful.

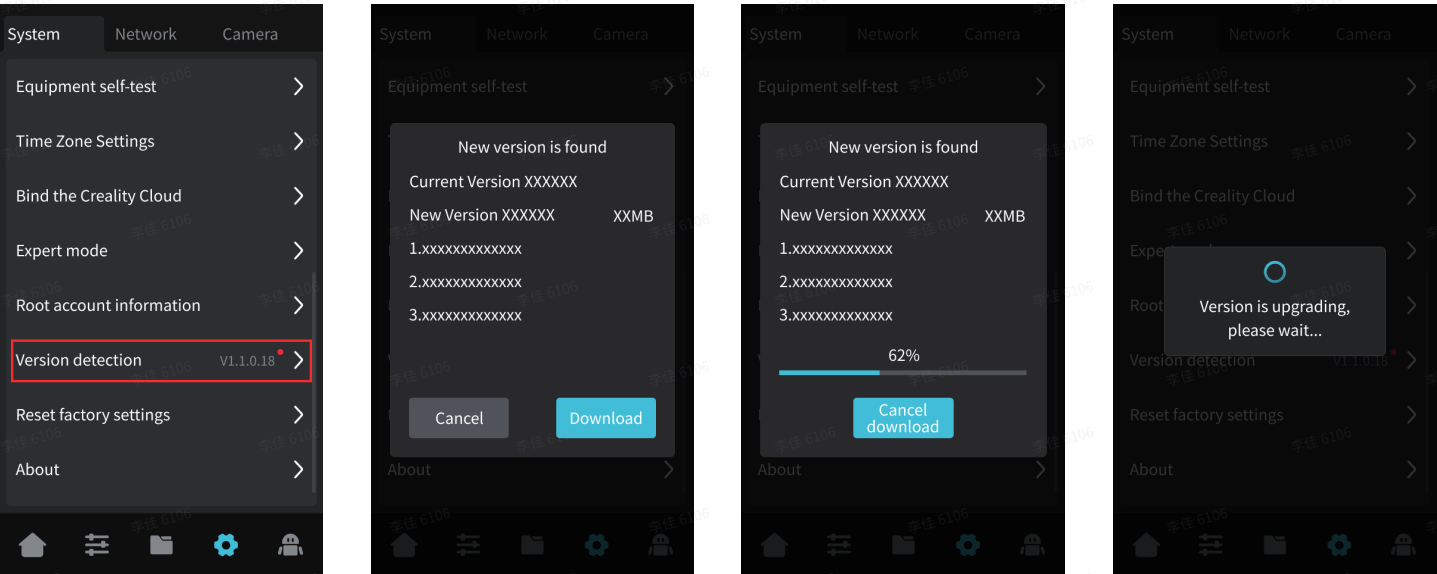

2. Enable root access

Note: If root access is required, you must agree to the disclaimer; otherwise, the machine will not start the SSH service.

Note: Root access may cause malfunctions in machine-related functions, please use with caution.

