

# FRONT WHEEL ALIGNMENT INSPECTION

## NOTICE:

After adjusting wheel alignment, perform the VGRS calibration.

## HINT:

- For the steering wheel off-center, perform the "steering off-center" (See page DI-419).
- Check that the "STRAIGHT ANG FLG" is "VALID" in the DATA LIST (See page DI-348 step 5.).

## 1. MEASURE VEHICLE HEIGHT

### Vehicle height EUROPE

Engine	Front	Rear
2UZ-FE	A – B: 75.0 mm (2.953 in.)	C – D: 40.0 mm (1.575 in.)
1HD-FT	A – B: 76.0 mm (2.992 in.)	C – D: 41.0 mm (1.614 in.)

### GENERAL

Engine	Front	Rear
2UZ-FE	A – B: 76.0 mm (2.992 in.)	C – D: 31.0 mm (1.220 in.)
1HD-T	A – B: 76.0 mm (2.992 in.)	C – D: 34.0 mm (1.339 in.)

### G.C.C.

Engine	Front	Rear
2UZ-FE	A – B: 72.0 mm (2.835 in.)	C – D: 53.0 mm (2.087 in.)
1FZ-FE	A – B: 71.0 mm (2.795 in.)	C – D: 64.0 mm (2.520 in.)

### AUSTRALIA

Front	A – B: 75.0 mm (2.953 in.)
Rear	C – D: 39.0 mm (1.535 in.)

### w/ AHC System

Front	A – B: 83.0 mm (3.268 in.)
Rear	C – D: 71.0 mm (2.795 in.)

Measuring points:

A: Ground clearance of spindle center

B: Ground clearance of lower suspension arm front bolt center


C: Ground clearance of rear axle shaft center


D: Ground clearance of lower control arm front bolt center

## NOTICE:

**Before inspecting the wheel alignment, adjust the vehicle height to the specification.**

If the vehicle height is not within the specification, try to adjust it by pushing down on or lifting the body.

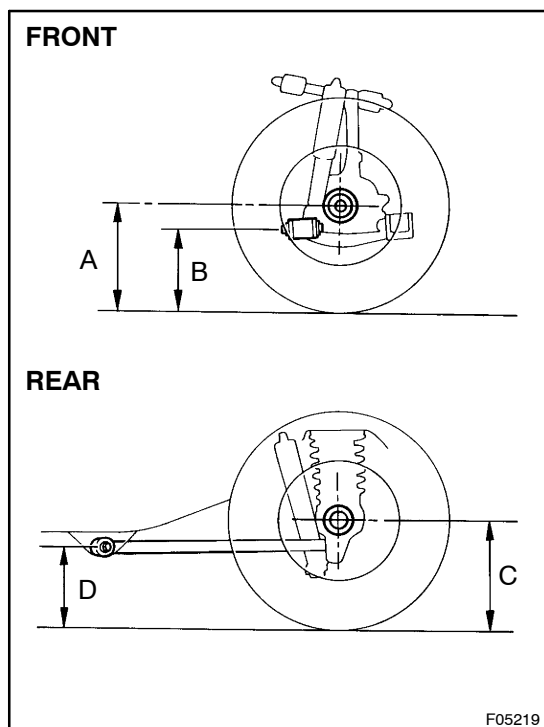

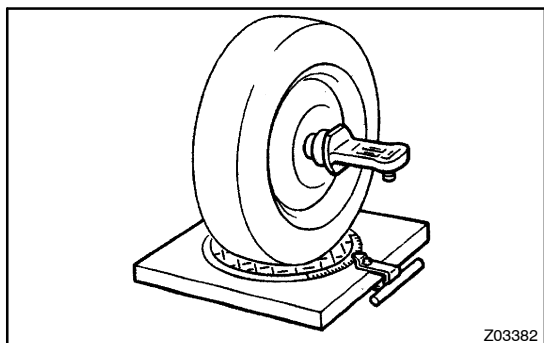

## 2. INSTALL CAMBER-CASTER-KINGPIN GAUGE OR POSITION VEHICLE ON WHEEL ALIGNMENT TESTER

Follow the specific instructions of the equipment manufacturer.

## 3. INSPECT CAMBER, CASTER AND STEERING AXIS INCLINATION EUROPE AND GENERAL (2UZ-FE)

Camber	$0^{\circ}05' \pm 45'$ ( $0.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$2^{\circ}10' \pm 45'$ ( $2.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}10' \pm 45'$ ( $12.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less

### GENERAL (1HD-T)

Camber	$0^{\circ}05' \pm 45'$ ( $0.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$2^{\circ}25' \pm 45'$ ( $2.42^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}10' \pm 45'$ ( $12.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less

### G.C.C. (2UZ-FE)

Camber	$0^{\circ}05' \pm 45'$ ( $0.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$2^{\circ}15' \pm 45'$ ( $2.25^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}10' \pm 45'$ ( $12.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less

### G.C.C. (1FZ-FE)

Camber	$0^{\circ}05' \pm 45'$ ( $0.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$2^{\circ}50' \pm 45'$ ( $2.83^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}10' \pm 45'$ ( $12.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less


### AUSTRALIA

Camber	$0^{\circ}05' \pm 45'$ ( $0.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$2^{\circ}10' \pm 45'$ ( $2.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}10' \pm 45'$ ( $12.17^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less

### w/ AHC System

Camber	$0^{\circ}00' \pm 45'$ ( $0^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Caster	$3^{\circ}05' \pm 45'$ ( $3.08^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less
Steering axis inclination	$12^{\circ}15' \pm 45'$ ( $12.25^{\circ} \pm 0.75^{\circ}$ )
Left-right error	30' ( $0.5^{\circ}$ ) or less

If the steering axis inclination is not within the specification, after the camber and caster have been correctly adjusted, recheck the steering knuckle front wheel for bearing or looseness.

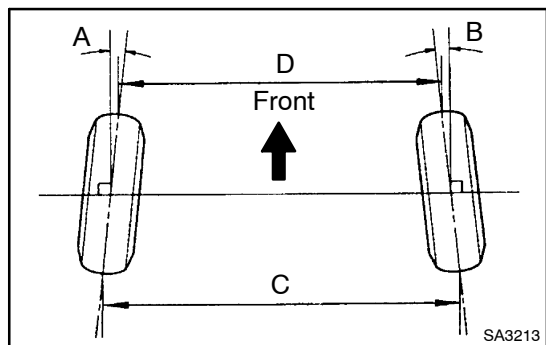

#### 4. INSPECT TOE-IN w/ AHC System

Toe-in (total)	A + B: $0^{\circ}00' \pm 12'$ ( $0^{\circ} \pm 0.2^{\circ}$ ) C - D: $0 \pm 2$ mm ( $0 \pm 0.08$ in.)
-------------------	--

#### OTHERS

Toe-in (total)	A + B: $0^{\circ}06' \pm 12'$ ( $0.1^{\circ} \pm 0.2^{\circ}$ ) C - D: $1 \pm 2$ mm ( $0.04 \pm 0.08$ in.)
-------------------	---

If the toe-in is not within the specification, adjust the rack ends.

#### 5. ADJUST CAMBER AND CASTER


##### NOTICE:

**After the camber has been adjusted, inspect the toe-in.**

- Loosen the front and/or rear adjusting cam nuts.
- Adjust the camber and caster by front and/or rear adjusting cams.


HINT:

Try to adjust the camber and caster to the center value.

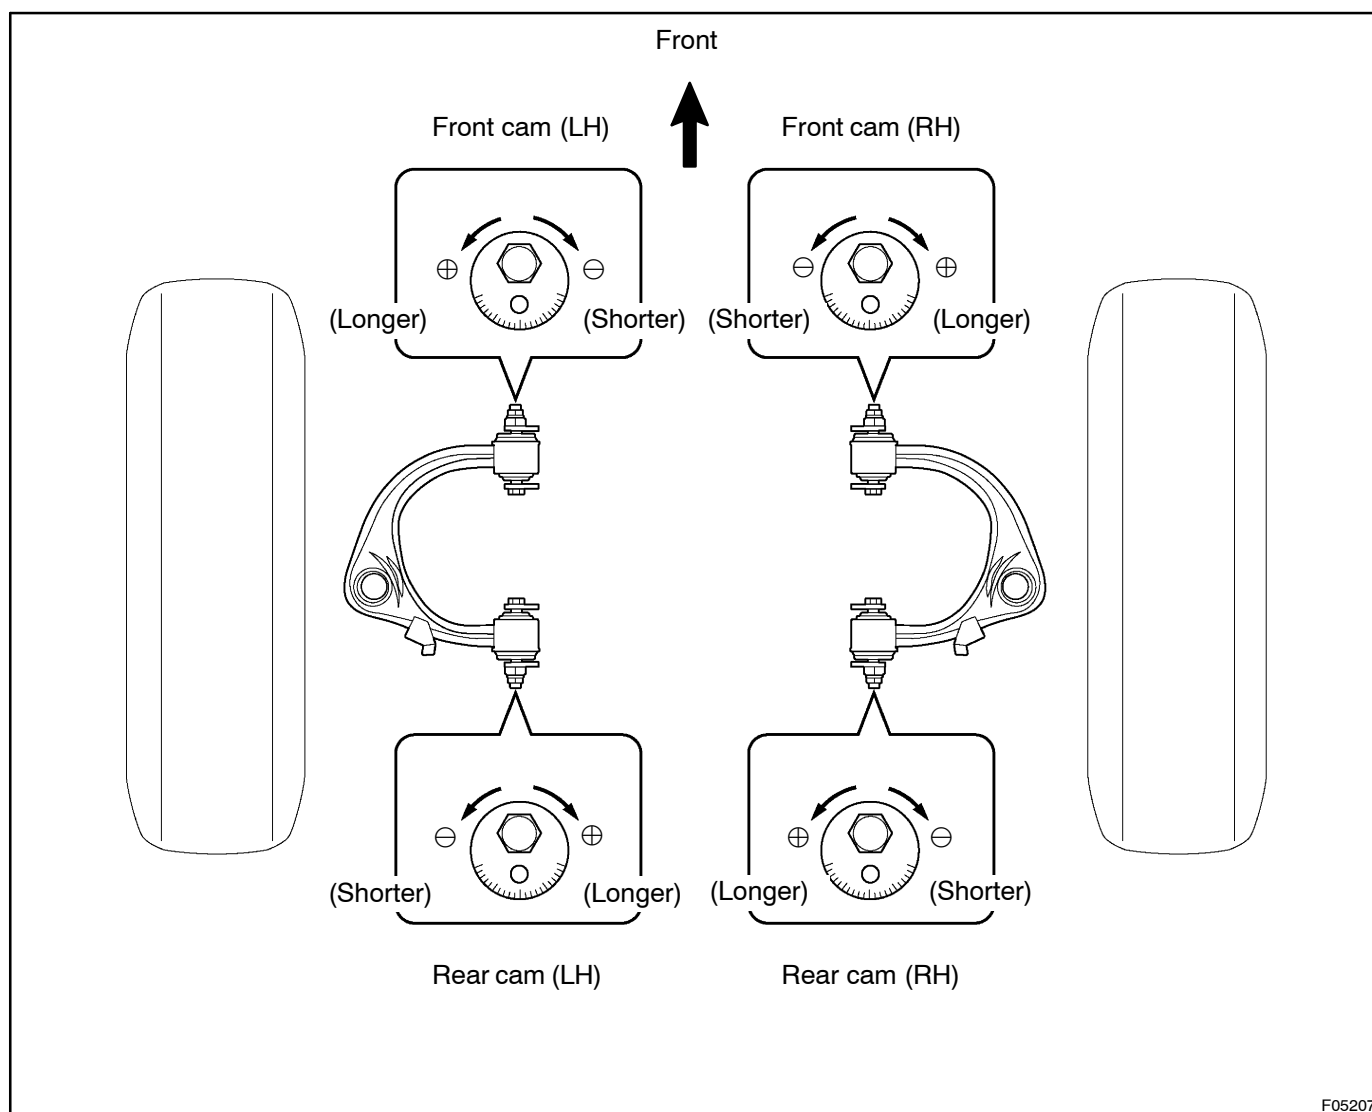

**(Example)**

——— Camber  
 - - - - - Caster  
 ○ = Calculated value  
 ● = 0 point

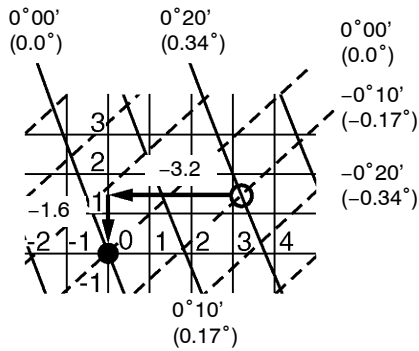

F05095

(c) How to read adjustment chart (using examples).

(1) Measure the present alignment.

**Camber:  $-0^{\circ}20'$  ( $-0.33^{\circ}$ )**

**Caster:  $3^{\circ}15'$  ( $3.25^{\circ}$ )**

(2) Mark the difference between the standard value (A) and the measured value (B) on the adjustment chart.

**Standard value:**

**Camber:  $0^{\circ}00'$  ( $0^{\circ}$ )**

**Caster:  $3^{\circ}05'$  ( $3.08^{\circ}$ )**

**Formula:  $A - B = C$**


**Camber:  $0^{\circ}00' - (-0^{\circ}20') = 0^{\circ}20'$**

**Caster:  $3^{\circ}05' - 3^{\circ}15' = -0^{\circ}10'$**

(3) As shown in the chart, read the distance from the marked point to 0 point, and adjust the front and/or rear adjusting cams accordingly.


**Front cam: - (Shorter) 1.6**

**Rear cam: - (Shorter) 3.2**

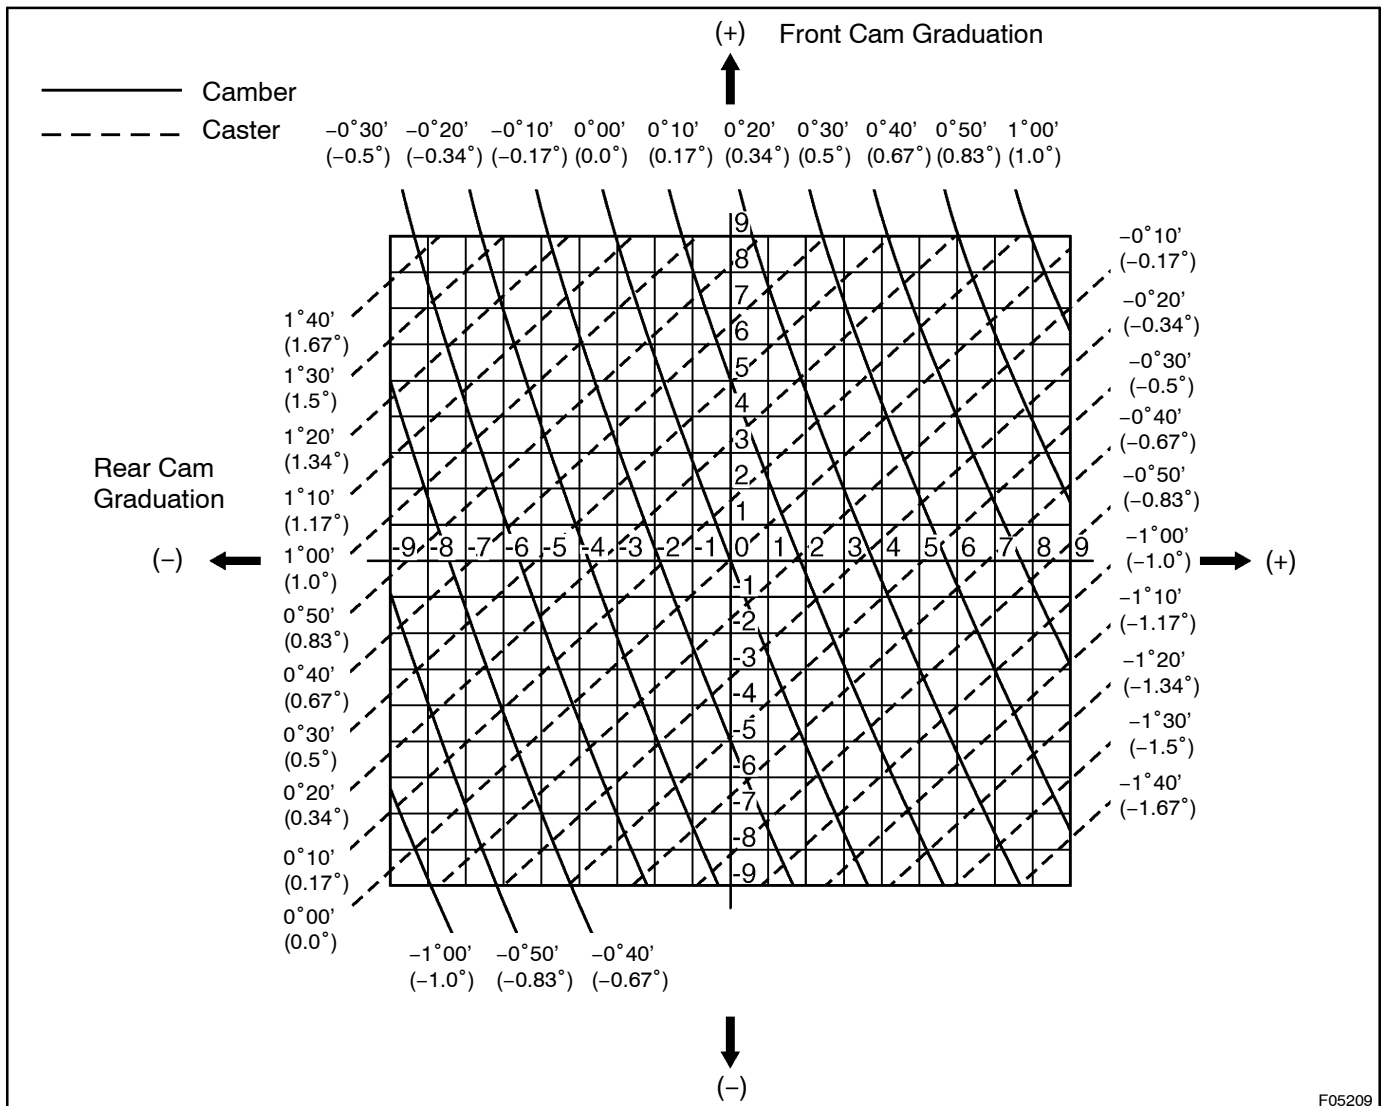

F05209

- (d) Torque the front and/or rear adjusting cam nuts.  
**Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)**

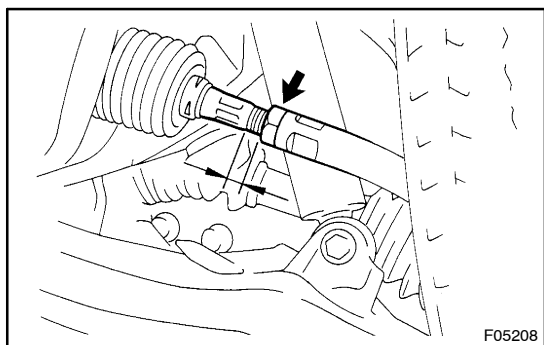

## 6. ADJUST TOE-IN

### NOTICE:

After adjusting wheel alignment perform the VGRS calibration.

- (a) Check or adjust the lengths of the rack ends, then adjust the toe-in.

**Rack end length difference: 3.0 mm (0.118 in.) or less**

- (b) Remove the boot clamps.  
 (c) Loosen the tie rod lock nuts.  
 (d) Turn the left and right rack ends an equal amount to adjust the toe-in.

### HINT:


Try to adjust the toe-in to the center value.

- (e) Tighten the tie rod lock nuts.  
 (f) Place the boot on the seat and clamp it.

### HINT:

Make sure that the boots are not twisted.

- (g) Perform the VGRS system calibration (See page DI-357).

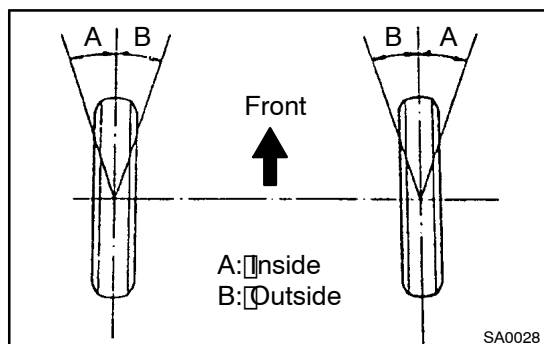


## 7. INSPECT AND ADJUST WHEEL ANGLE

- (a) Turn the steering wheel fully, and measure the turning angle.

Inside wheel	36° 42' (33° 42' - 36° 42') 36.7° (33.7° - 36.7°)
Reference: Outside wheel	32° 36' 32.6°

If the wheel angles differ from the standard of the specification, inspect the toe-in.

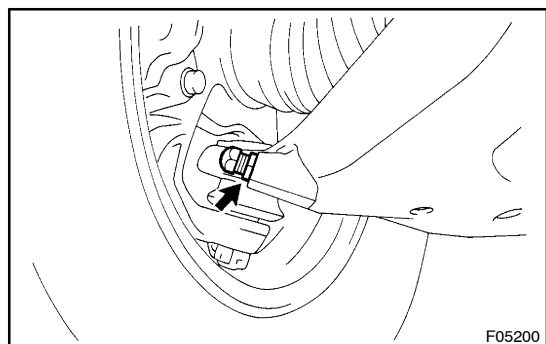

- (b) When toe-in is normal after inspection, adjust wheel angle with the knuckle stopper bolt of the lower suspension arm.

**Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)**