

# **Getting Started with OMV**

## **Addendum B:**

### **Installing OMV5**

### **On a Raspberry PI**



June 5th, 2020 – (rev 1.7)

# Table of Contents

1	Introduction	3
	About this Guide.....	3
2	Supported Devices	3
3	Not Supported	3
	Legacy Raspberry PI's.....	3
4	Prerequisites	4
5	Working With The Image File	5
	Verify the Archive file .....	5
	Decompress the Image.....	6
	Format and Test Flash Media.....	7
	Flashing Raspbian Buster Lite onto an SD-card.....	10
6	Enabling Raspbian's SSH Server for Remote Access	11
7	The First Boot	13
8	Raspbian - First Time Logon	14
	Raspbian Updates and Upgrades.....	15
9	Install OMV	16
10	First Time GUI Logon	17
	**R-PI 3 Users Only** .....	17
11	Finishing Up:	17
12	Final Notes	18
	R-PI 3 Boards.....	18

June 5th, 2020 (rev 1.7) Note added for R-PI3.

# Introduction

Installing OMV5 on Raspbian Lite, using a scripted install, is a relatively easy task. This document is a guide for that purpose.

## About this Guide

The purpose and intent of this guide is to provide a walk-through to get Raspberry Pi users (R-PI) up and running as quickly and as easily as possible. This guide assumes that users have a working Windows Client for installing and executing the needed utilities. It is also assumed that Mac and Linux desktop users will be able to find, install, and use utilities equivalent to those called out in [Prerequisites](#).

- This guide contains links to external sources of information and software. It's best used on an Internet connected PC.
  - This is a community document and a work in progress. Input and feedback are welcome and can be sent to: [omvguide@gmail.com](mailto:omvguide@gmail.com)
- 

## Supported Devices

OMV5 will install on R-PI models 2B and higher. In practical terms, the performance of the model 2B is marginal.

## Not Supported

### *Legacy Raspberry PI's*

R-PI models earlier than the 2B and the R-PI Zero have **not** been tested and are **not** supported. They are far too slow to run a NAS application. Please do not post on OMV's forum, expecting support for these models.

(Continued)

## Prerequisites

This installation process requires a wired Ethernet connection and Internet access.

Typically, all that is needed to begin the installation is an Ethernet cable, an R-Pi, a power supply sufficient for the R-Pi model being used, and one SD-card (two are preferred for backup).

To get started, a few utilities are needed to check, expand, and work with the Raspbian image.

- Raspbian images are compressed with a .zip extension. Users will need a utility like [7-Zip](#) to decompress the image. 7-Zip is installable on a Windows client.
- To check the decompressed image, an [MD5 – SHA Checksum utility](#) is needed. This utility is portable, meaning it's not necessary to install it, but it may require support files. Simply run the executable.
- [SDformatter](#) is a utility for formatting SD-cards, that does a [trim](#) operation on flash media to clear remnants of old files. SDformatter is installable on a Windows client.
- [h2testw\\_1.4](#) is a flash media test program. With a freshly formatted SD-card or USB thumbdrive, it writes files with known content and verifies that content in a read operation, detecting errors in the process. [h2testw\\_1.4](#) downloads as a zip file. By right clicking on the zip file, and using “Extract All”, 7-Zip will expand the zip file to a folder named [h2testw\\_1.4](#). The executable inside this folder is a portable application. Run the executable.
- To burn a Raspbian image to an SD-card, [Etcher](#) is recommended. (It burns the image and verifies it in one process.) Etcher is a portable app. Run the executable.
- [PuTTY](#) is an SSH client that will allow users to connect to their SBC, from a Windows client, and get on the command line. PuTTY is installable.
- While 8GB is the minimum and will work fine, a 16GB card will provide longer life in the role of a boot drive. Users are encouraged to get two SD-cards. One is for the installation and the second is for backing up the OS installation when configuration is complete.  
For the best experience, use only quality new SD-cards such as Samsung or SanDisk, that are rated A1, Class 10.



- **\*\*Important\*\***  
When selecting a Raspbian Image, for best possible compatibility with OMV5, don't use an image with a desktop.  
On the [Raspbian download page](#), scroll down to bottom, select and download the **Raspbian Buster Lite** image.

Per the download page, the SHA-256 hash for this version of **Buster Lite** was:

**9e5cf24ce483bb96e7736ea75ca422e3560e7b455eee63dd28f66fa1825db70e**

(\*\* The hash number will change with the image, as images are updated. \*\*) Make a note of the hash number found, or bookmark the download web page for reference. This will be used later.

# Working With The Image File

## Verify the Archive file

After downloading the Buster Lite archive, MD5 and SHA hashes check for file corruption that may have occurred during the download.

The Raspberry PI project provides a **SHA-256** hash check number for the downloaded Zip archive file.


### **\*\*Beginners Note\*\***

**DO NOT SKIP THIS STEP.** The chance of corruption is highest when downloading and it's pointless to build a server with flawed software. Even the slightest amount of corruption may ruin your installation and the effects may not be noticed until well after your server is built and in use. Headaches can be avoided by checking the zip archive.

---

Verify the downloaded Zip file with the [MD5 & SHA checksum utility](#).

(Note that it's possible to “drag and drop” the file name into the utility, on the **File** line. Otherwise, use the **Browse** button and navigate to the compressed image file.)

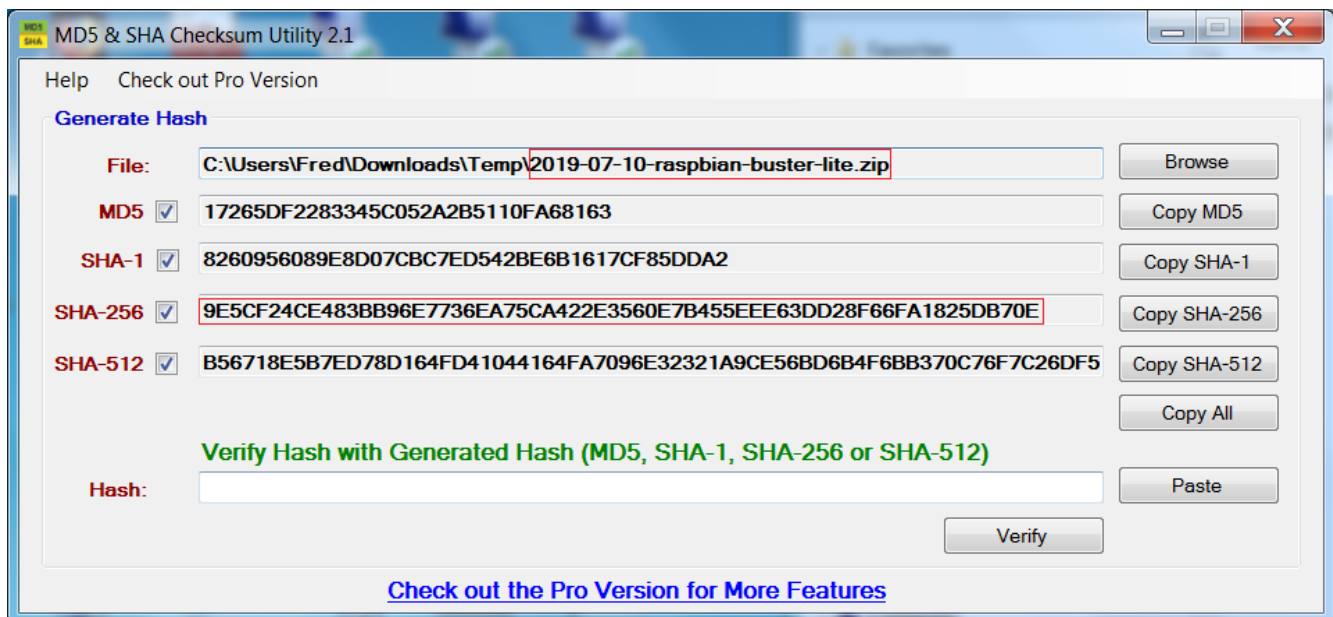

With the previously noted down SHA-256 hash, or by referencing the [Raspbian Web page](#), compare the utility's result with the SHA-256 hash provided on the download page.

In this specific case it's: **9e5cf24ce483bb96e7736ea75ca422e3560e7b455eee63dd28f66fa1825db70e**

With a SHA-256 match, the downloaded file is verified.

## Decompress the Image

Raspbian images are compressed and will need to be extracted with 7-Zip. (The following process assumes 7-Zip has been installed.) Highlight the compressed file, right click the mouse, and make the menu selections shown below.



The result of the above action is the extraction of an uncompressed folder, with the image file inside. Open that folder. The image file's extension is **.img**



## ***Format and Test Flash Media***

Using [SDFormatter](#), do a clean format on the new SD-card:

(Note that SDFormatter does a trim operation on the card which cleans up remnants of deleted or previously existing files.)

In most cases, SDFormatter will detect the SD-card or thumb-drive. A volume label is not necessary, at this point, and the default options are fine.



After the SD-card format is completed, open **h2testw** and select your language.

Then, click on **Select target**



Under **Computer**, select the flash media previously formatted.





Select **Write+Verify**. (**DO NOT** check the **endless verify** box)



A dialog similar to the following may pop up, showing a 1MB difference. Ignore it and click on **OK**.



**“Without errors”** is the desired outcome. If the media tests with errors or is much smaller than is indicated by the SD-card's labeled size, don't use it.



After H2testw verifies the SD-card; **do one more clean format**, using **SDFormatter**, before flashing the card. While optional, at this point, a volume label could be applied.

## Flashing Raspbian Buster Lite onto an SD-card

### Start Etcher:

Etcher, in most cases, will auto detect the SD-card or a USB thumb-drive. Click on “**Select Image**” and navigate to the decompressed Raspbian image. Then click on **Flash!**

- A windows confirmation dialog may pop up. (Click on **OK**.)
- Etcher will write the image, then verify it in one operation.



A “**Success**” flag will pop up when the job is finished and the Etcher window will display “Flash Another?”. The flash operation is complete. (For the moment, leave the SD-card connected to the PC.)

(Continued)

# Enabling Raspbian's SSH Server for Remote Access

Raspbian is designed to have its configuration finalized with a monitor and keyboard attached. There's no need for a monitor and keyboard to support an OMV installation. OMV was designed, from the ground up, to run as a headless server.

For the sake of convenience, Raspbian can be configured to enable its SSH server on first boot, so the server can be accessed remotely with PuTTY. The following will enable SSH access.

---

**\*\*To insure the file system on the Raspbian flashed card is recognized, unplug the SD-card for a few moments and plug it back into the PC used to flash the SD-Card.\*\***

- Open a file manager window, displaying the file contents of the of the SD-card.
- Right click in the files side (right window) and select, **New**, and **Text Document**.




A file is created. Name the file **ssh** with no extension.



Confirm, as shown, that the file **SSH** has no extension. (This will mean removing **.txt** from the file name.)

The following warning may pop up, regarding a file without an extension.

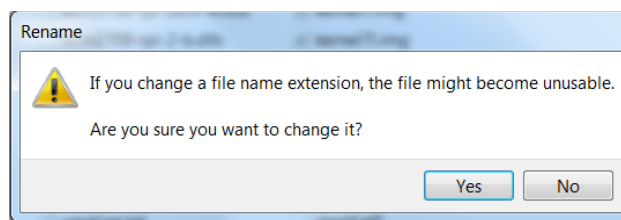

Ignore it and select “Yes”.

## The First Boot

**\*\*At this point, to connect to the SBC with PuTTY and to install OMV in a later process, a wired Ethernet connection is required.\*\***

- Insert the SD-card, with the Raspbian image, into the R-PI and apply power.
- Wait 3 to 5 minutes.

The IP address to use for logging into the console is available from your DHCP server. In most cases, the DHCP server will be running on the users LAN router. Log into your router and look for the IP address associated with your R-PI.

(The following is an example.)

DHCP Clients				
Hostname	IP Address	MAC Address	Client Lease Time	Delete
raspberry	192.168.1.71	B8:27:EB:58:92:49	0 days 00:02:00	
hotrod	192.168.1.94	10:7B:44:7B:CA:C9	0 days 00:02:00	

With the IP address noted, proceed to **First Time Login**.

---

**\*\*If there's a problem with obtaining a DHCP assigned IP address:\*\***

- In the event that an IP address is not issued to your SBC, check the wired Ethernet connection and reboot the device. This will mean unplugging and plugging the power supply back in. Allow time for boot up (5 minutes or so) and check the DHCP server again.
- If an address is not issued, or if the user doesn't know how to find the Raspberry Pi's IP address on their DHCP server:  
Connect a monitor and a USB keyboard to watch the boot process until it completes. If the IP address is not displayed at the end of the boot cycle, login with the user **pi** using the password **raspberry**.  
Once logged in, type **ip add** on the command line. Note the IP address of the Ethernet interface, in the output, and proceed to **First Time Login**.

(To be able to utilize Copy + Paste; working with the R-PI using SSH as detailed in **First Time Login**, is highly recommended.)

# Raspbian - First Time Logon

Open PuTTY and type in the IP address as previously found.



A PuTTY Security Alert will pop up in a first time connection.  
This is normal. Ignore it and select **Yes**.

## When the SSH window opens:

Login as: **pi** The Raspbian default password is: **raspberry**



```
pi@raspberrypi: ~
login as: pi
pi@192.168.1.71's password:
Linux raspberrypi 4.19.57-v7+ #1244 SMP Thu Jul 4 18:45:25 BST 2019 armv7l

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Mon Sep 30 00:36:58 2019 from 192.168.1.94
\
SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set
a new password.

pi@raspberrypi:~ $
```

After logging in with the default password, it's strongly recommended that the password for the **pi** user be changed.

On the command line, type;  
**passwd**

Re-enter the current password **raspberry**, then follow the prompts to enter and confirm a new password for the **pi** user password. (Remember this password.)

---

## ***Raspbian Updates and Upgrades***

Before installing OMV, update and upgrade Raspbian using the following two commands, executed one at a time:

**sudo apt-get update**

**sudo apt-get upgrade -y**

(\*\*If the upgrade halts, with a prompt to read, press **q** to “quit” and the upgrade will proceed.\*\*)

When updates and upgrades are complete, type **sudo reboot** on the command line.

PuTTY will disconnect – this is expected. Wait 3 to 5 minutes and reopen a new PuTTY SSH window and log in.

**\*\* In the event that the SSH client does not respond to the IP address used for the Raspbian installation, look at your DHCP server to see if a “new” IP address has been assigned.\*\***

## Install OMV

Installing OMV on Raspberry's is very easy, thanks to **Ryecoaaron** for providing a comprehensive installation script that's executed from a single line.

Copy the following line complete (**Ctrl+C**) and paste it into PuTTY's SSH window, with a right mouse click. Then hit **Enter**.

```
wget -O - https://github.com/OpenMediaVault-Plugin-Developers/installScript/raw/master/install | sudo bash
```

Once the script is running, click out of the SSH window so the script will not be interrupted. Depending on several factors, running this script will take approximately 30 minutes.

When the script is complete, the R-PI will automatically reboot.

---

(Continued)



## First Time GUI Logon

After 3 to 5 minutes, OMV can be logged into using the same IP address that was used for the SSH client, entered in a web browser address bar. The web GUI user is **admin** and the default password is **openmediavault**

### **\*\*Note\*\***

After the completion of the script:

In the event that the OMV console or SSH client does not respond to the IP address used during the installation, look at your DHCP server to see if a “new” IP address has been assigned.

((Typically, consumer router DHCP leases last 24 hours. In cases where DHCP leases are very short - as it is with some versions of DD-WRT router firmware [10 minutes] - the lease issued to the SBC may time out at the end of the installation. A different address may be issued on reboot.))

---

### ***\*\*R-Pi 3 Users Only\*\****

See the remarks under [Final Notes](#).

---

## Finishing Up:

New users can continue with the setup of OMV using the [Getting Started with Openmediavault 5](#) guide , starting in the section titled **OMV - Initial Configuration**.

All users are encouraged to review the section titled **Operating System Backup** for an easy process to clone your Raspberry PI's SD-Card.

## Donate

Openmediavault on Raspberry PI's is the project of OMVextras.org

In addition to enabling the installation of OMV on R-PI's, OMV-extras.org develops plugin's for OMV that make Portainer (Docker) and other extensions available for your R-PI possible.

Please consider a modest donation to support continuing development and to help offset some of the Developer's costs. [OMV-extras.org](#)

# Final Notes


## R-PI 3 Boards

There's a networking issue affecting R-PI 3 boards that causes a mac address network error.

The work around is as follows:

Under **System**, **Network**, in the **Interfaces** tab, select the **eth0** line, and click on **Delete**.

**\*\*The yellow confirmation banner will come up. Do Not click Apply.\*\***

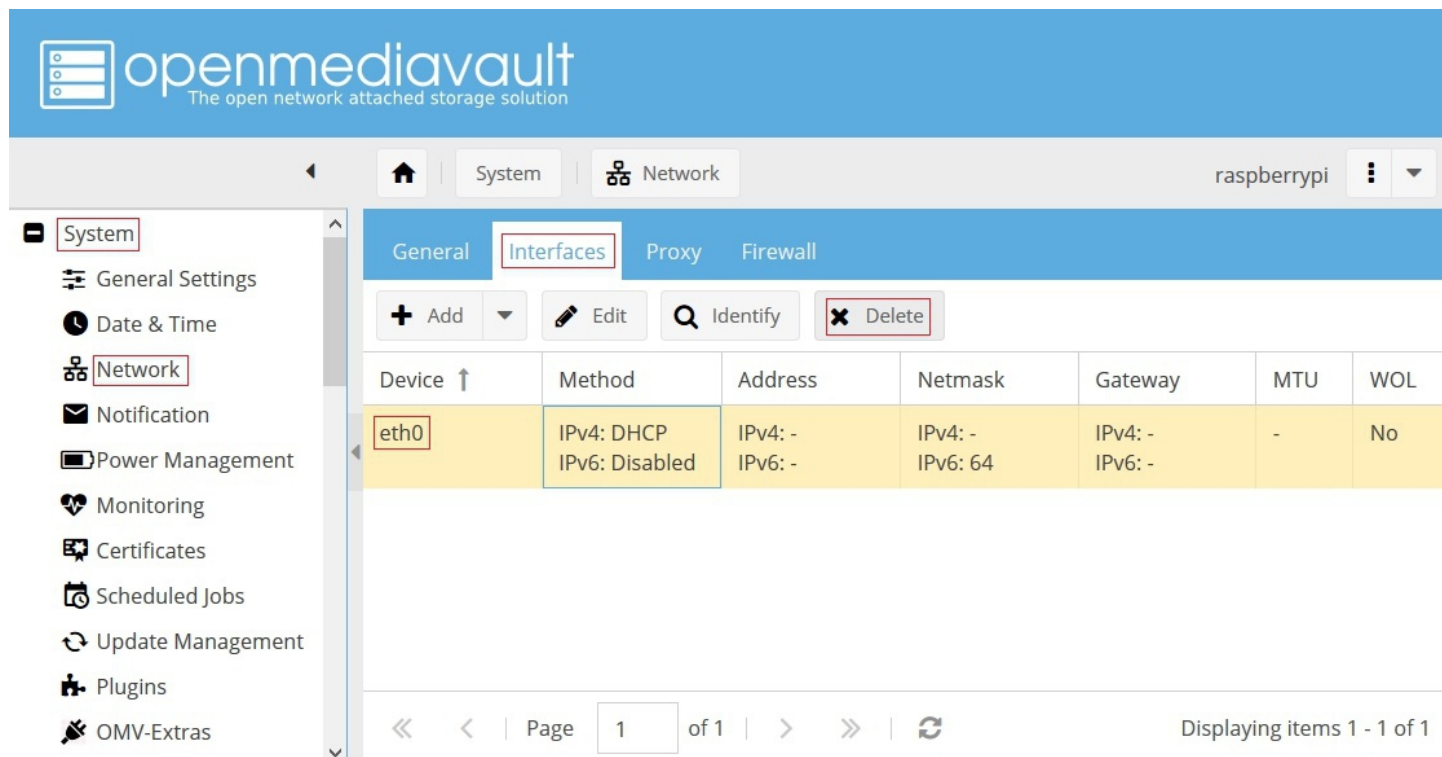


The screenshot shows the OpenMediaVault web interface. The top navigation bar includes 'System' and 'Network' tabs. The left sidebar lists various system settings, with 'Network' highlighted. The main content area is titled 'Interfaces' and contains a table of network interfaces. The 'eth0' interface is selected, and the 'Delete' button is highlighted. The table shows the following details for 'eth0':


Device	Method	Address	Netmask	Gateway	MTU	WOL
eth0	IPv4: DHCP IPv6: Disabled	IPv4: - IPv6: -	IPv4: - IPv6: 64	IPv4: - IPv6: -	-	No

At the bottom of the interface, there is a pagination bar showing 'Page 1 of 1' and a status message 'Displaying items 1 - 1 of 1'.

In the **Interfaces** Tab, select **Add** and **Ethernet**.

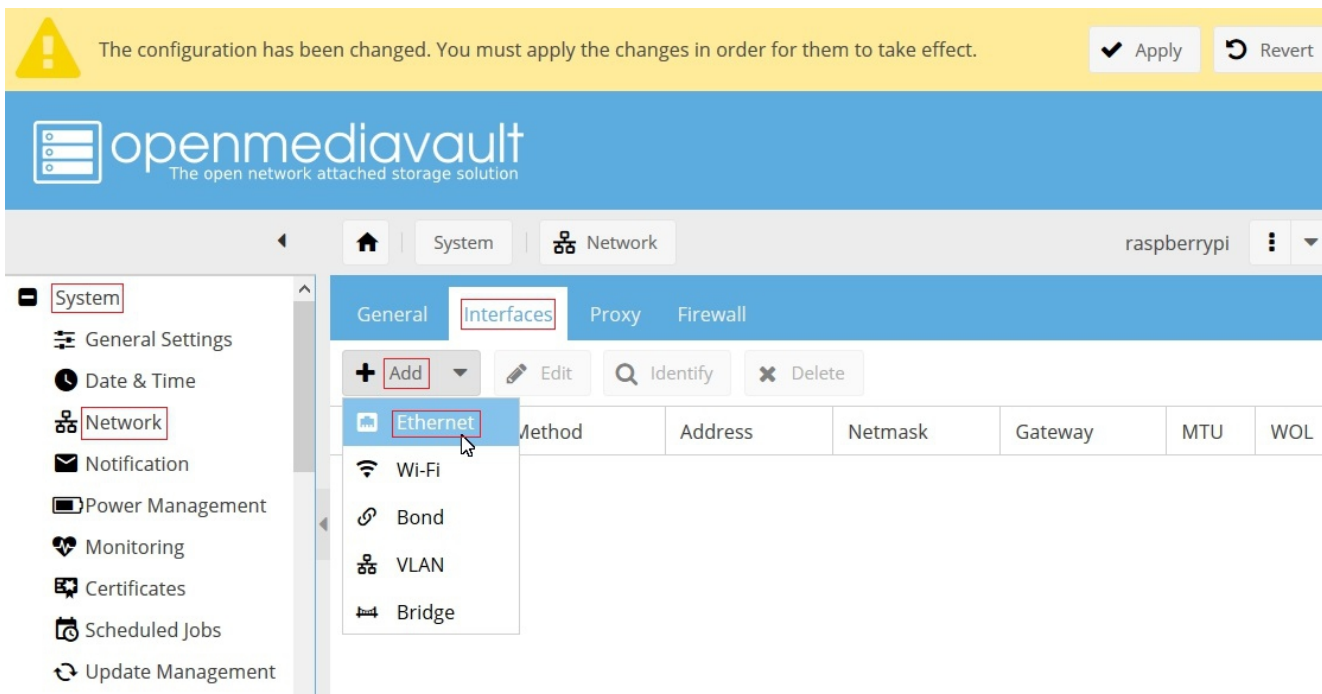

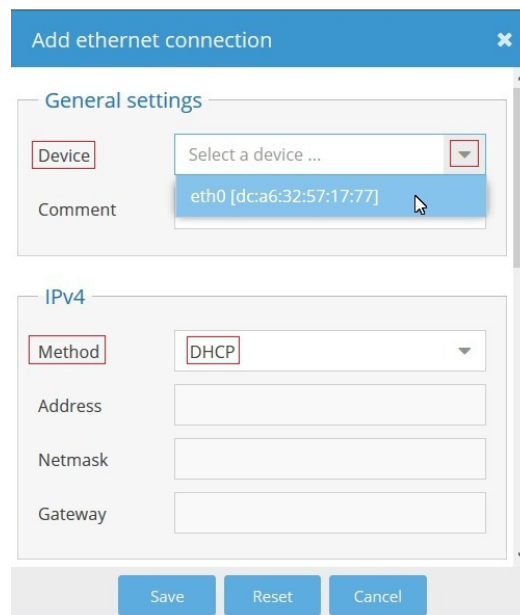

When the Add Ethernet Connection dialog pops up, under **Device**, click the pop down arrow and select **eth0**. Under **Method**, click the pop down arrow and select **DHCP**.



Then click **Save**.

Finally click on **Apply**.

 The configuration has been changed. You must apply the changes in order for them to take effect.

 **openmediavault**  
The open network attached storage solution

System | Network

raspberrypi

System

- General Settings
- Date & Time
- Network
- Notification
- Power Management
- Monitoring
- Certificates
- Scheduled Jobs
- Update Management

General | Interfaces | Proxy | Firewall

+ Add

Edit

Identify

Delete

Device ↑	Method	Address	Netmask	Gateway	MTU	WOL
eth0	IPv4: DHCP IPv6: Disabled	IPv4: - IPv6: -	IPv4: - IPv6: 64	IPv4: - IPv6: -	-	No

Done.