

Welcome to GeoBot!

Choose your settings:

There are currently two different modes available in GeoBot: **autopilot** and **manual** mode.

Manual mode

Manual mode means that you will be controlling the car yourself using a steering wheel. The car will move once you start increasing the speed. To do that, use the plus button in the center of the steering wheel:



If you want to go slower, use the minus button:



To change the direction of the car, use the triangular direction buttons on the steering wheel:



Hit brake if you want to stop:

Brake!

Autopilot mode

For autopilot mode, start by hitting the plus button to get up to speed. Then, just let the car do all the work for you. The car automatically avoids obstacles in any mode and tells you how close you are to an obstacle. Hit the brake button if you want the car to stop.

That's all for now, but mapping features are coming soon. Stay tuned!