
 


GPIO


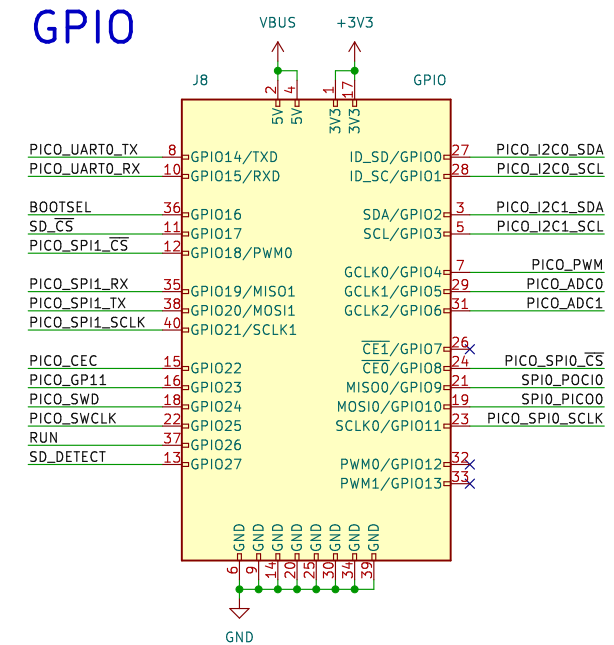


SPIO Role




These jumpers swap SPIO TX/RX to select between controller and peripheral roles.

Power

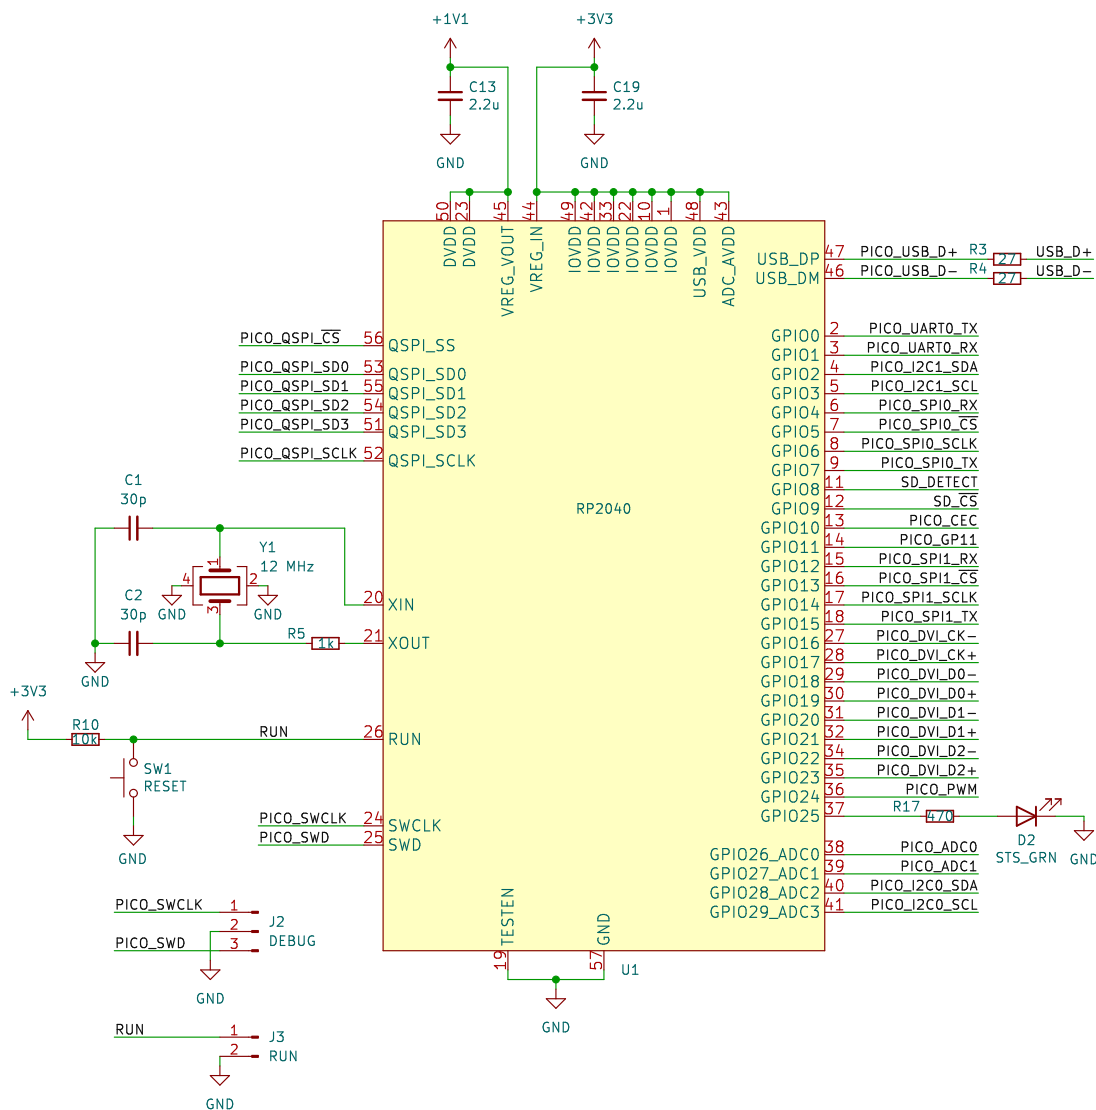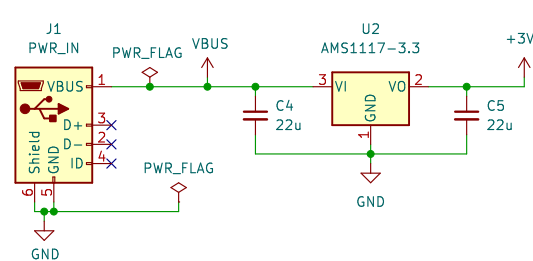


DVI Display

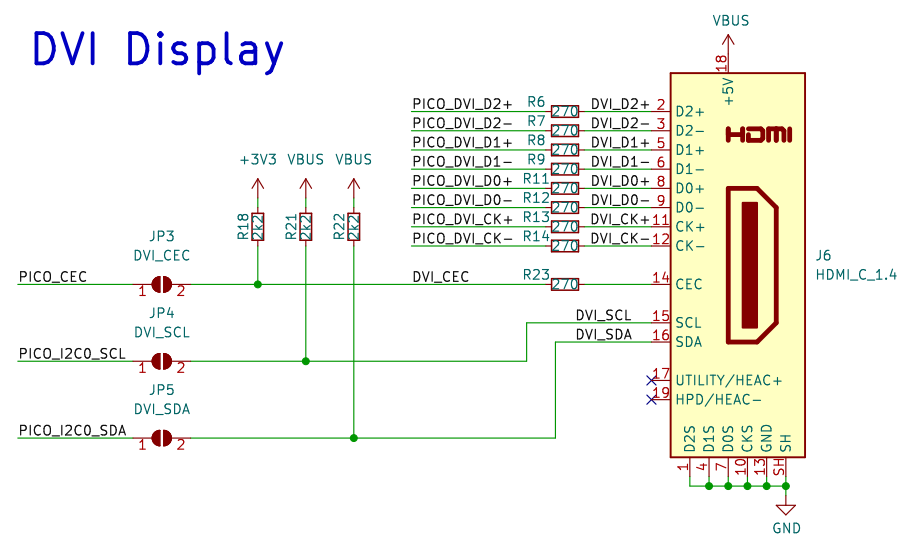


DANGER: Closing JP4 and JP5 connects 5V pullups on pins 27 and 28 of the GPIO header. Only do this if you know what you're doing!

Micro SD

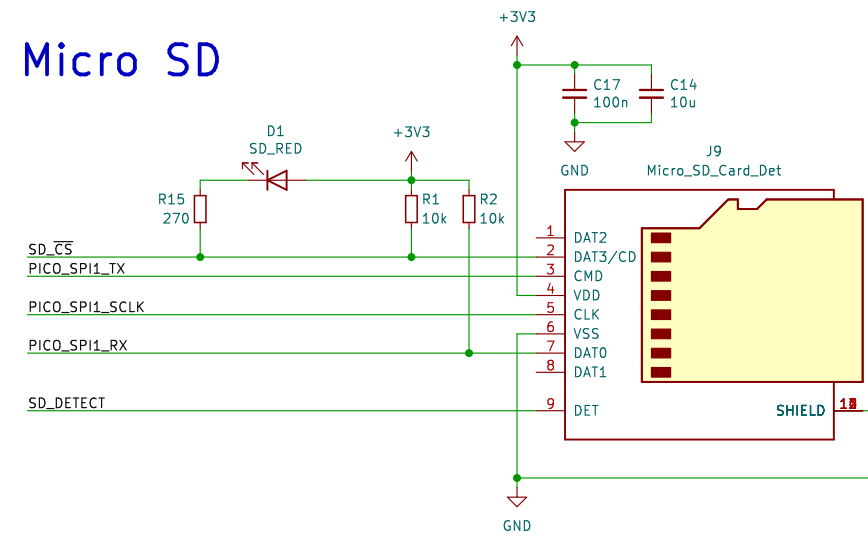

Flash

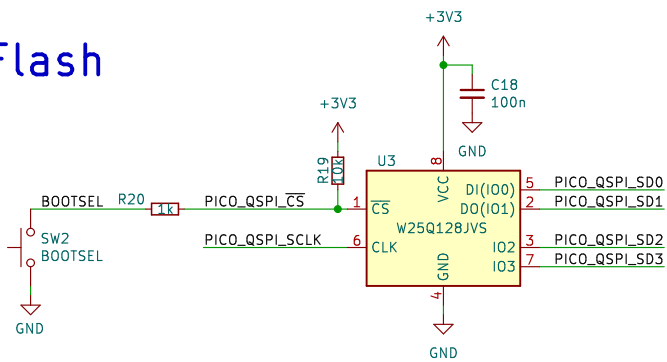

USB

