
 



GPIO

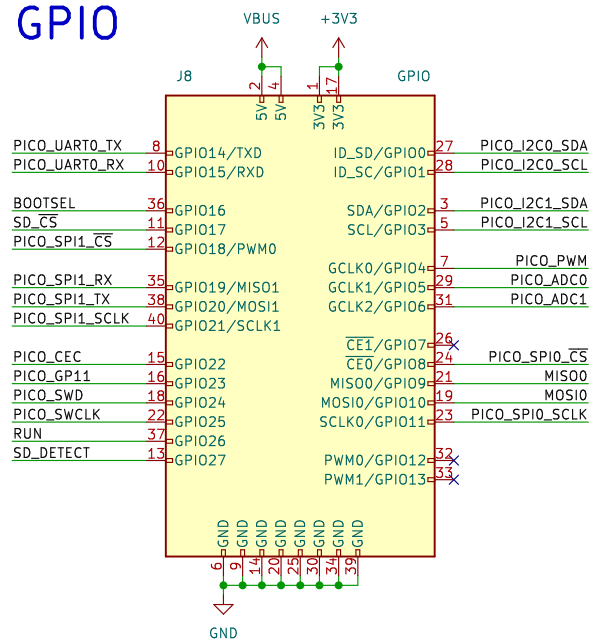



SPIO Role




These jumpers swap SPI0 TX/RX to select between controller and peripheral roles.

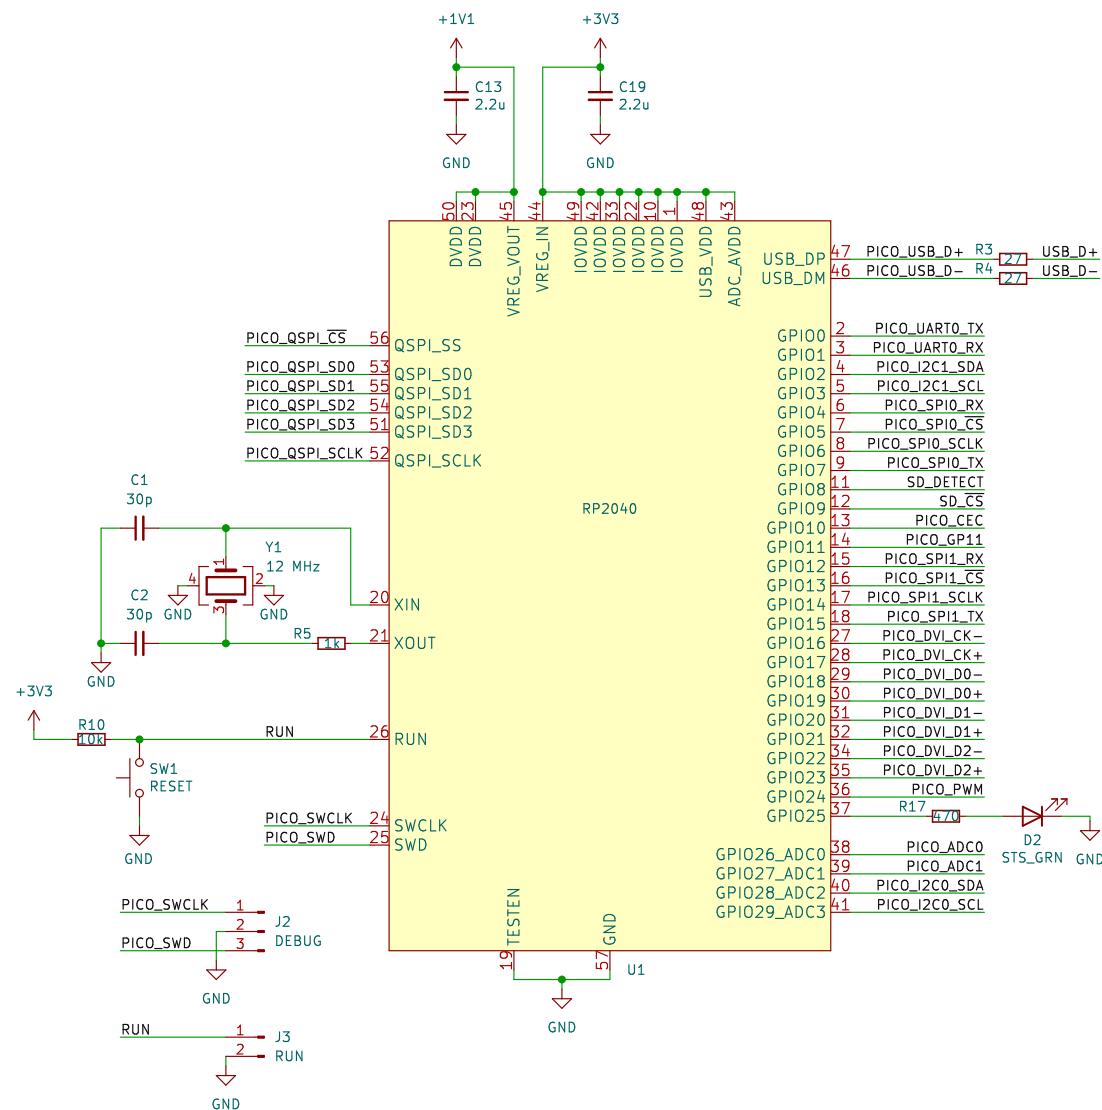


Power

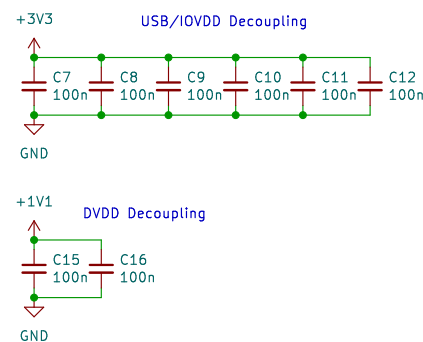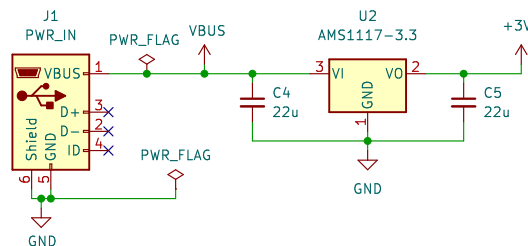

USB

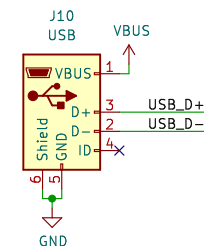


DVI Display

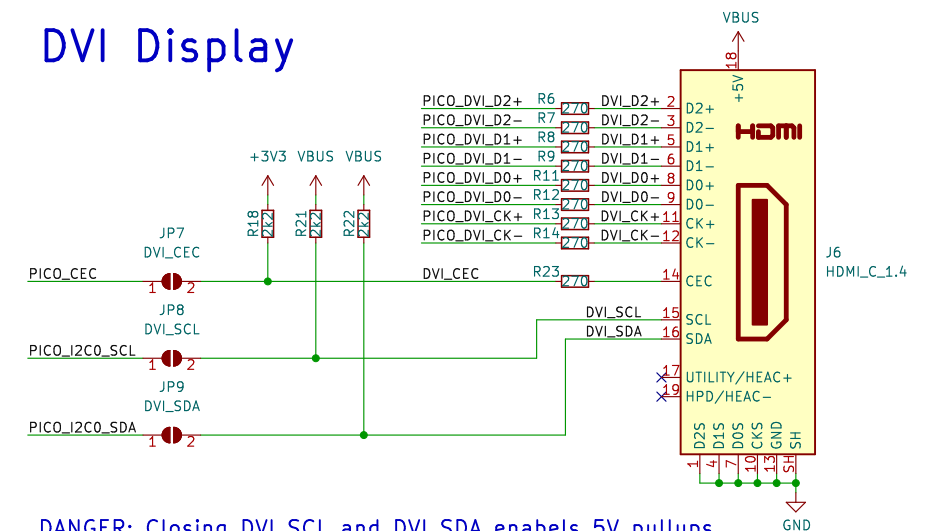

DANGER: Closing DVI_SCL and DVI_SDA enables 5V pullups on pins 27 and 28 of the GPIO header. Only do this if you know what you're doing!

Micro SD

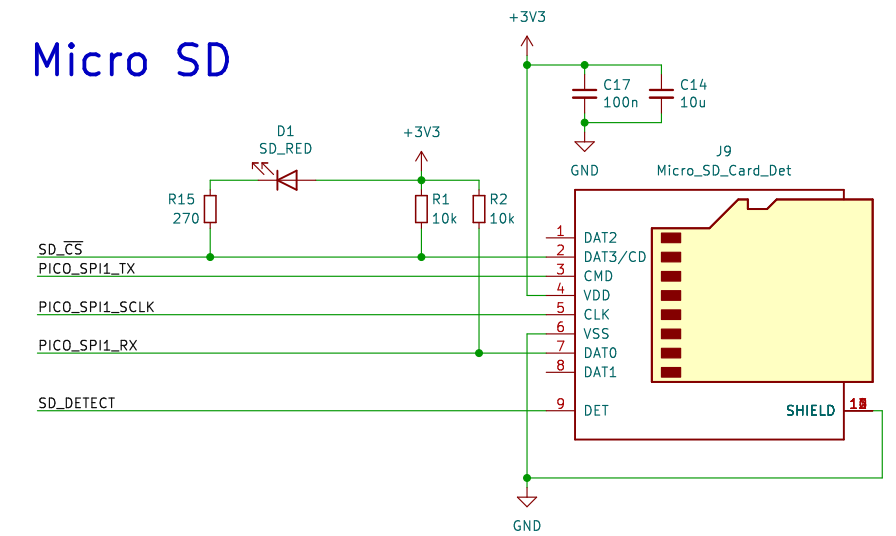

Flash

