

# Atari Jaguar Controller

== AT POWER UP ==

OPTION + UP → 0mega Booster (2600)  
OPTION + LEFT → 7800 Proline  
OPTION + DOWN → 7800 Joy2B+

## TRIGGER ACTION



MODE	C	B	A
2600 Omega Booster	Thumb (hi)	Trigger (hi)	Fire (low)
7800 Proline	Button 1 (hi)	Button 2 (hi)	Buttons 1+2
7800 Joy2B+	Button 1 (low)	Button 2 (low)	Fire (low)

# SNES Controller

== AT POWER UP ==


OPTION + UP → Omega Booster (2600)

OPTION + LEFT → 7800 Proline

OPTION + DOWN → 7800 Joy2B+

OPTION + RIGHT → PetscII mode

## BUTTON ACTION: PETSCII MODE

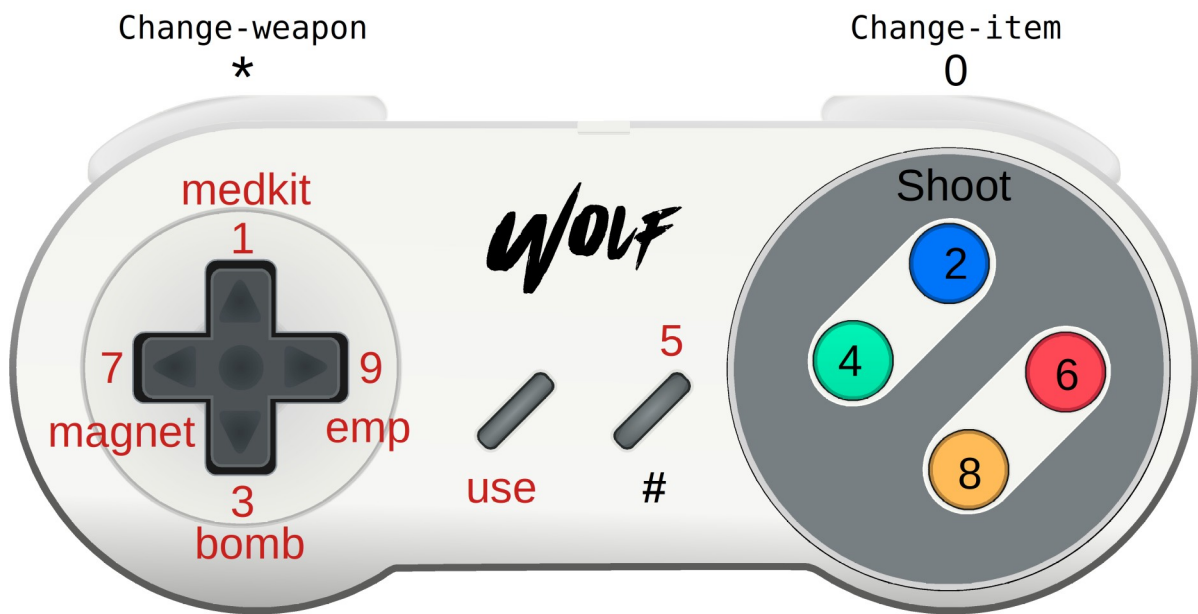

# SNES Controller

## OTHER MODES



## TRIGGER ACTION

MODE	A	B	X	Y	L	R
2600 Omega Booster	Fire	Fire	Thumb (hi)	Thumb (hi)	Trigger (hi)	Trigger (hi)
7800 Proline	Buttons 1+2	Buttons 1+2	Button1 (hi)	Button1 (hi)	Button2 (hi)	Button2 (hi)
7800 Joy2B+	Fire (low)	Fire (low)	Button1 (low)	Button1 (low)	Button2 (low)	Button2 (low)

# SNES Controller

## BUTTON ACTION: OTHER MODES



## ALTERNATE FUNCTION



# SNES NTT KEYPAD CONTROLLER

## BUTTON ACTION: PETSCII MODE



Move

Keypad Functions

Shoot

X: no action

## BUTTON ACTION: OTHER MODES



Move

Keypad Functions

Triggers

X: no action

Trigger Action like SNES regular controller