

# Atari Jaguar Controller

== AT POWER UP ==

- OPTION + UP → 0mega Booster (2600)
- OPTION + LEFT → 7800 Proline
- OPTION + DOWN → 7800 Joy2B+

## TRIGGER ACTION



MODE	C	B	A
2600 Omega Booster	Thumb (hi)	Trigger (hi)	Fire (low)
7800 Proline	Button 1 (hi)	Button 2 (hi)	Buttons 1+2
7800 Joy2B+	Button 1 (low)	Button 2 (low)	Fire (low)

# SNES Controller – PETSCII mode

== AT POWER UP ==

OPTION + UP → Omega Booster (2600)

OPTION + LEFT → 7800 Proline

OPTION + DOWN → 7800 Joy2B+

OPTION + RIGHT → PetscII mode

## BUTTON ACTION



# SNES Controller – Game mode

## TRIGGER ACTION



MODE	A	B	X	Y	L	R
2600 Omega Booster	Fire	Fire	Thumb (hi)	Thumb (hi)	Trigger (hi)	Trigger (hi)
7800 Proline	Buttons 1+2	Buttons 1+2	Button1 (hi)	Button1 (hi)	Button2 (hi)	Button2 (hi)
7800 Joy2B+	Fire (low)	Fire (low)	Button1 (low)	Button1 (low)	Button2 (low)	Button2 (low)

## ALTERNATE FUNCTION

